




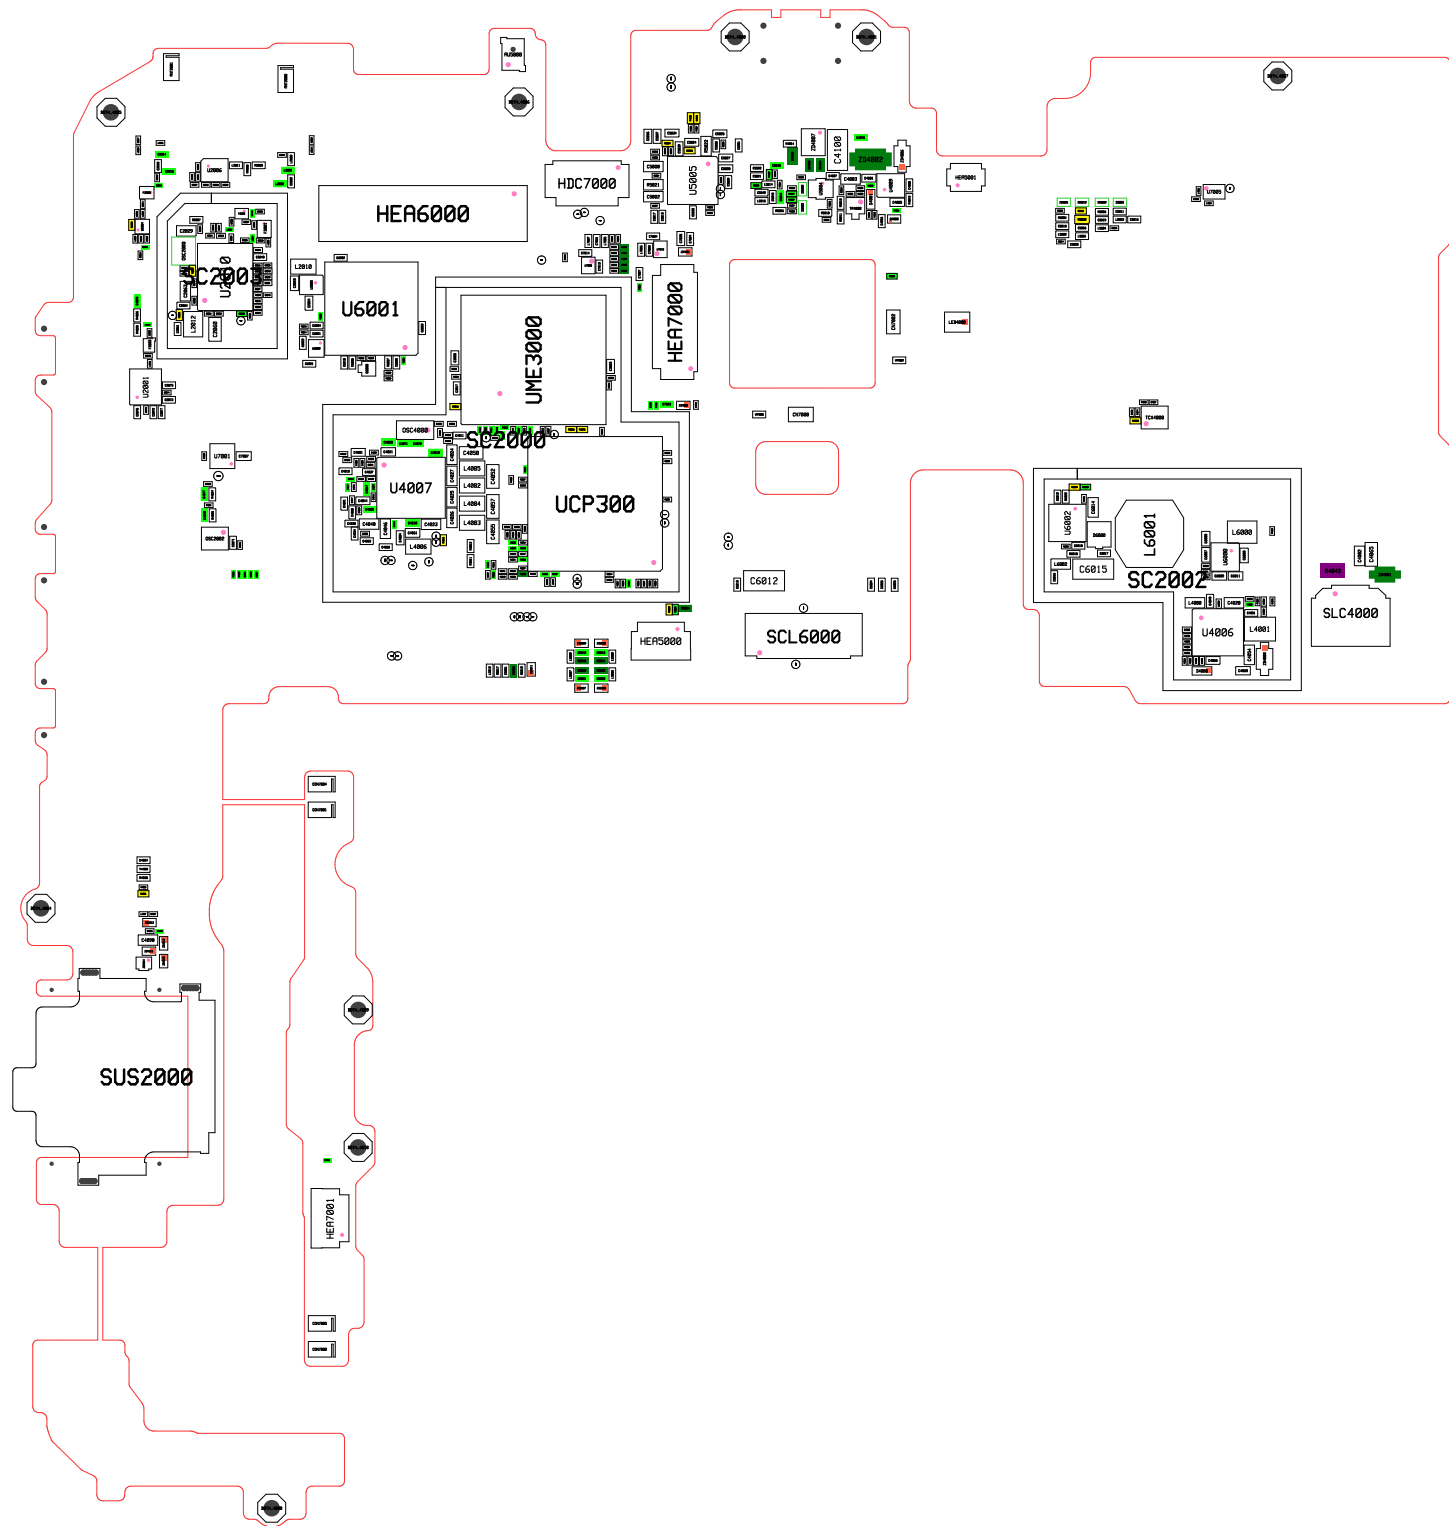


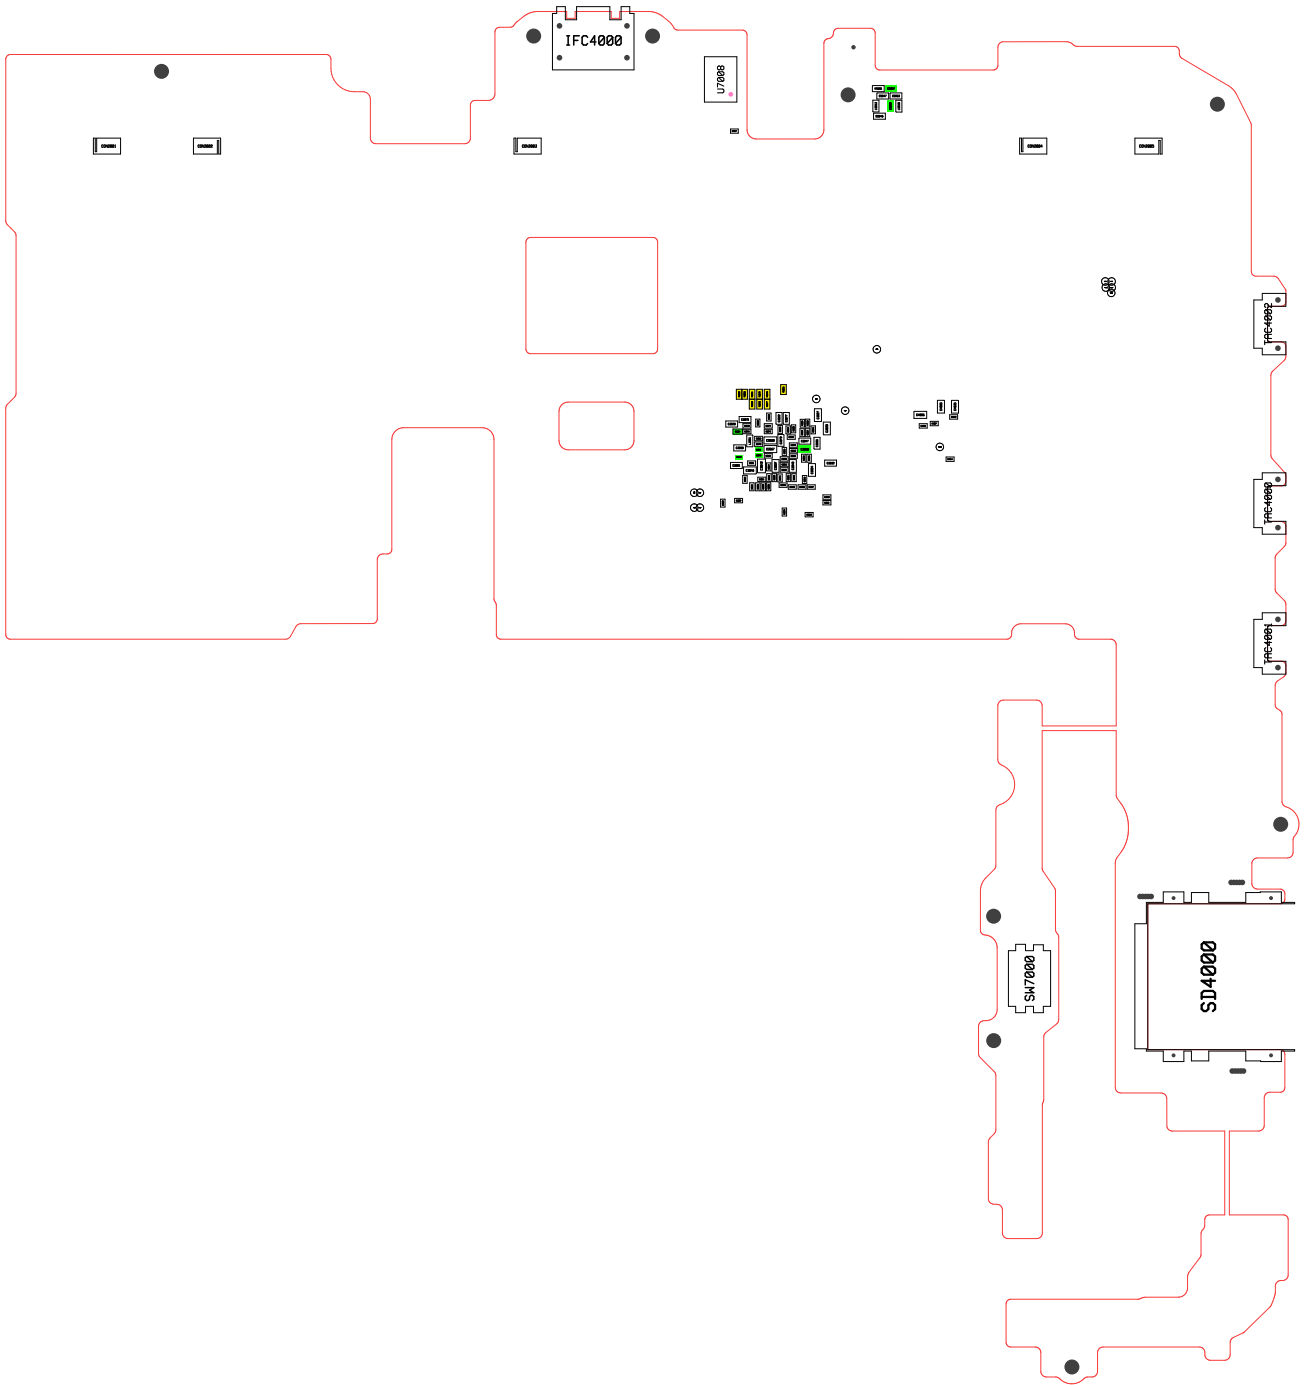


SM -T585 Block Diagram

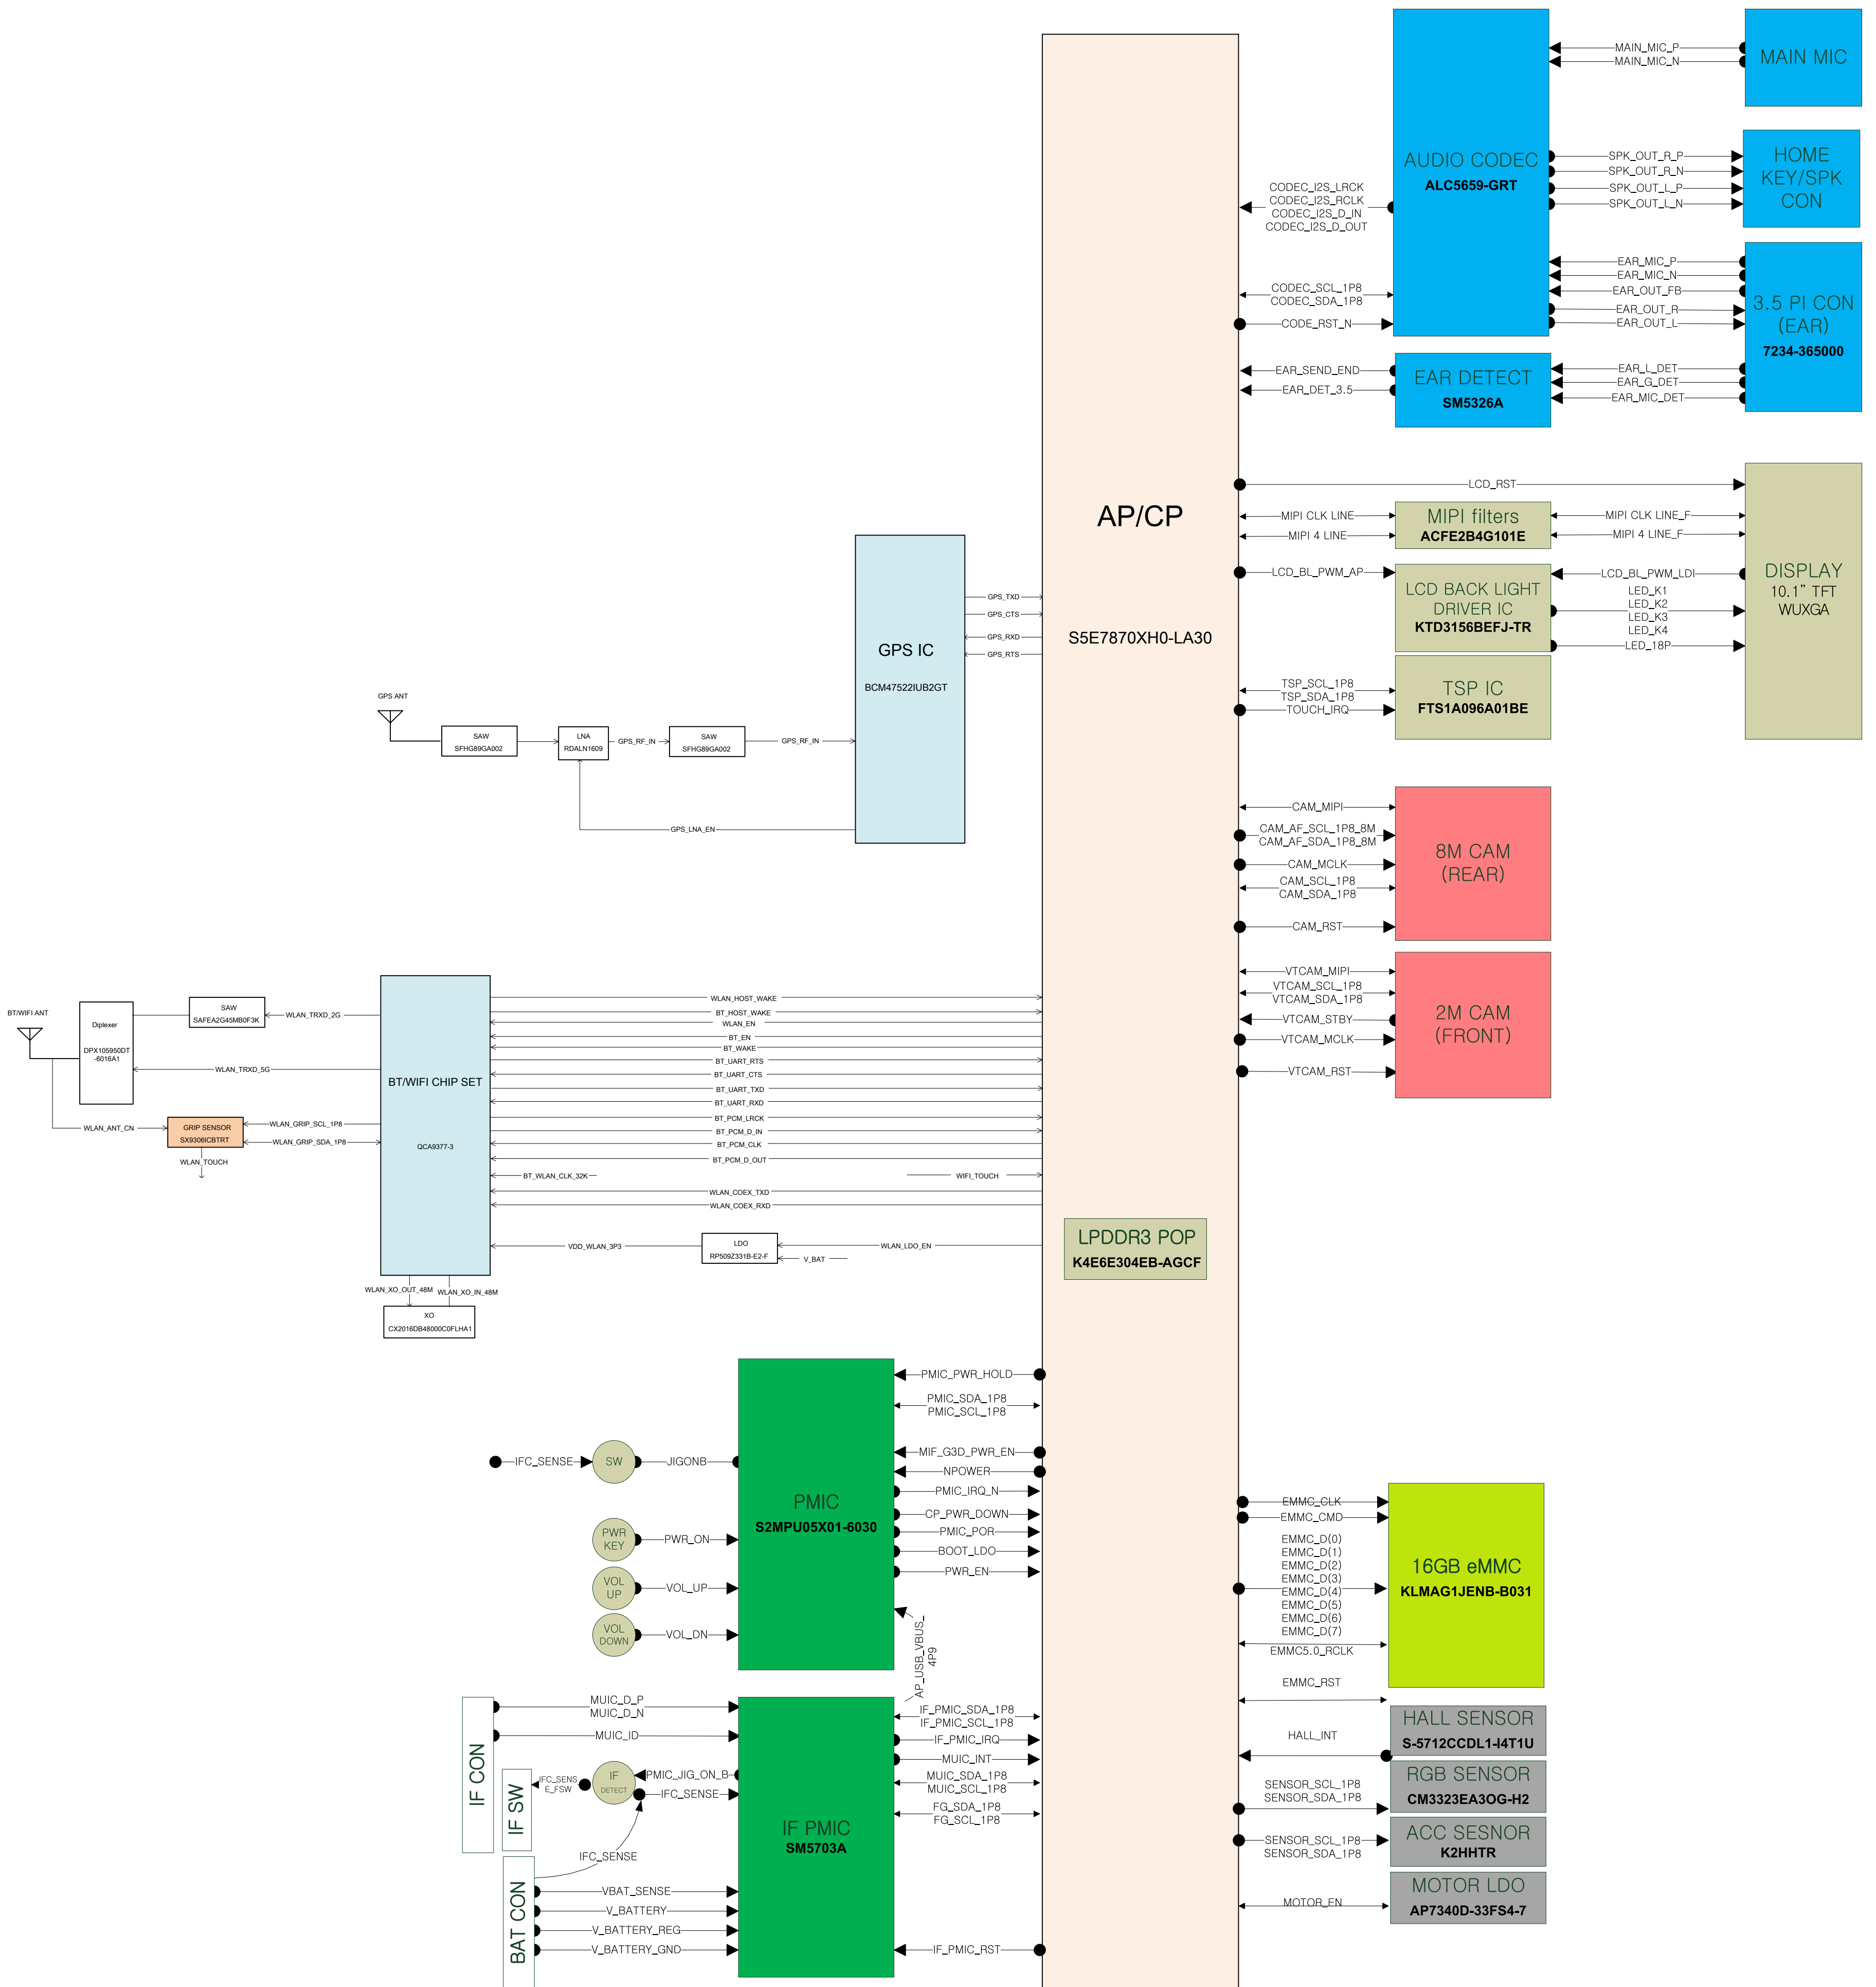

8. Level 3 Repair

8-3. Flow chart of Troubleshooting.

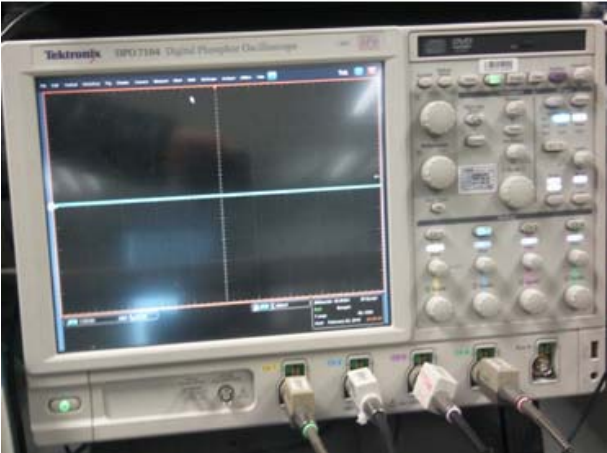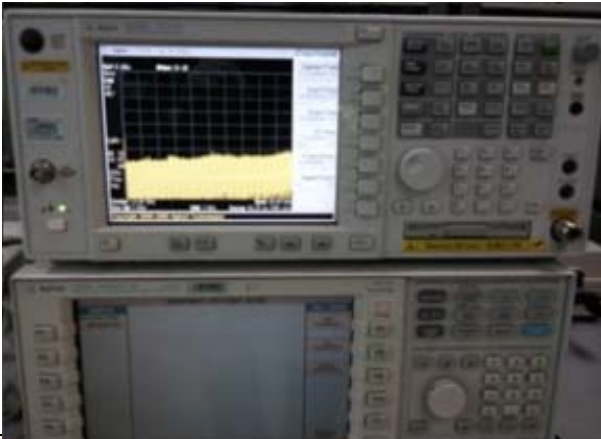
	
Oscilloscope	Digital Multimeter
	
Power Supply	+ driver, ESD Safe Tweezer
	
8960 & Spectrum Analyzer	Soldering iron

Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.


8. Level 3 Repair

8-4-1. POWER ON

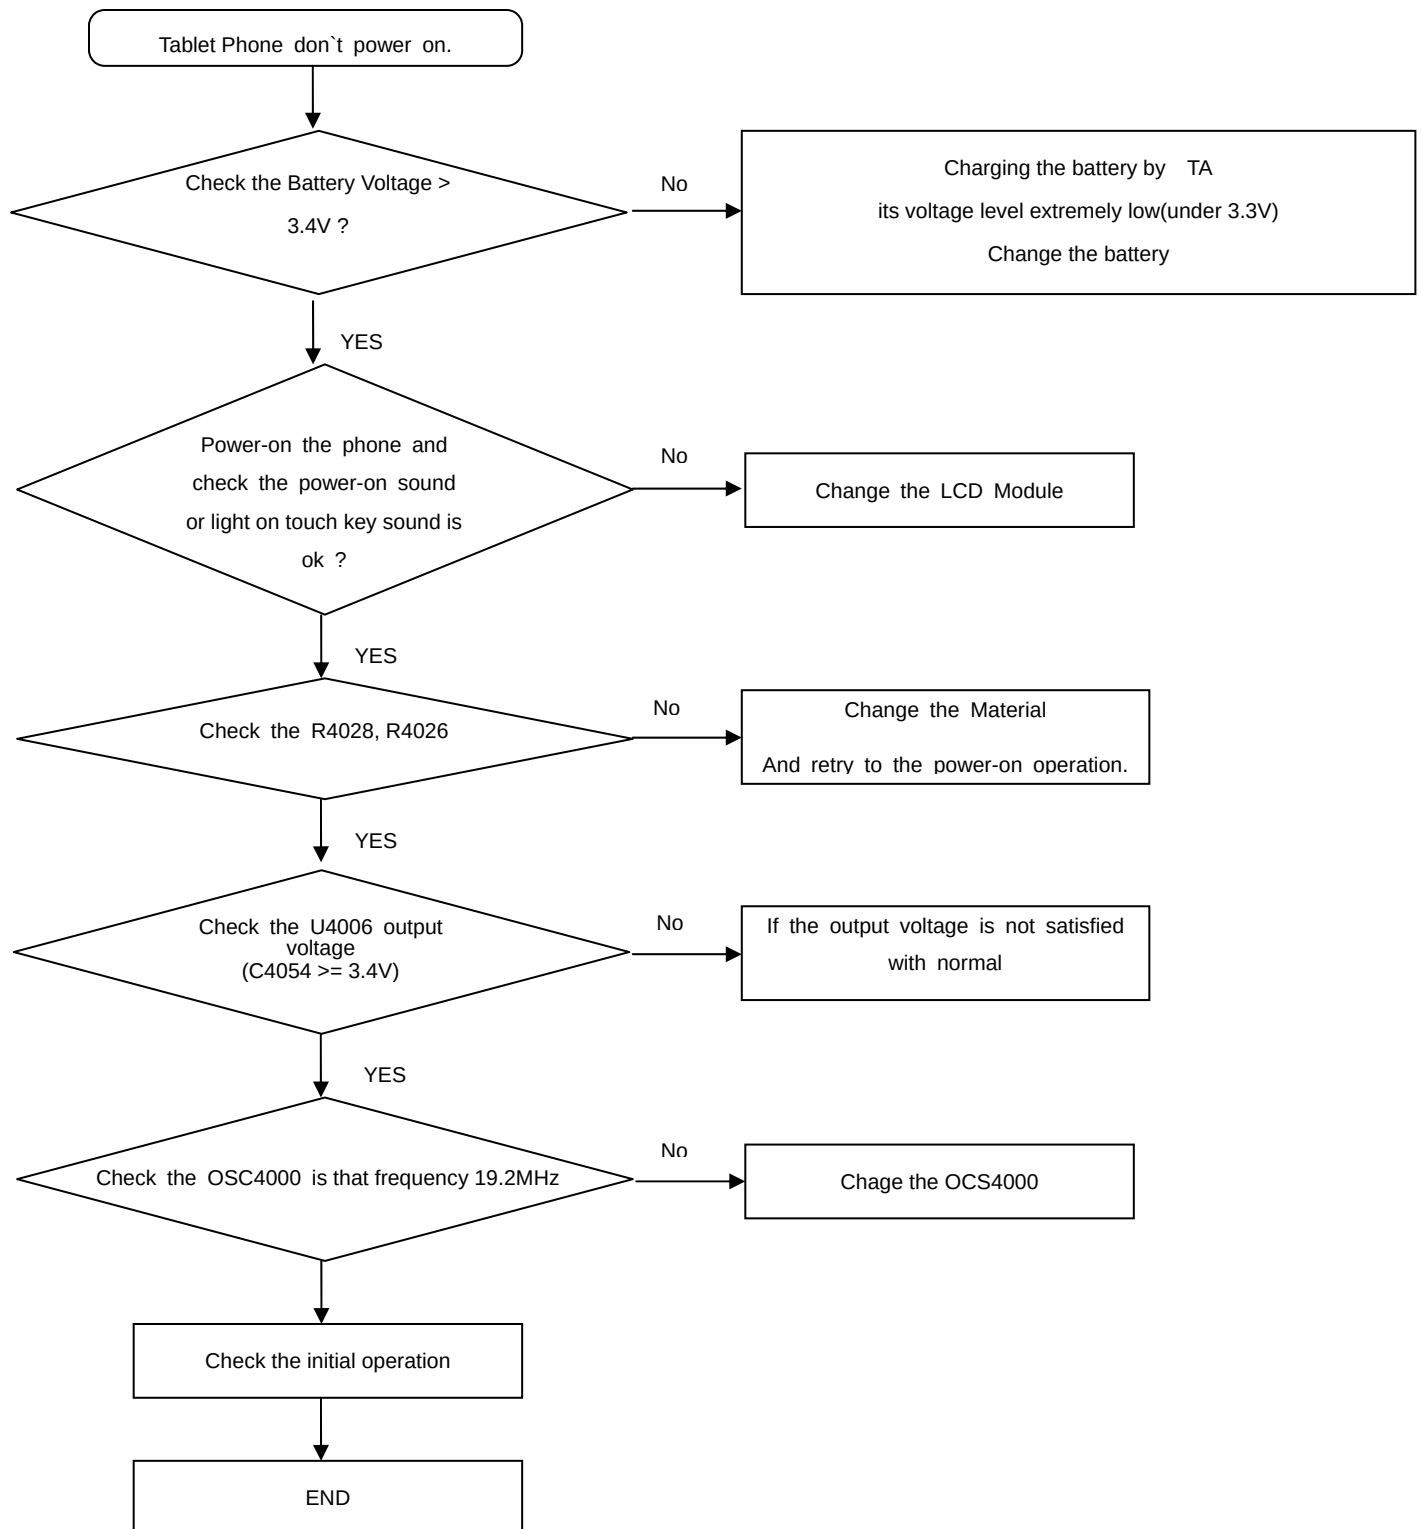


8. Level 3 Repair

8-4-2. INITIAL

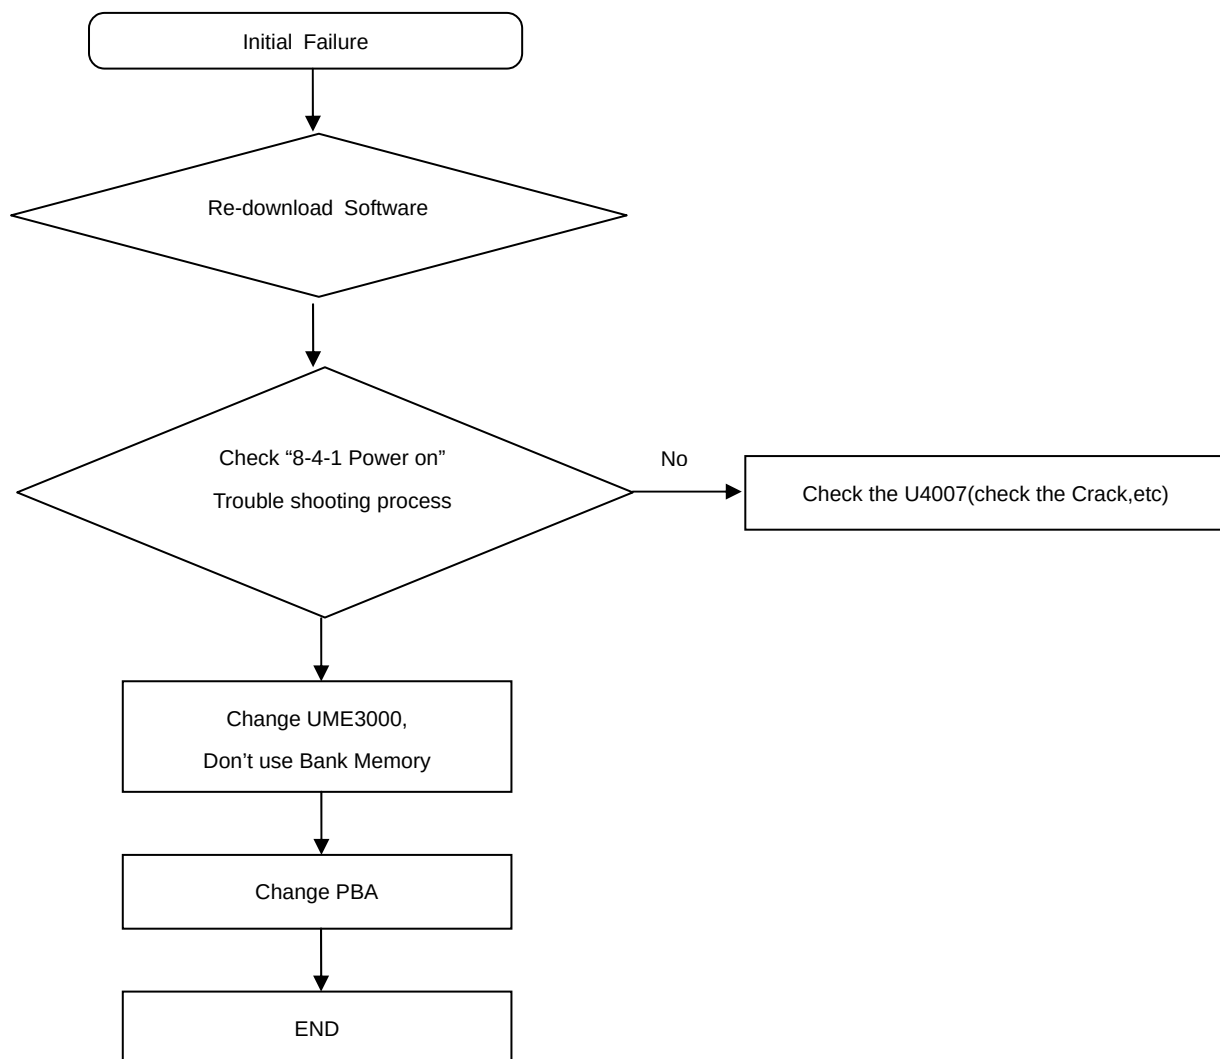


8. Level 3 Repair

8-4-3. SD PART

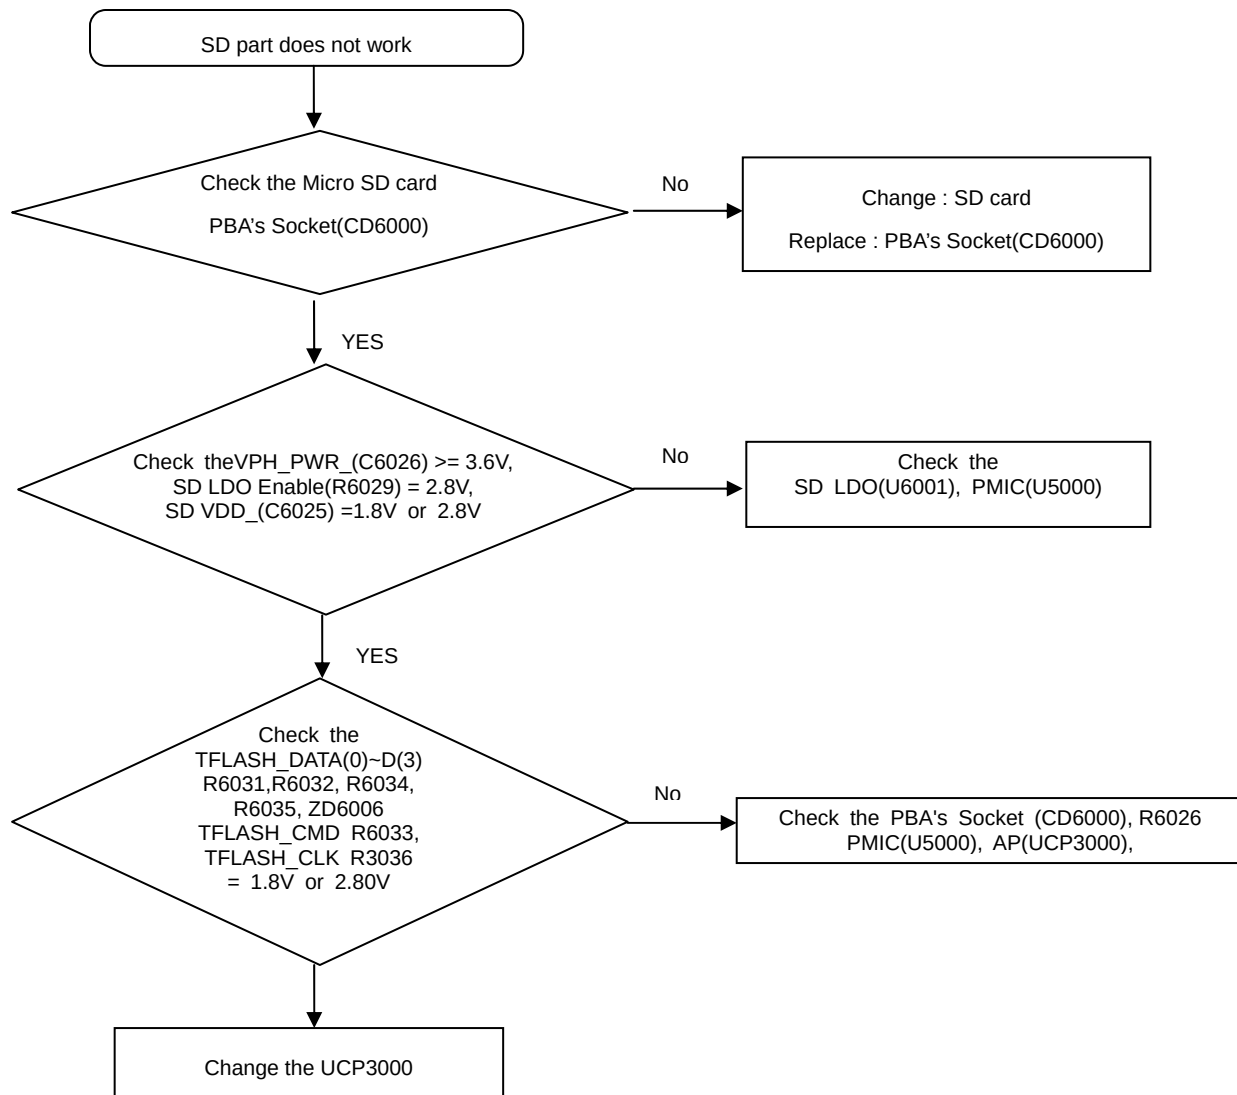


8. Level 3 Repair

8-4-4. SIM PART

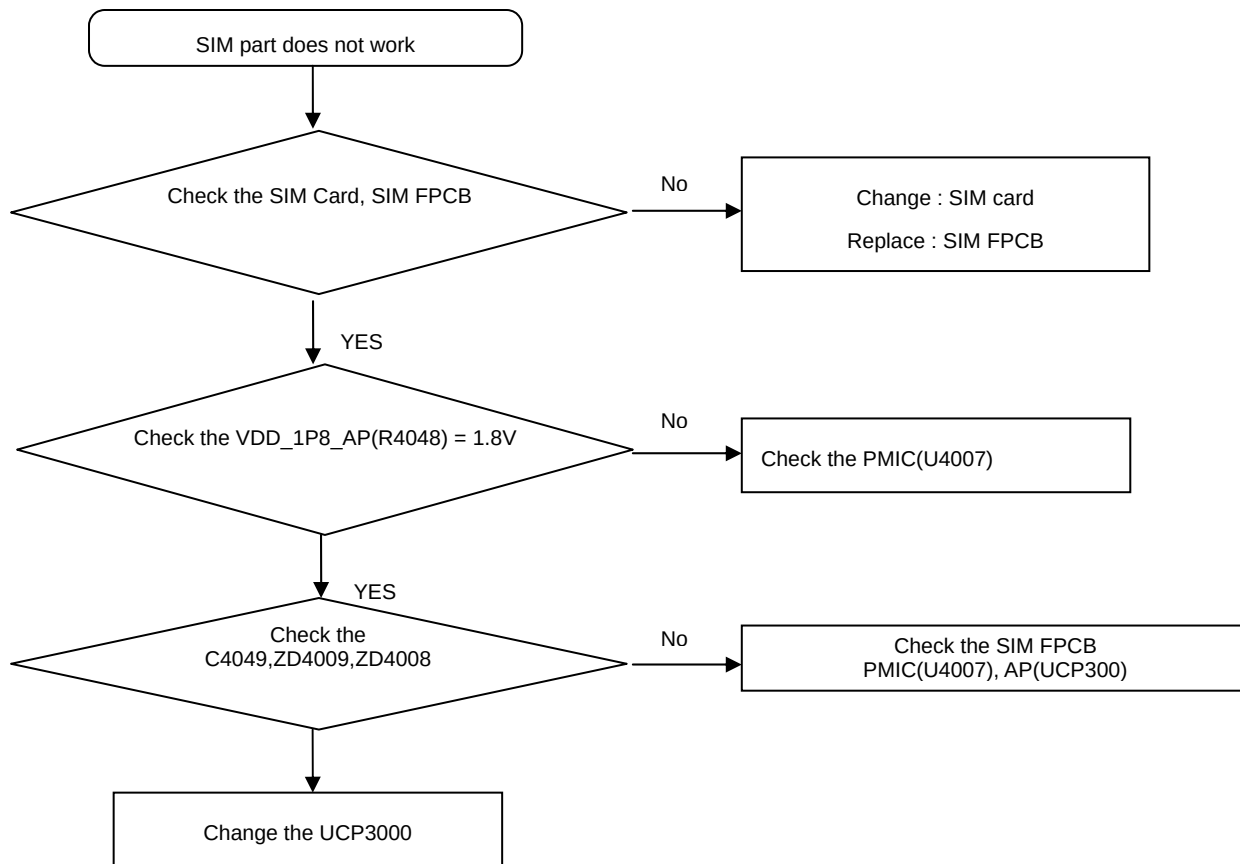


8. Level 3 Repair

8-4-5. ACC Sensor

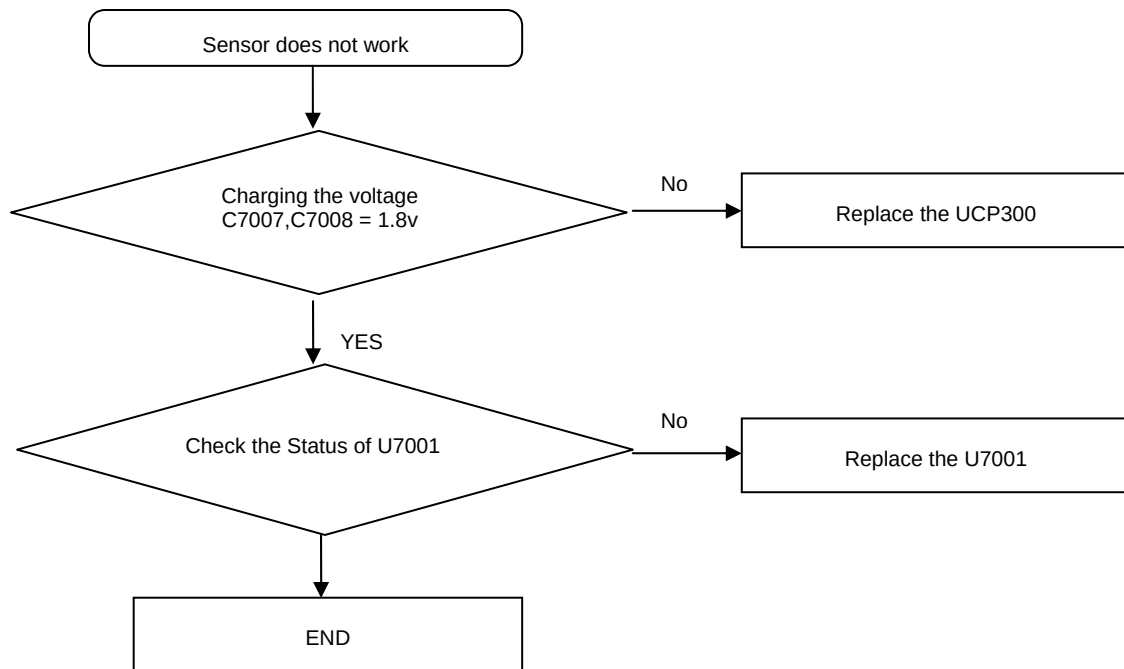


8. Level 3 Repair

8-4-6. RGB Sensor

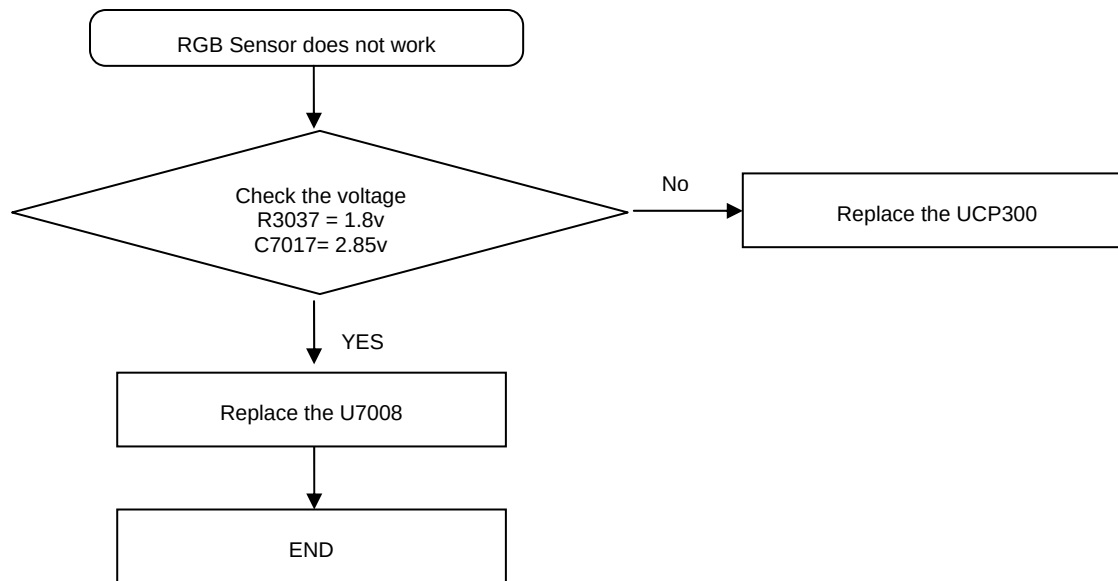


8. Level 3 Repair

8-4-7. OTG

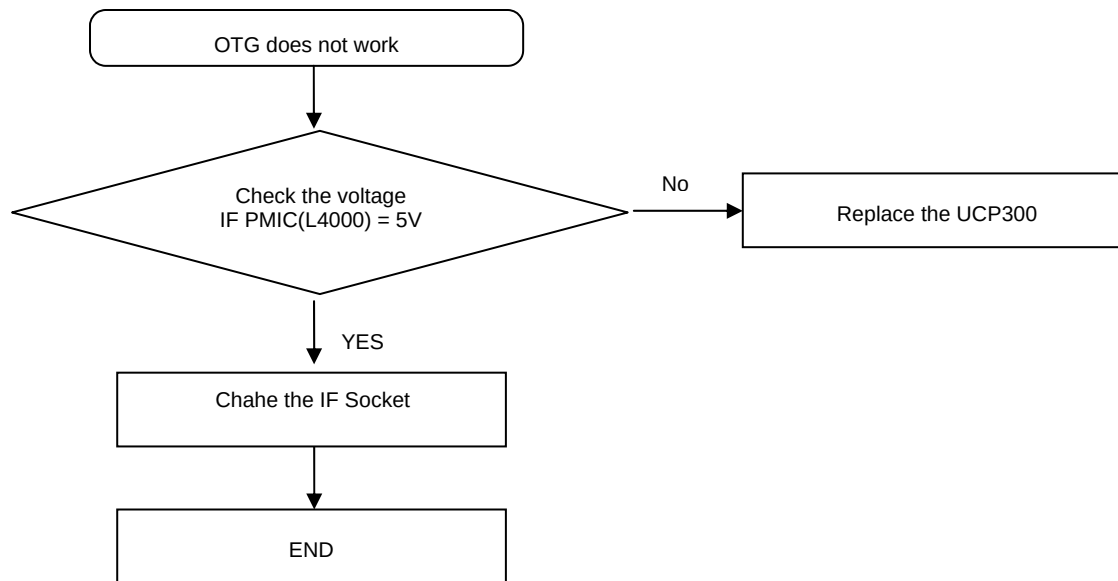


8. Level 3 Repair

8-4-8. Hall IC

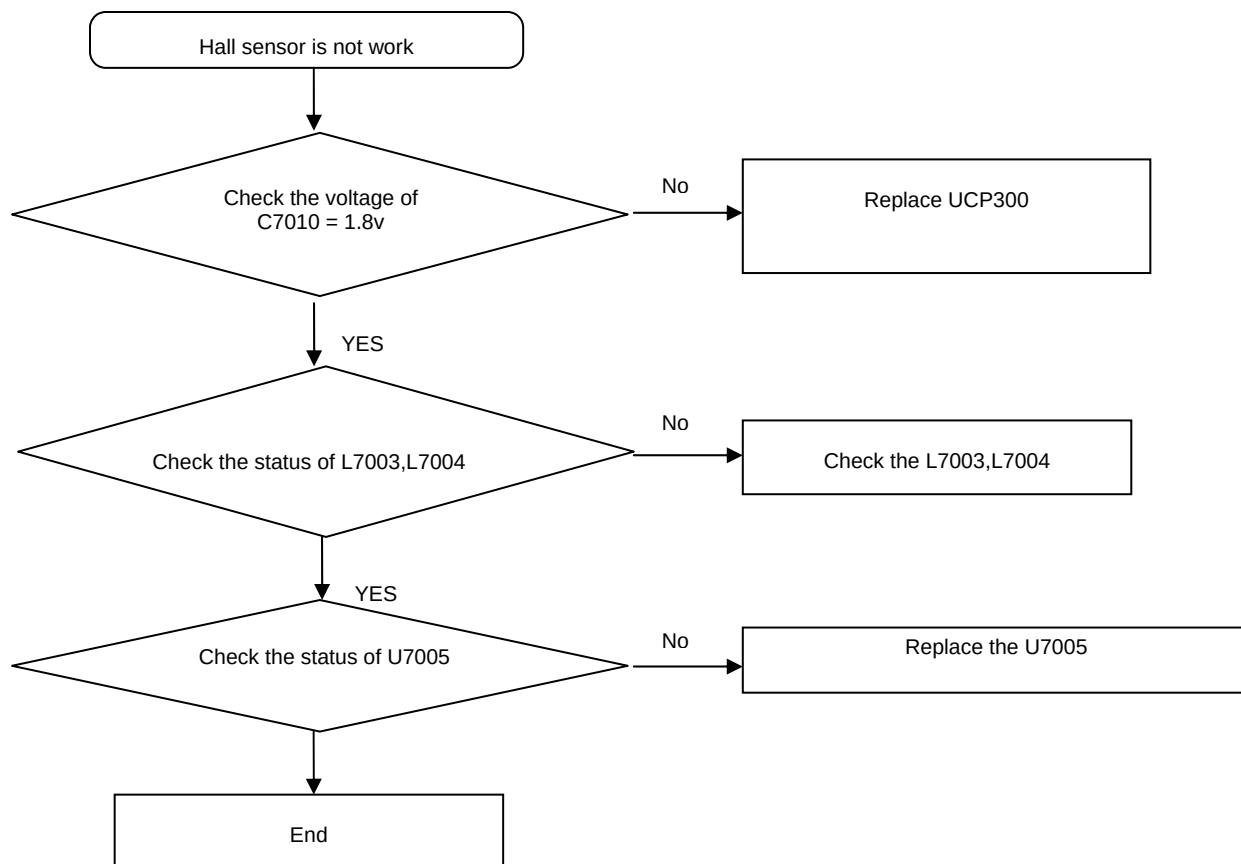


8. Level 3 Repair

8-4-9. Charging part

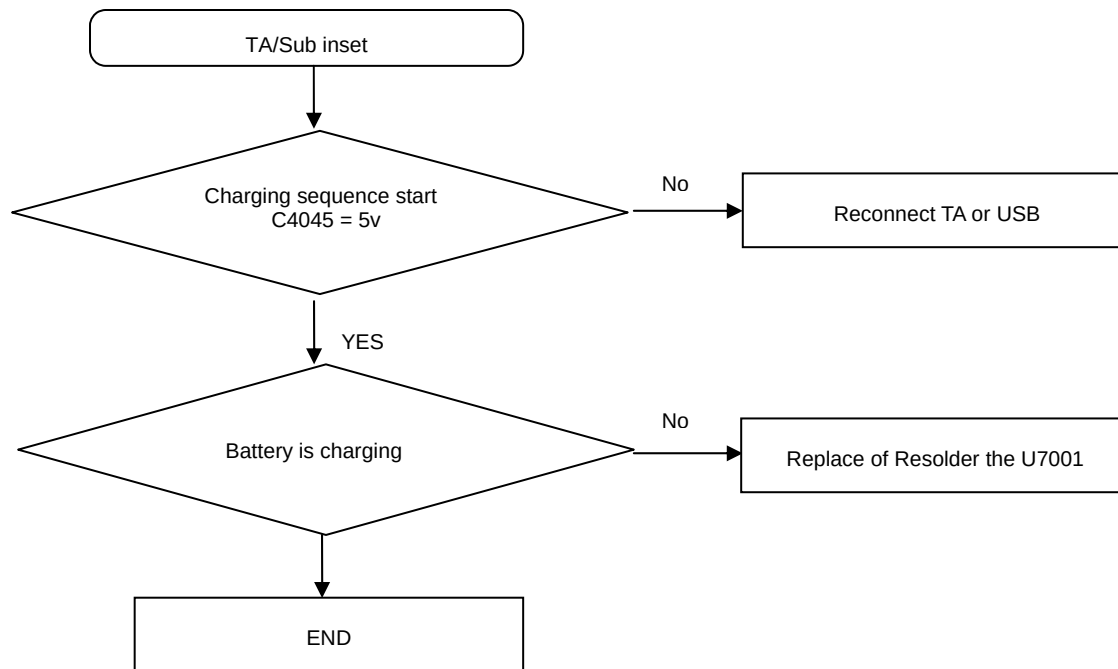


8. Level 3 Repair

8-4-10. Microphone Part - Main MIC

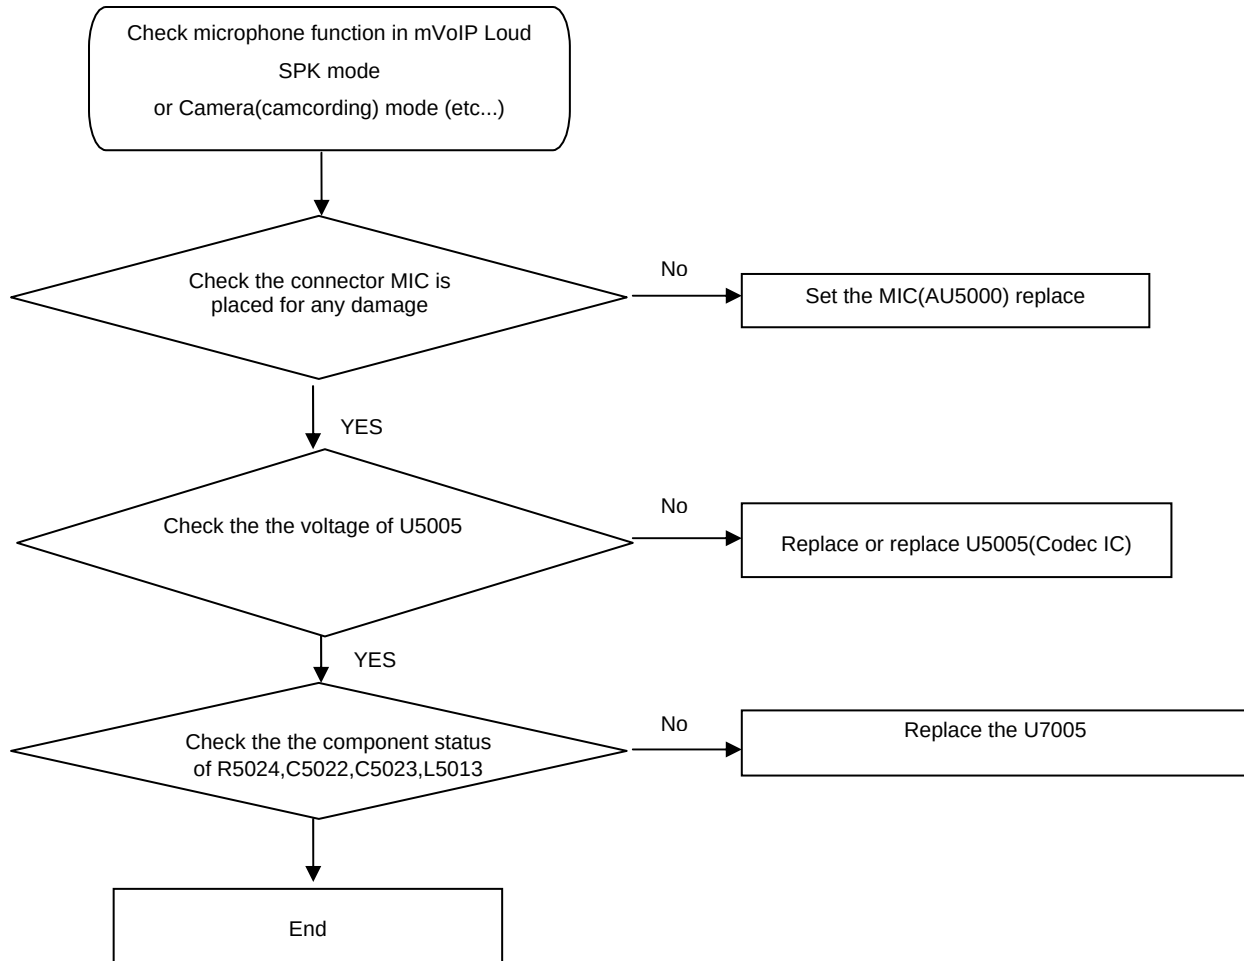


8. Level 3 Repair

8-4-11. Speaker R Part

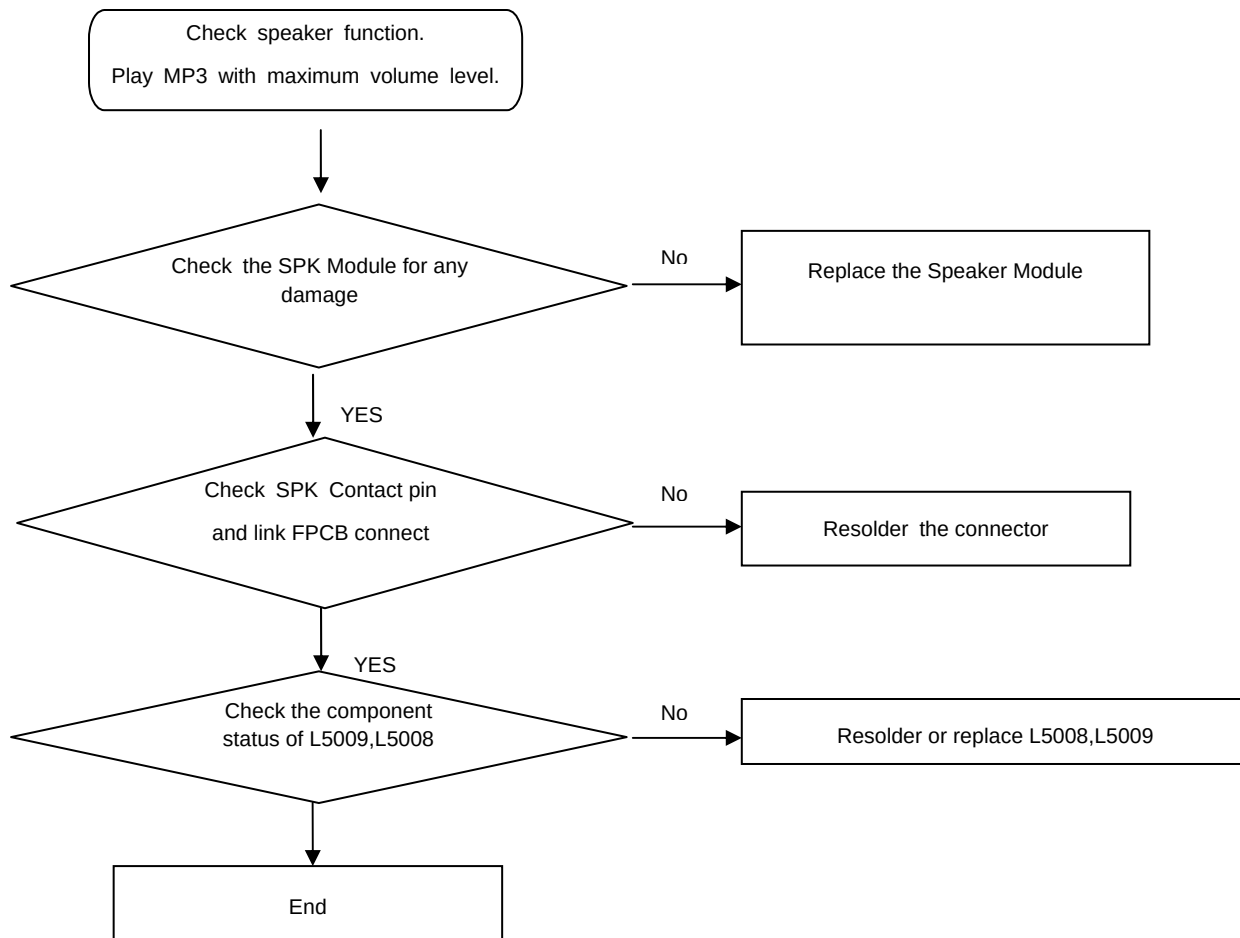


8. Level 3 Repair

8-4-11. Speaker L Part

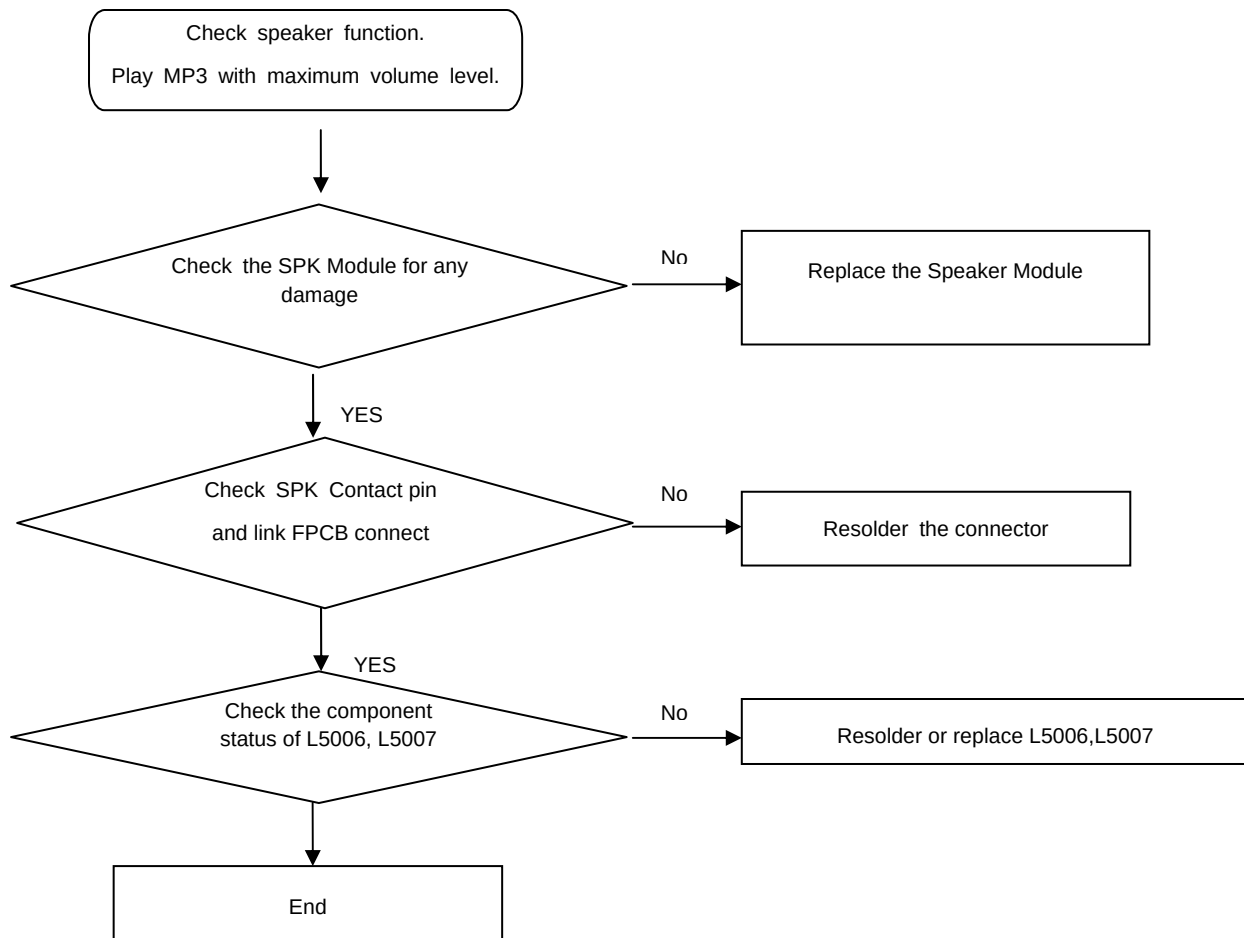


8. Level 3 Repair

8-4-13. Display

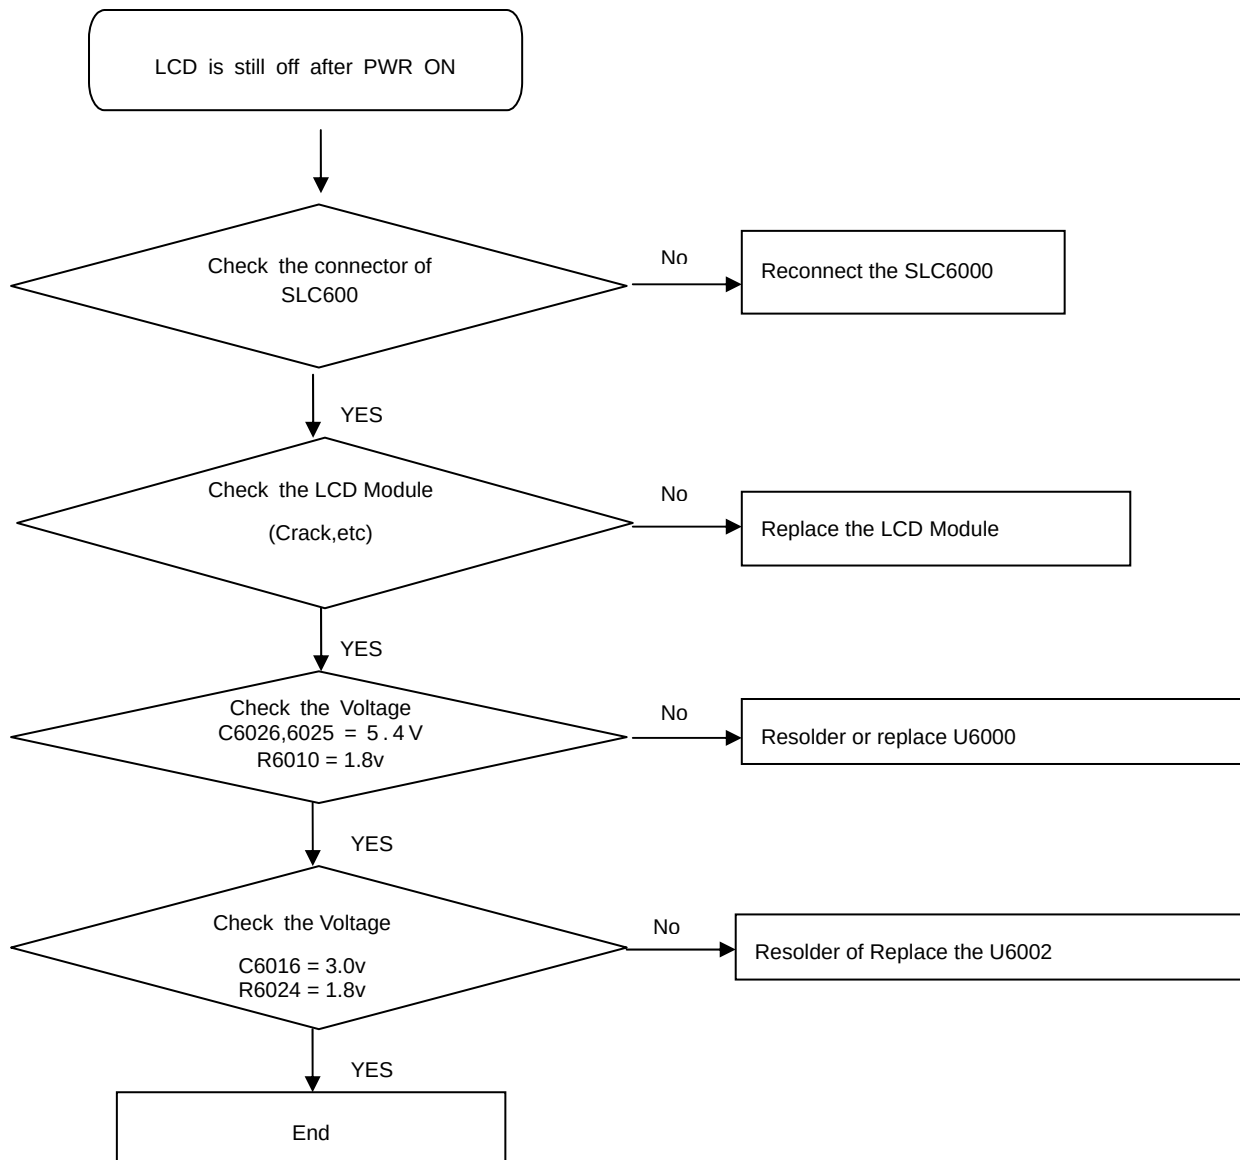


8. Level 3 Repair

8-4-14. TSP

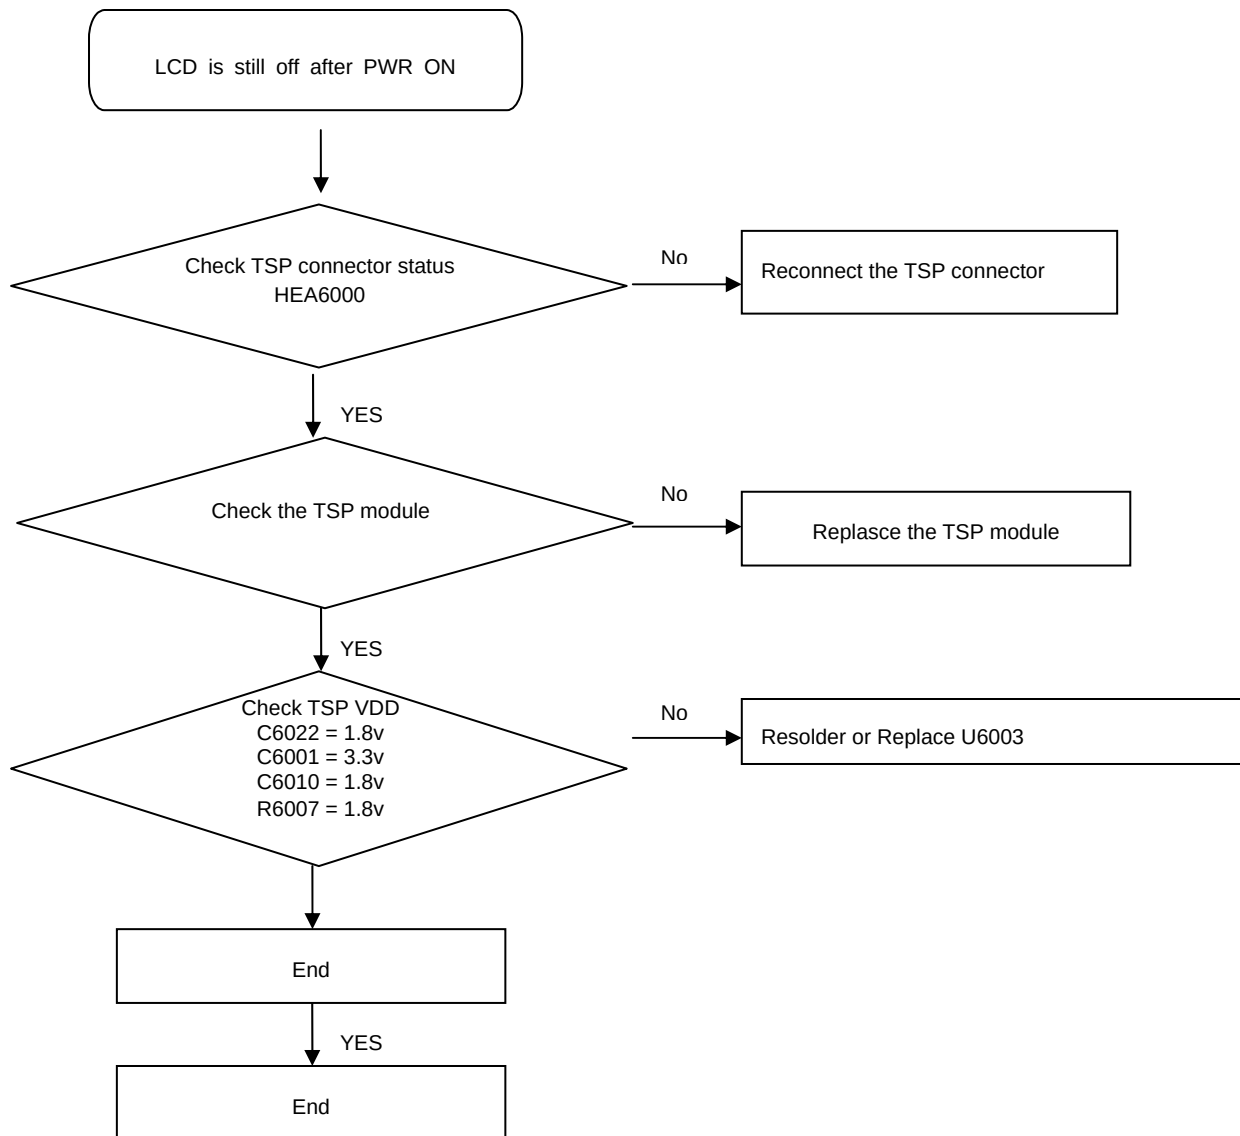


8. Level 3 Repair

8-4-15. 2M CAM

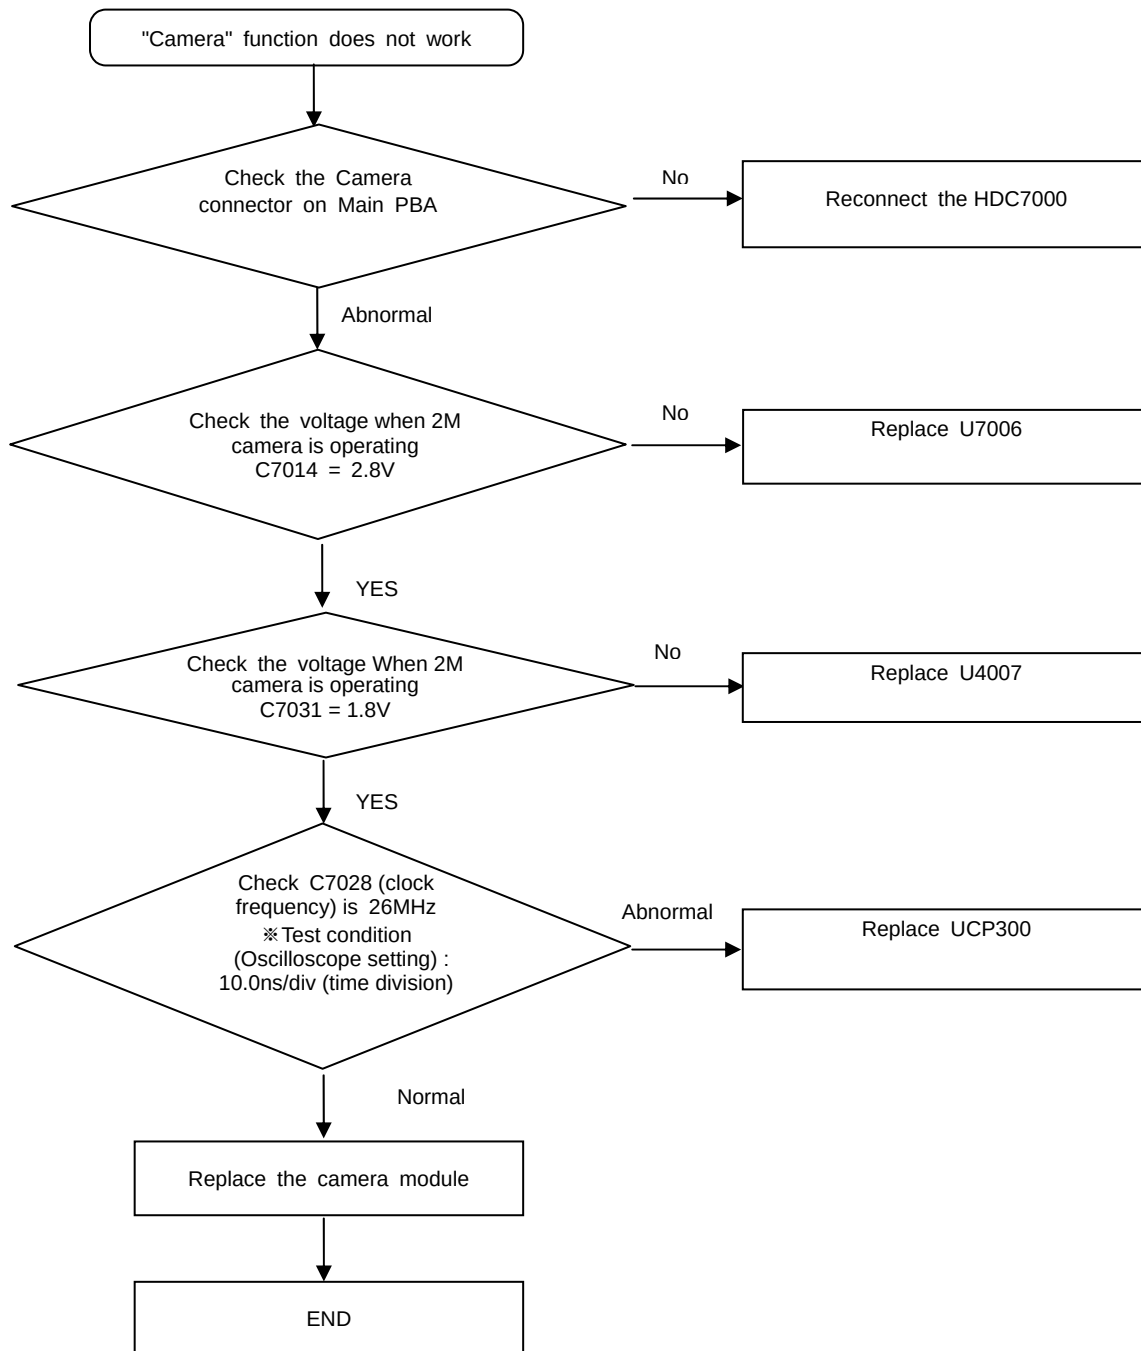


8. Level 3 Repair

8-4-16. 8 M CAM

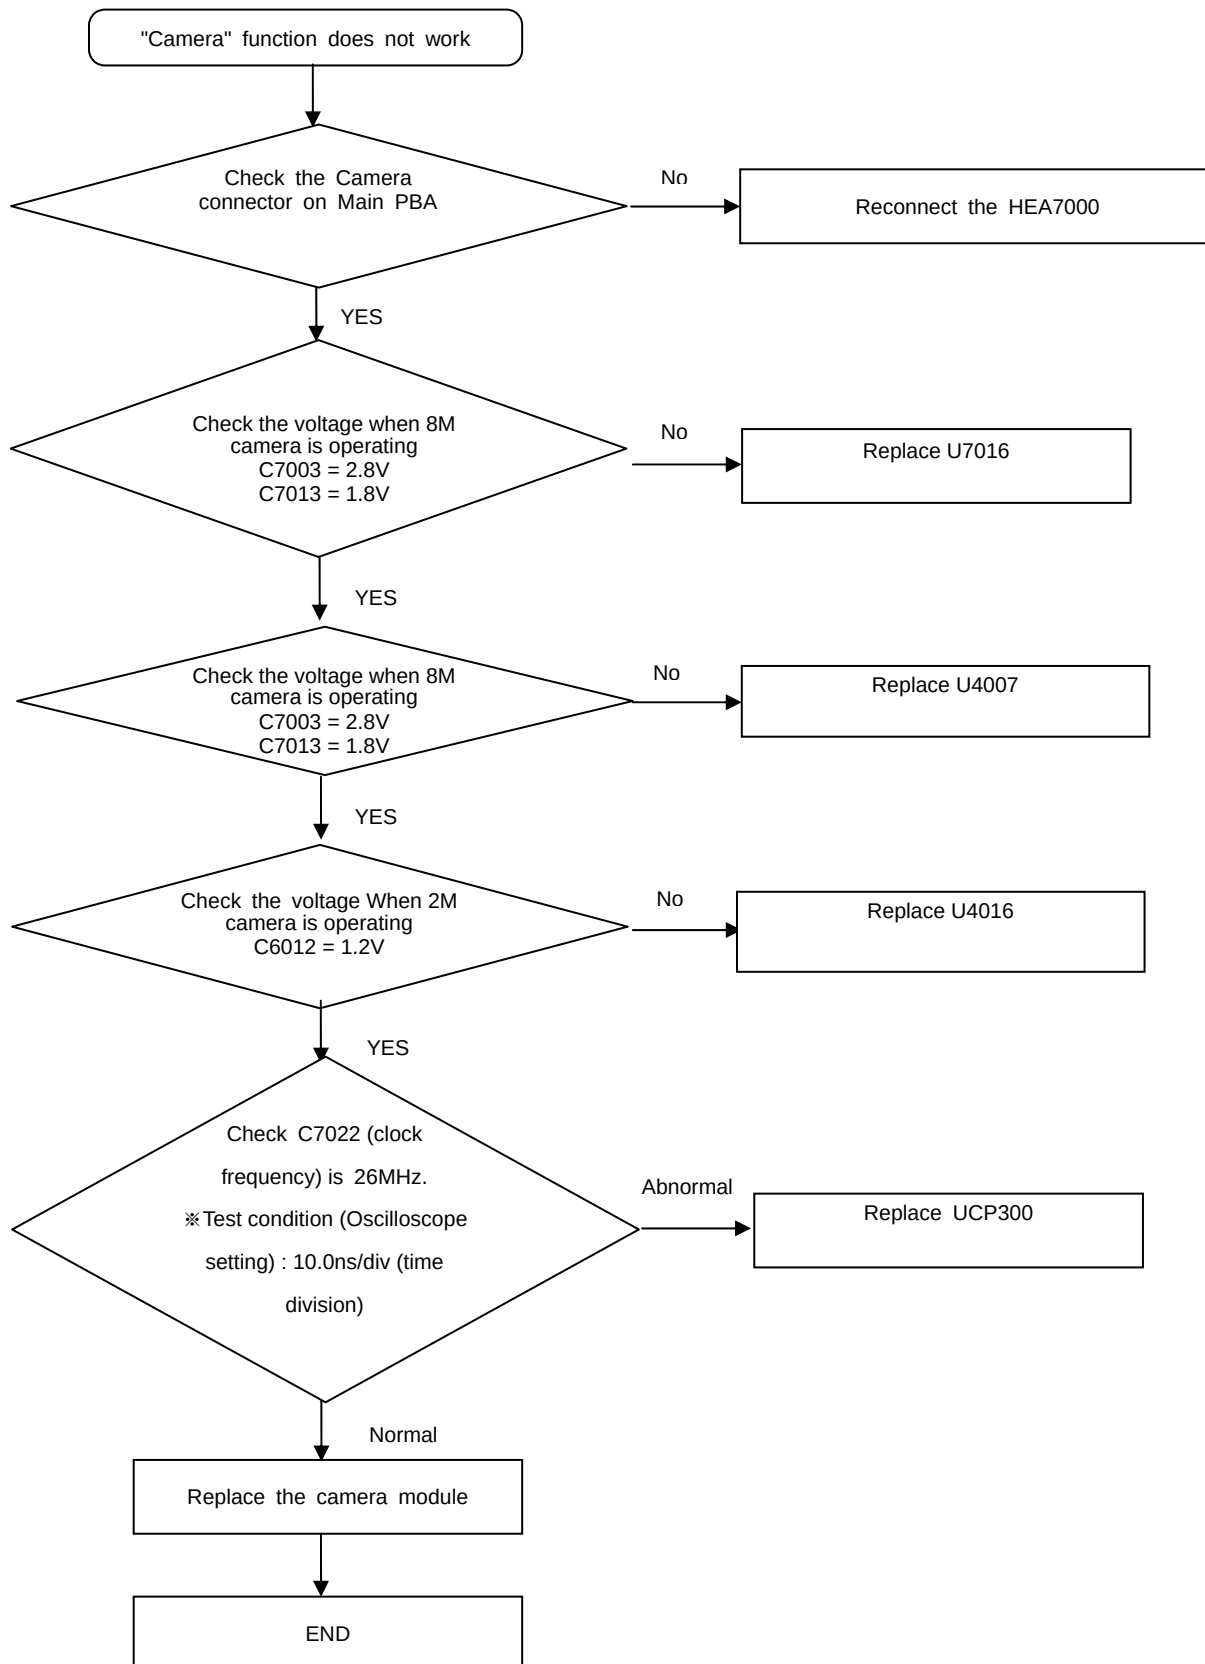


8. Level 3 Repair

8-4-17. BT part

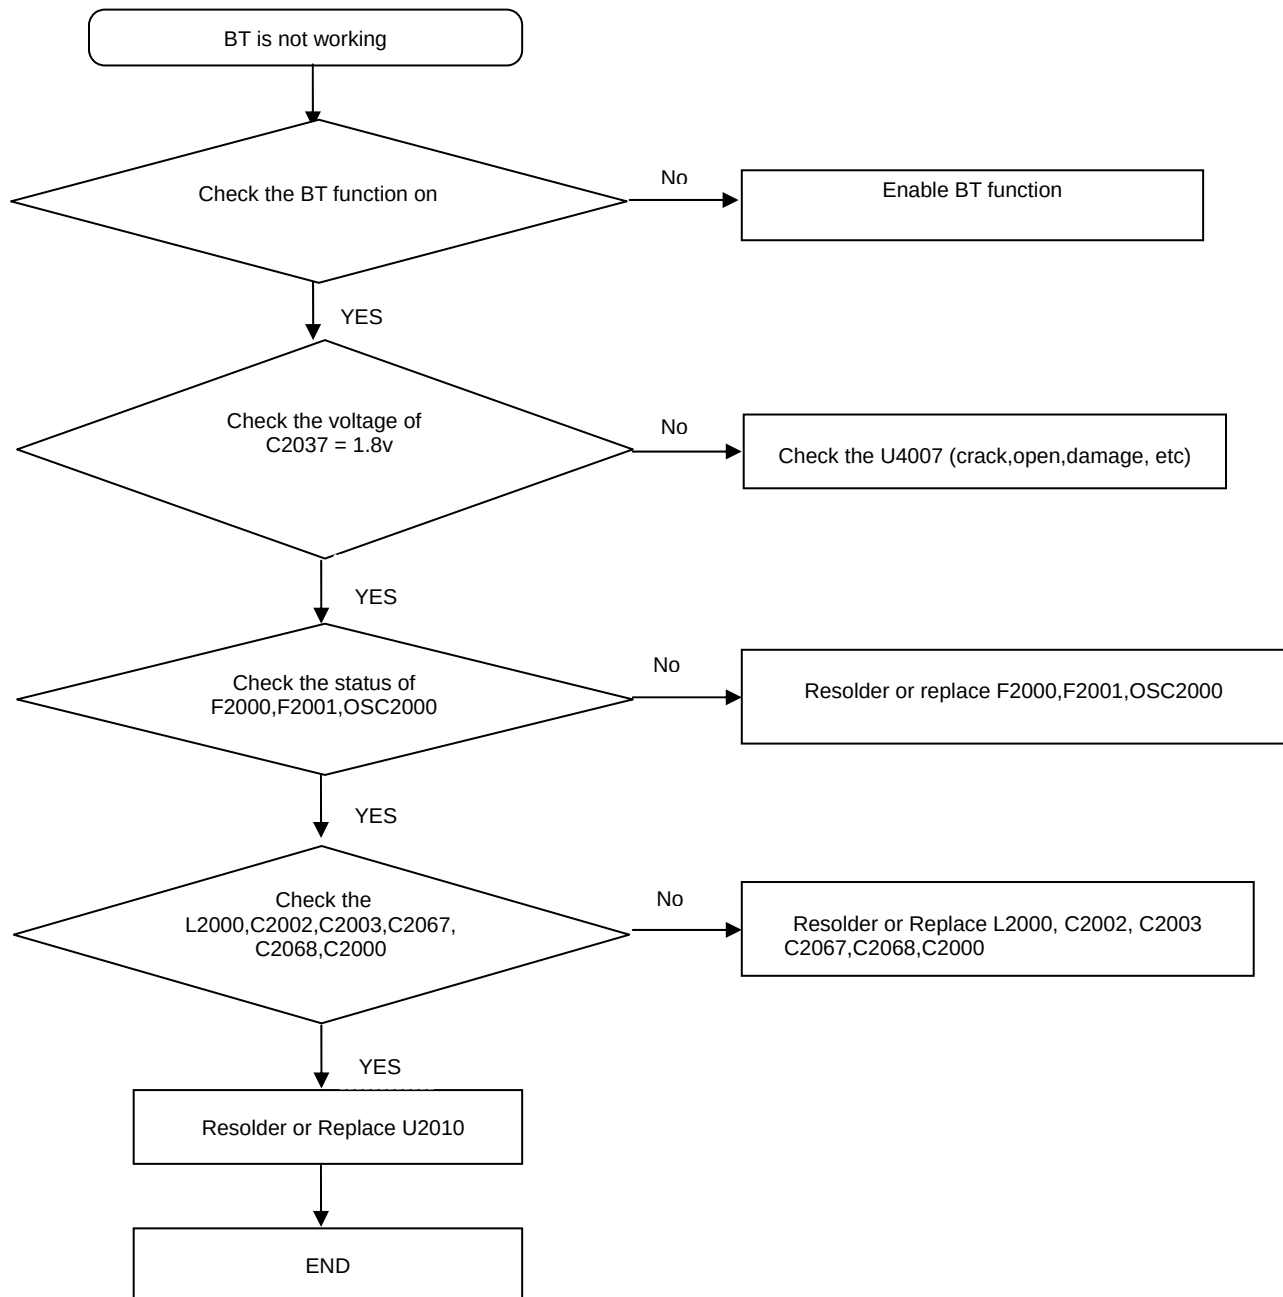

8. Level 3 Repair

8-4-18. WIFI part

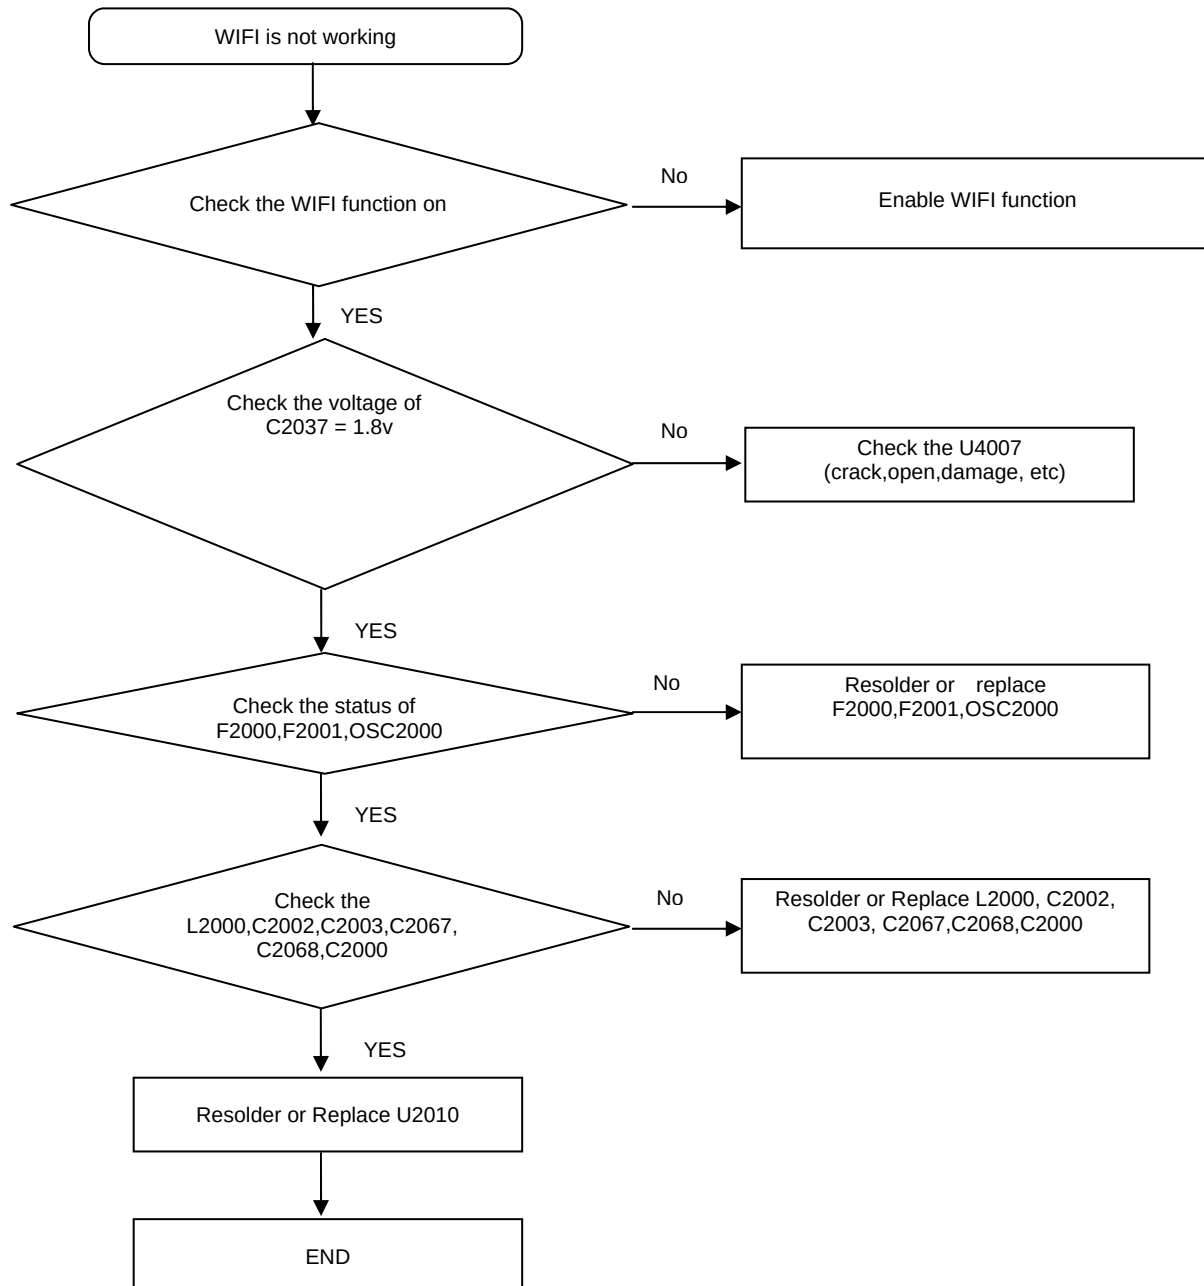

8. Level 3 Repair

8-4-19. GPS Part

