

8-2. Block Diagram

Main ANT

RF PART

AP/CP

SENSOR PART


POWER Part Audio Part

Confidential

Confidential

8. Level 3 Repair

8-3. Flow Chart of Troubleshooting

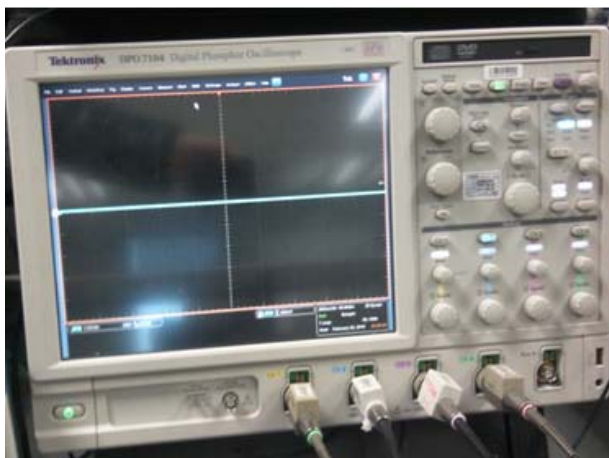

Oscilloscope




Digital Multimeter



Power Supply



+ driver, ESD Safe Tweezer

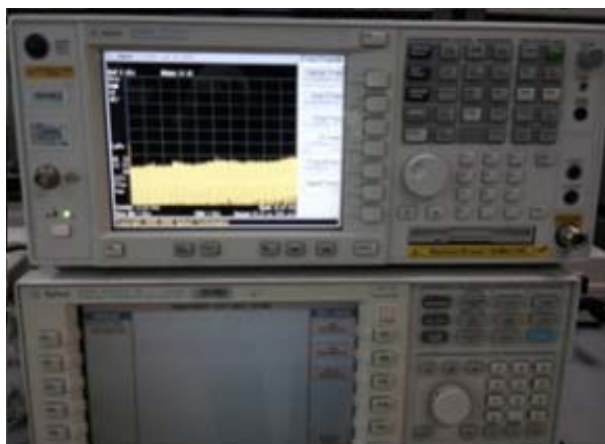


8960 & Spectrum Analyzer




Soldering iron

 TOP



8. Level 3 Repair

BOTTOM

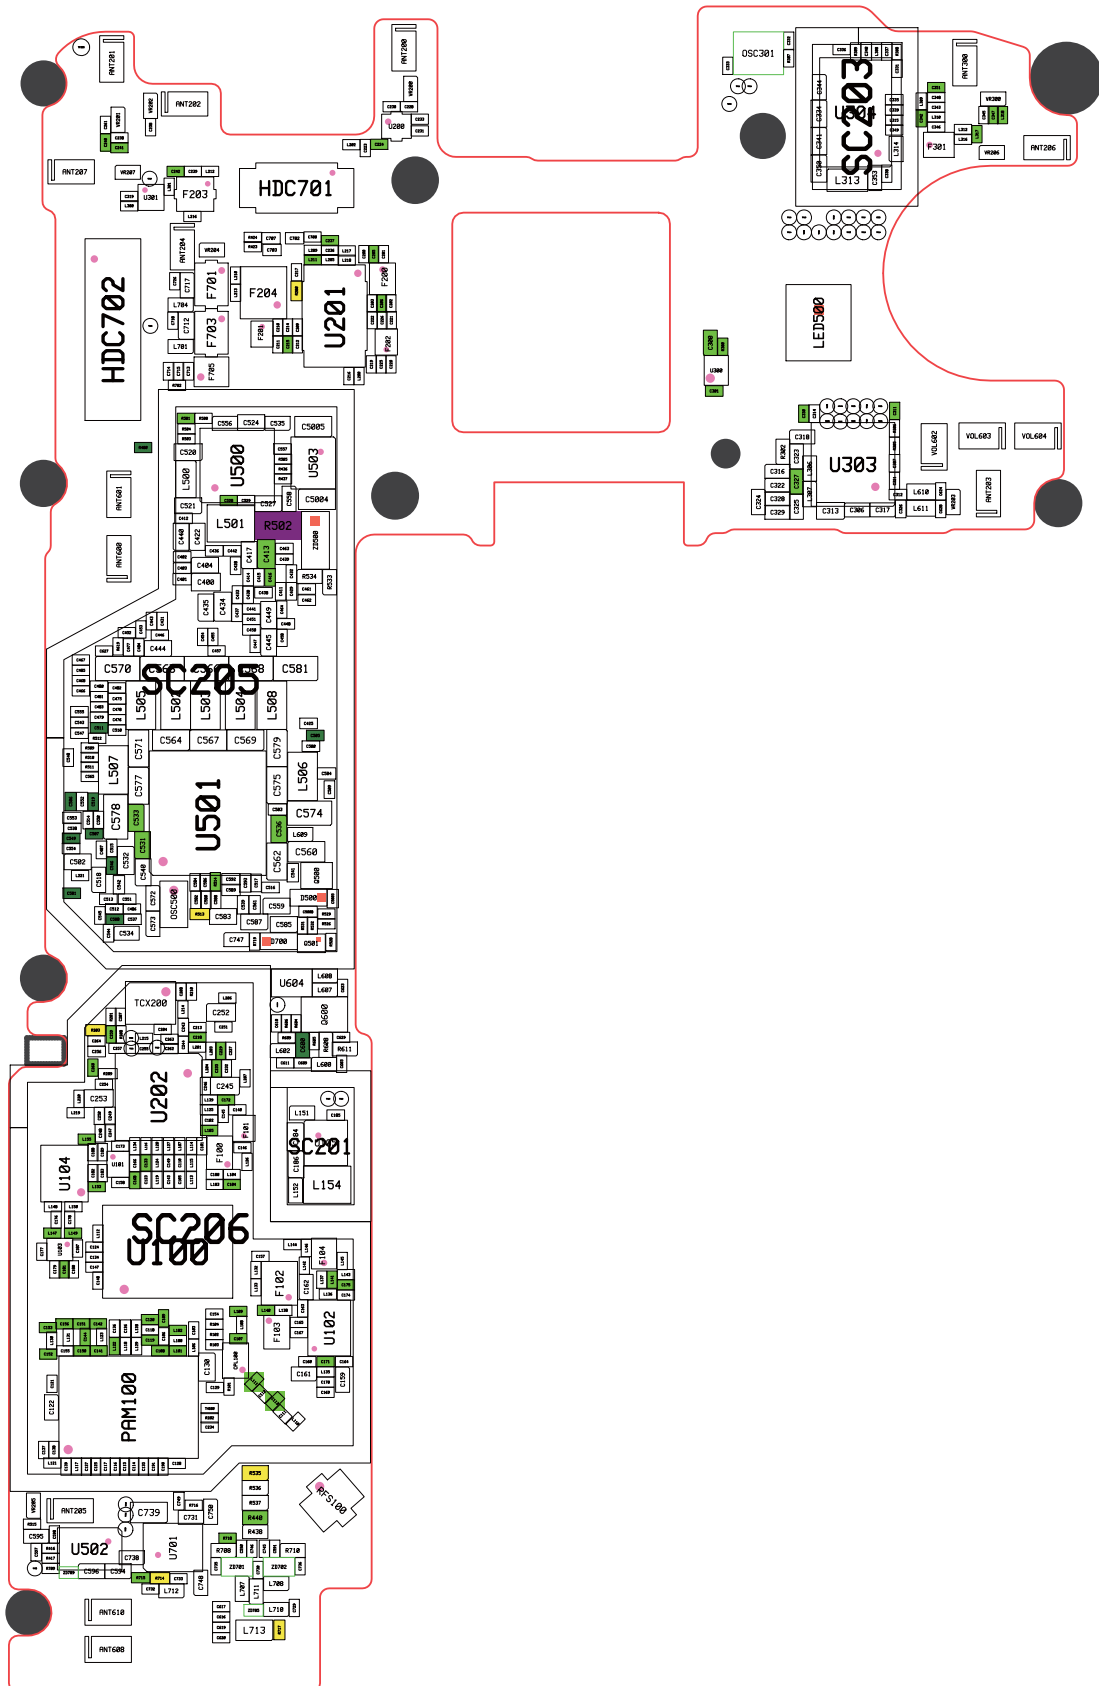


Confidential and proprietary-the contents in this service guide subject to change without prior notice

Distribution, transmission, or infringement of any content or data from this document without Samsung's written authorization is strictly prohibited.


8. Level 3 Repair

8-4. Power On

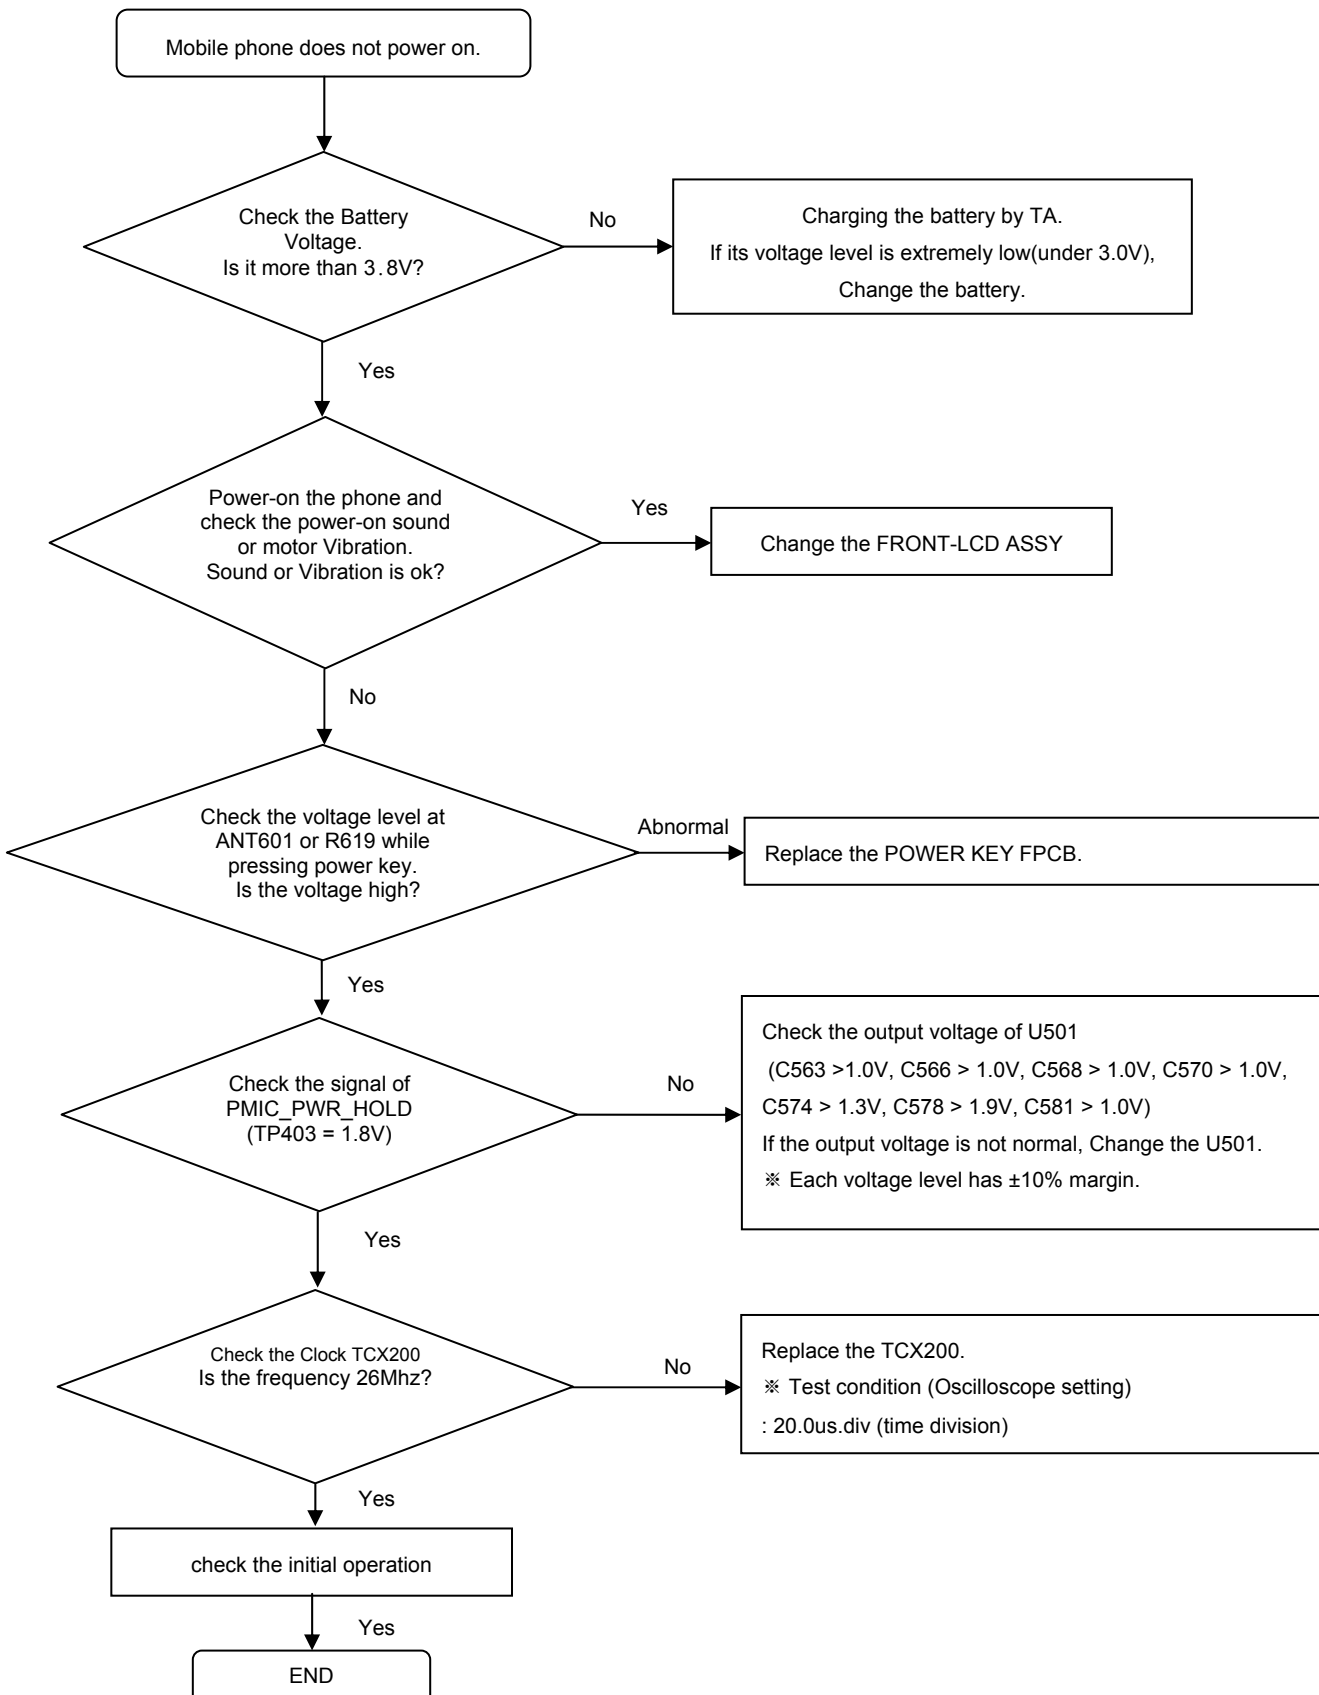


8. Level 3 Repair

8-4-2. Initial

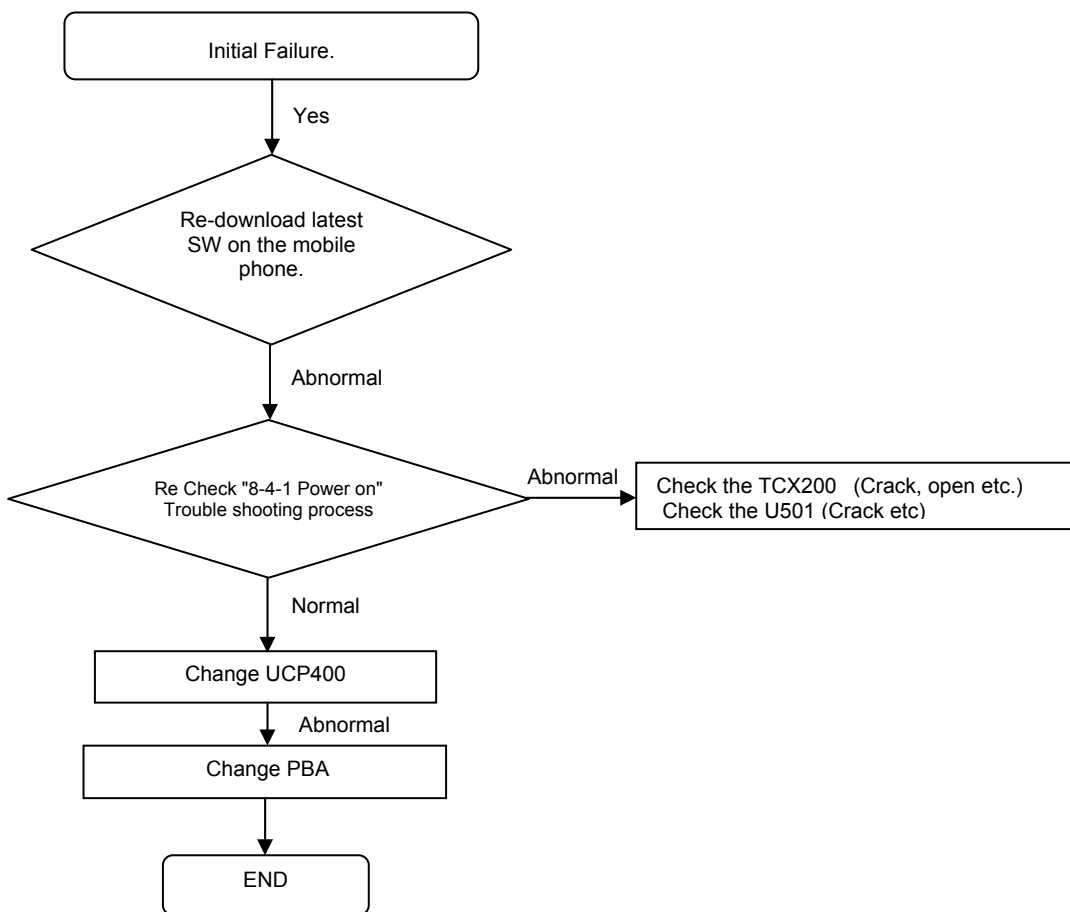


8. Level 3 Repair

8-4-3. No Service

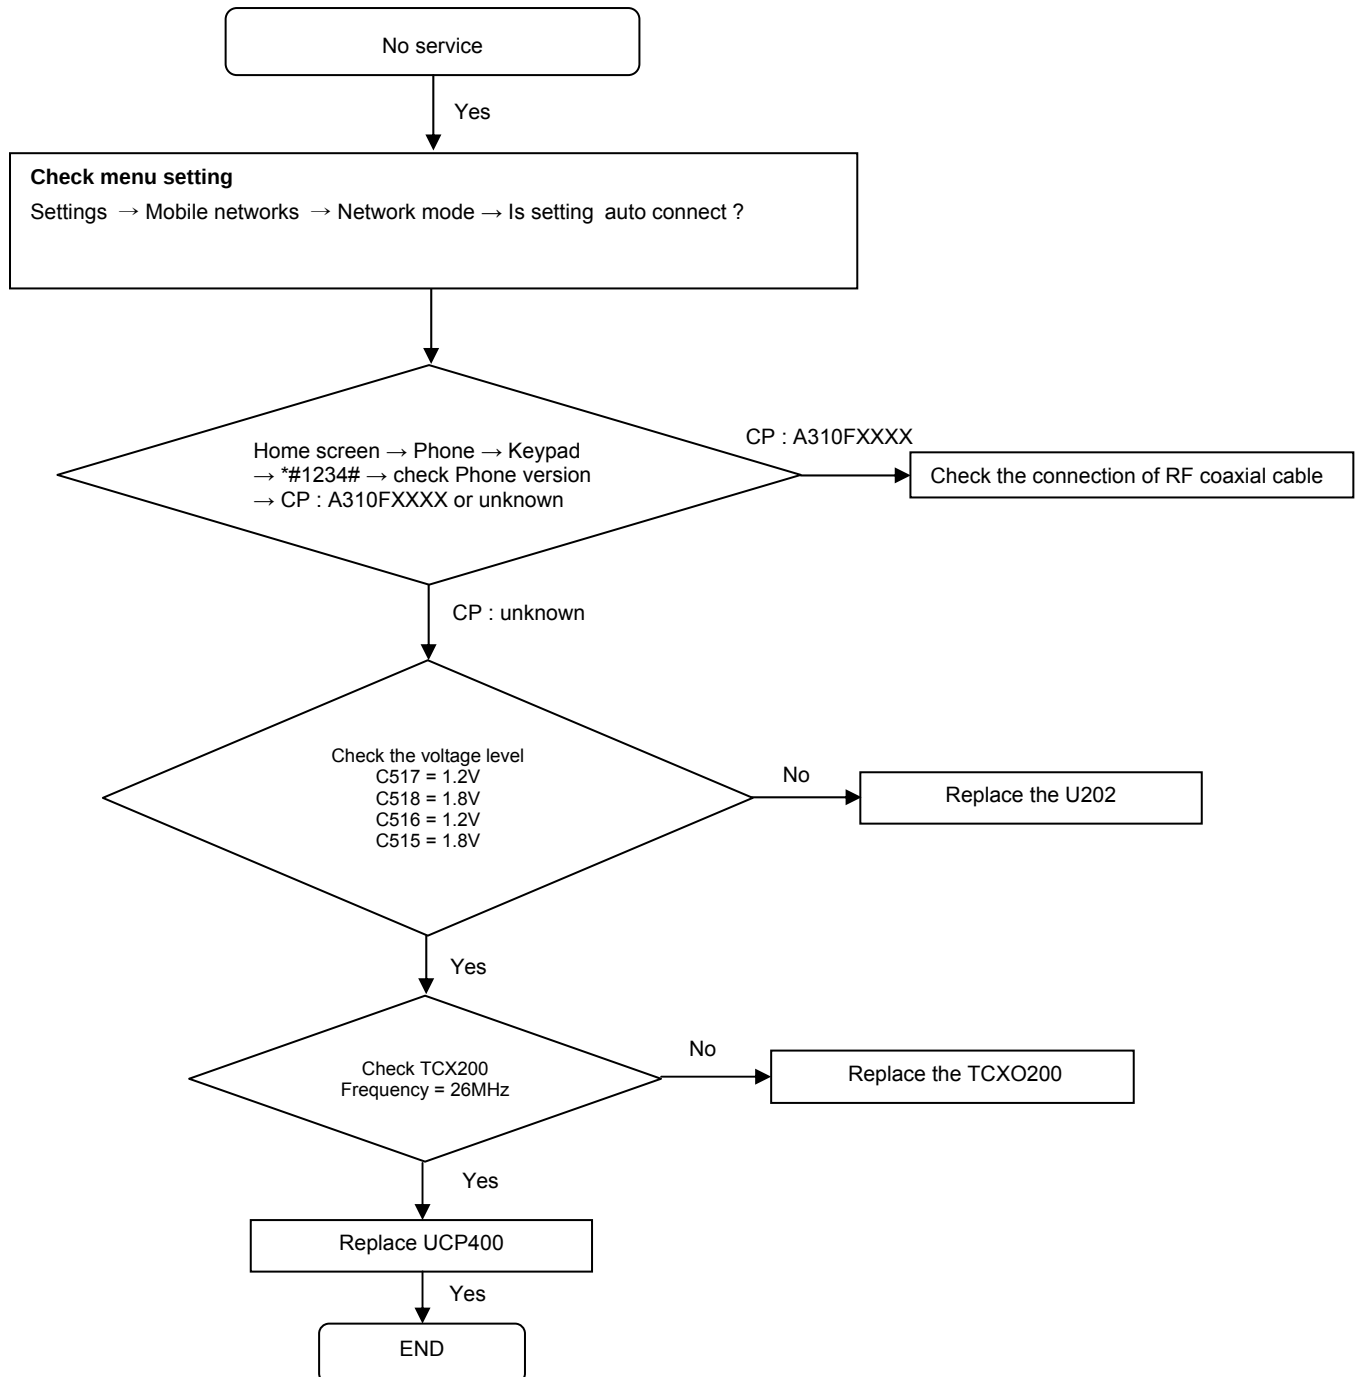


8. Level 3 Repair

8-4-4. Sim Part

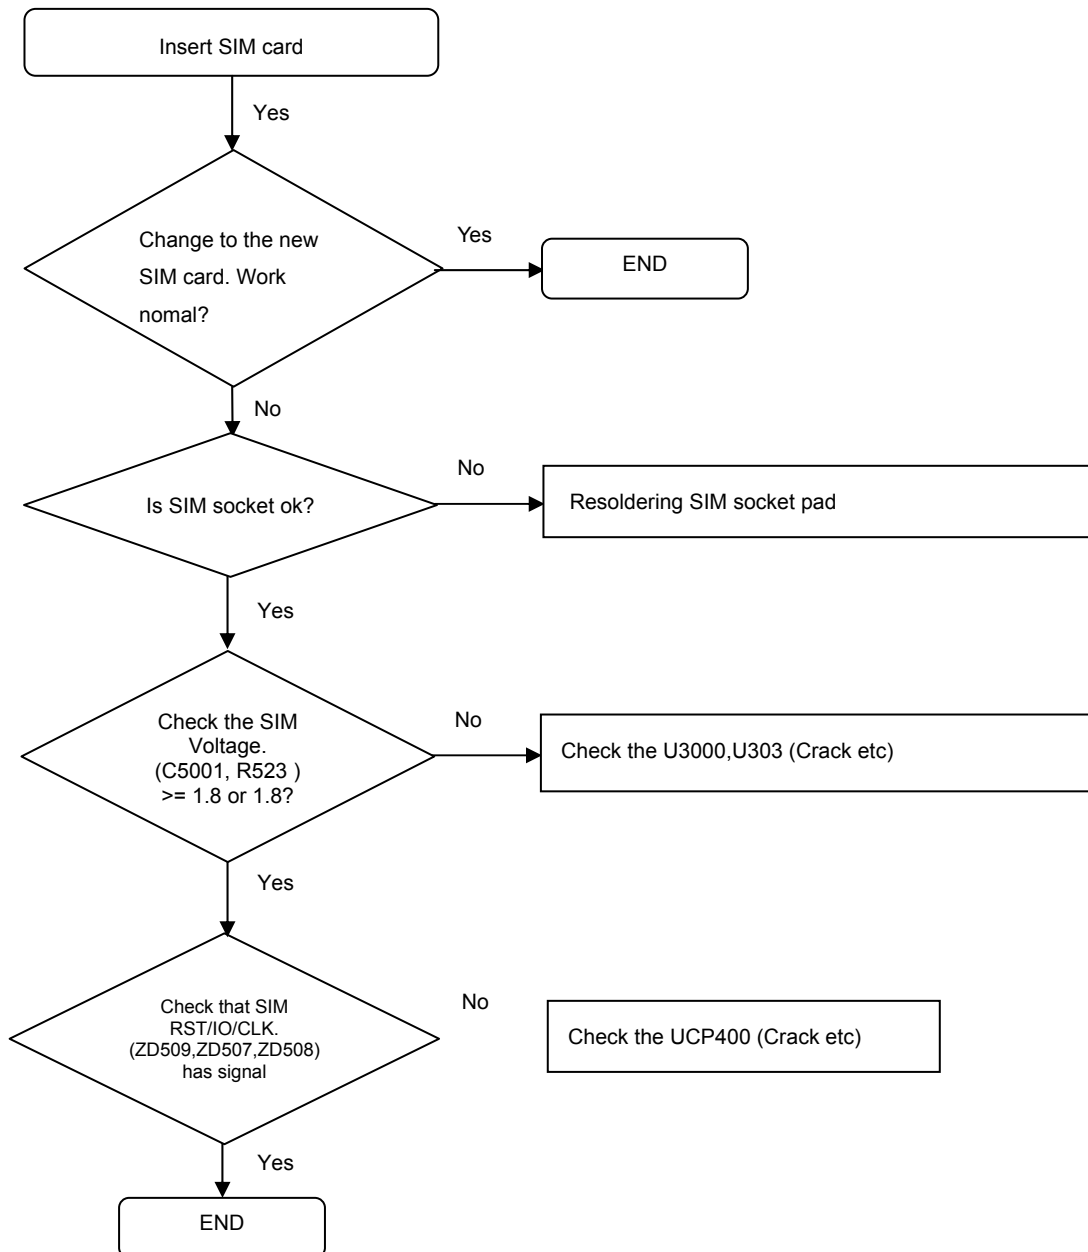


8. Level 3 Repair

8-4-5. Charging Part

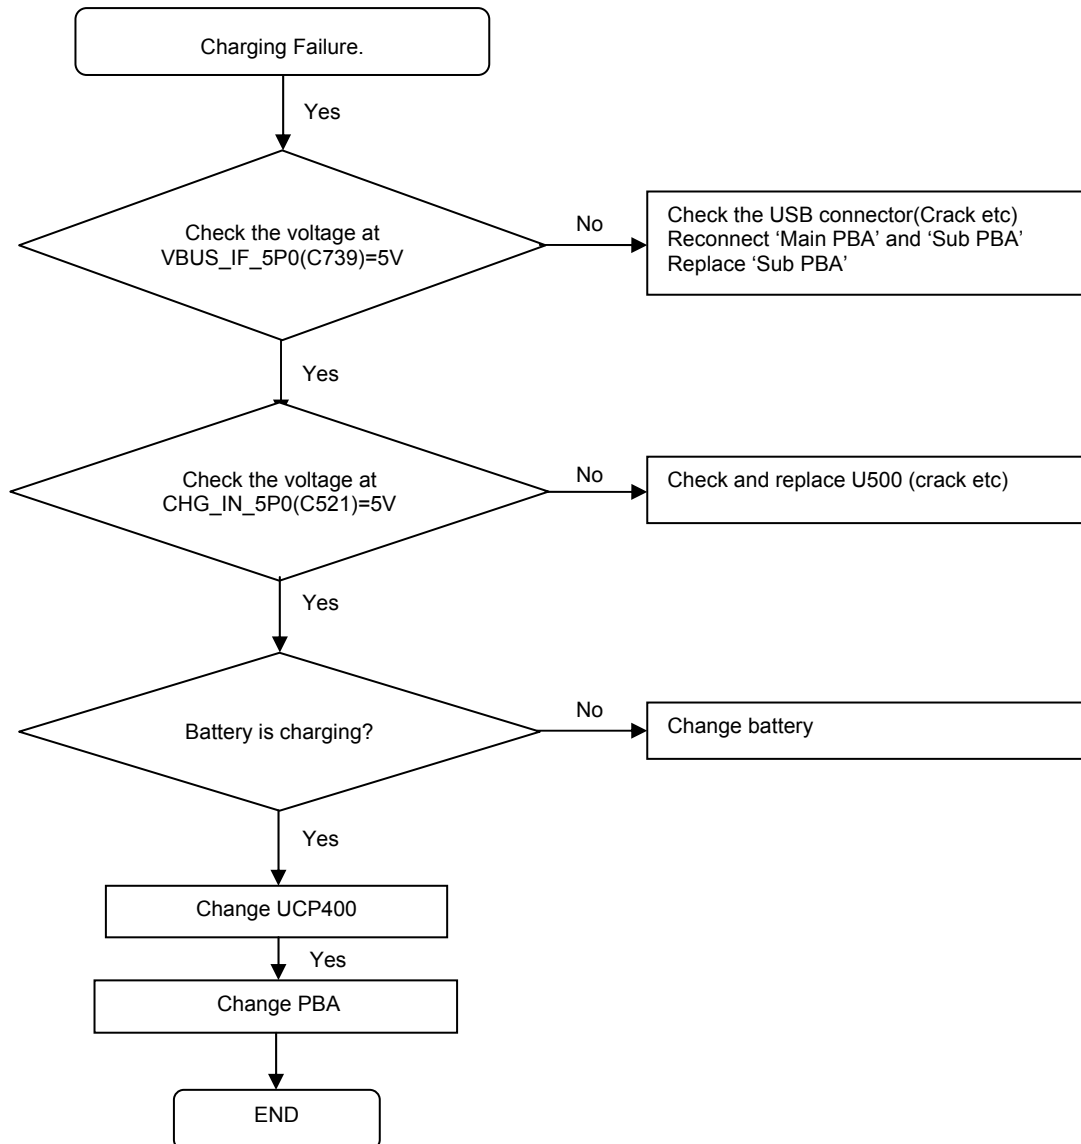


8. Level 3 Repair

8-4-6. OTG

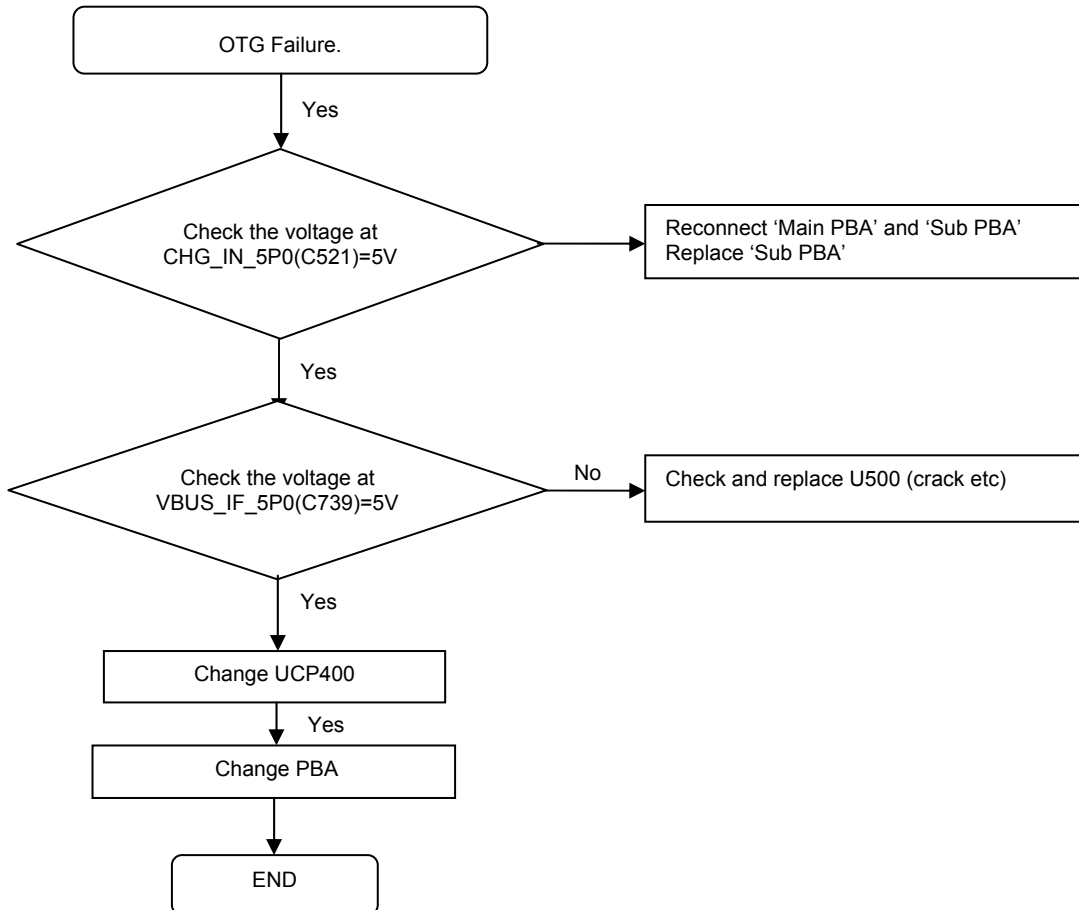


8. Level 3 Repair

8-4-7. Proxy Sensor

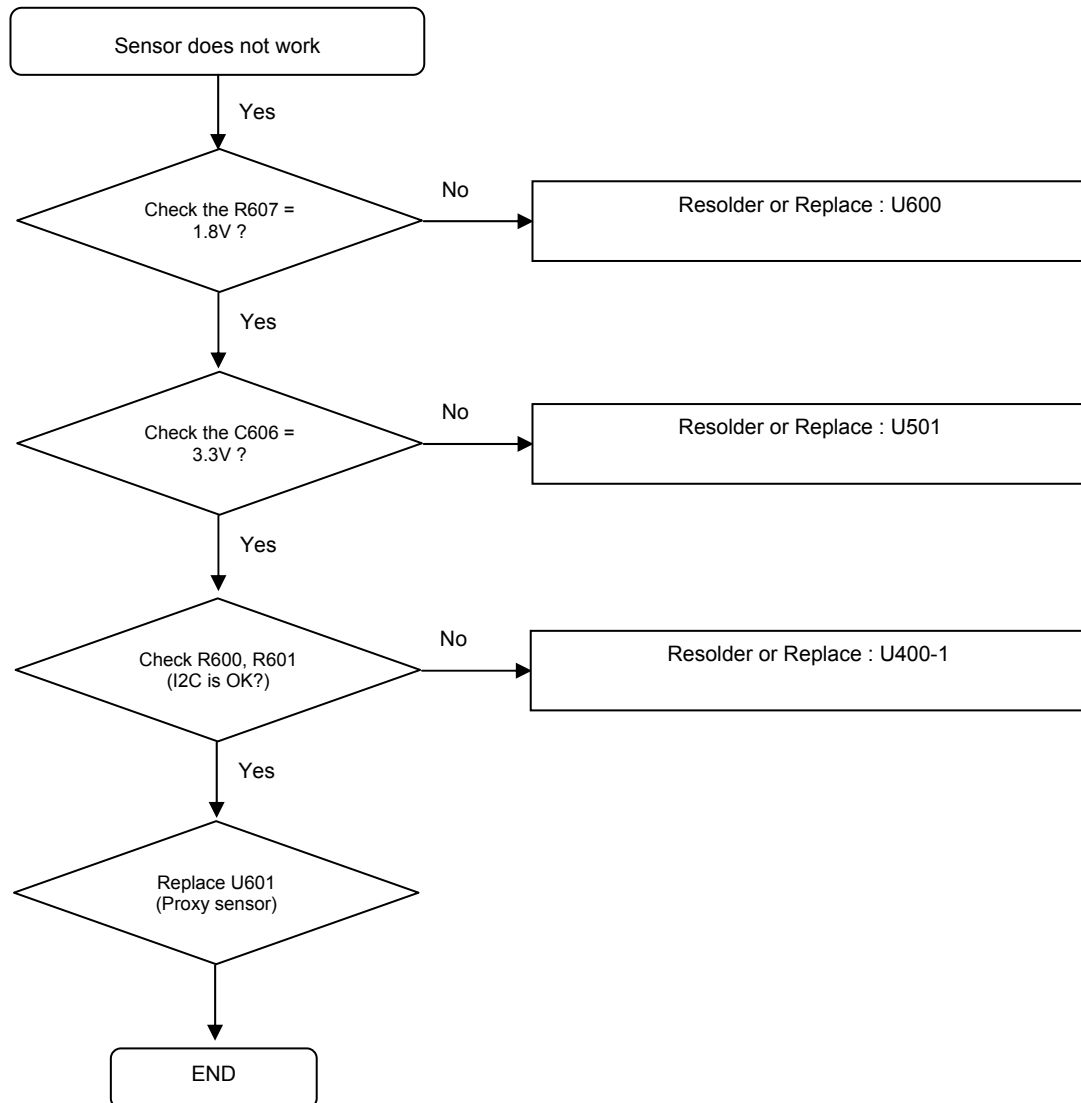


8. Level 3 Repair

8-4-7-2. Magnetic Sensor

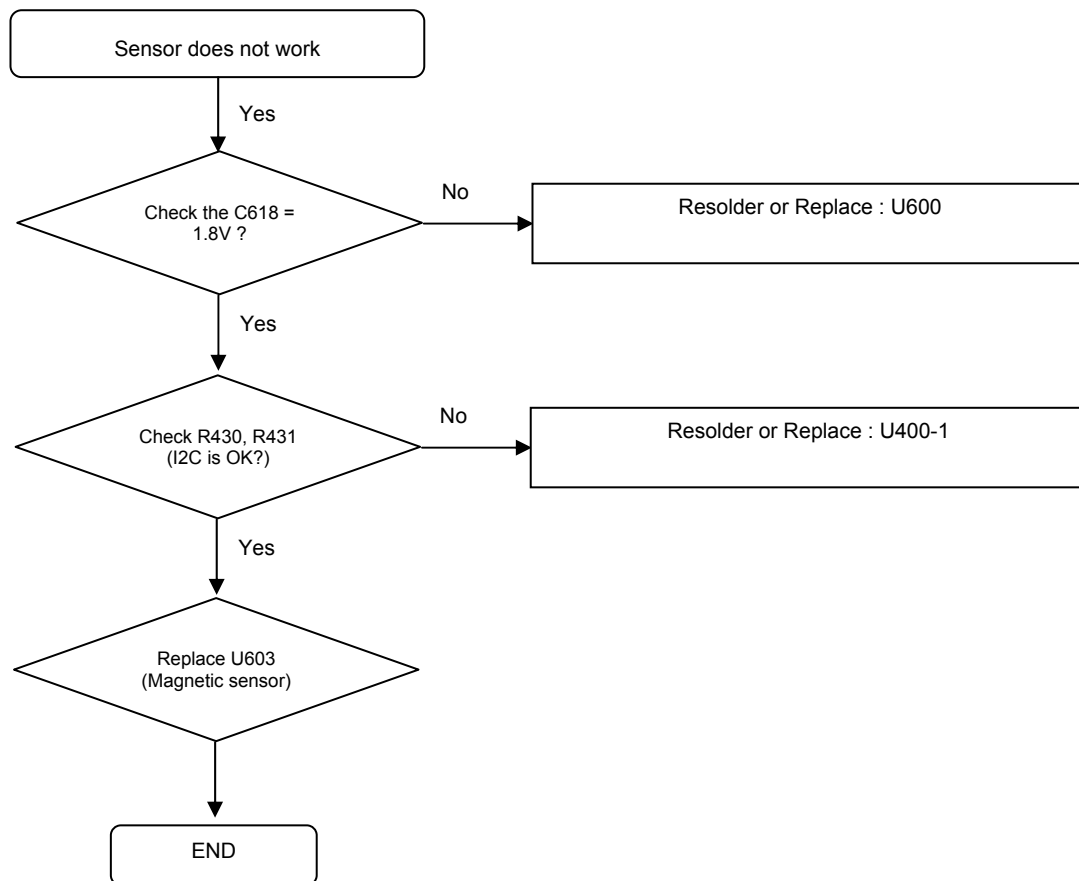


8. Level 3 Repair

8-4-7-3. Accel Sensor

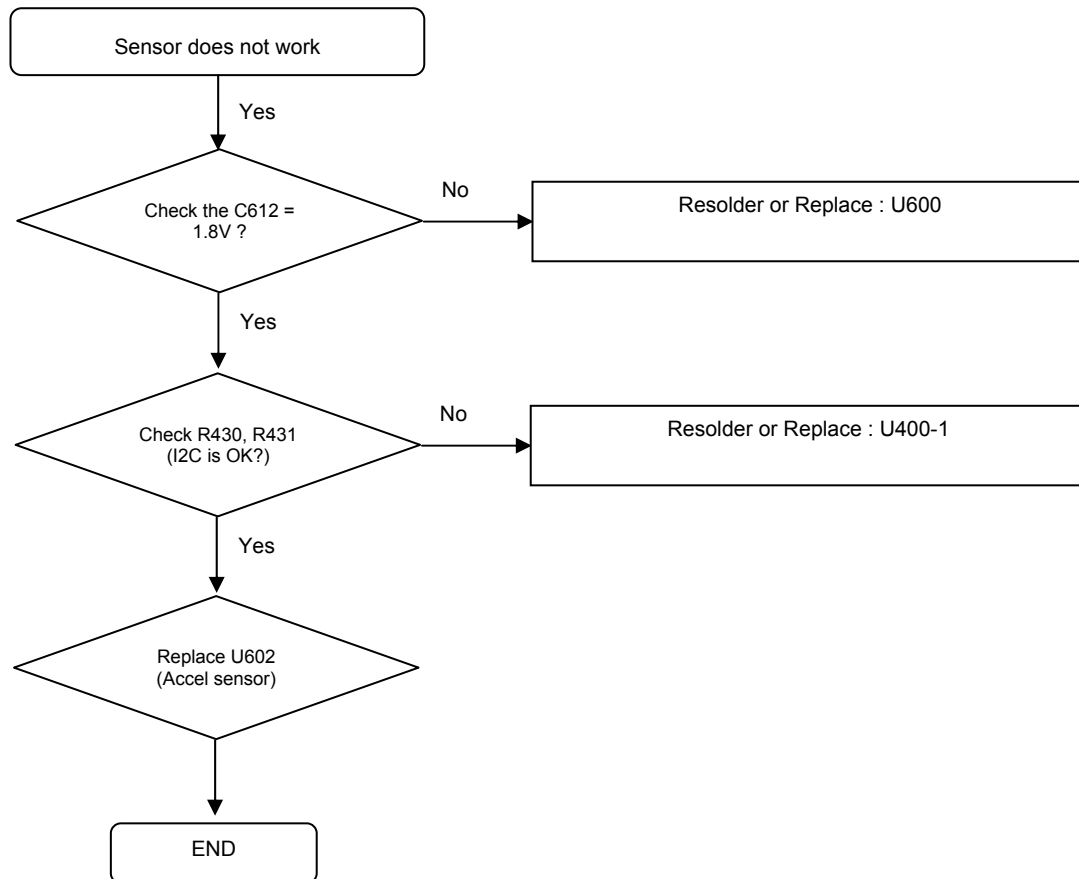


8. Level 3 Repair

8-4-8-1 Microphone Part - Main MIC

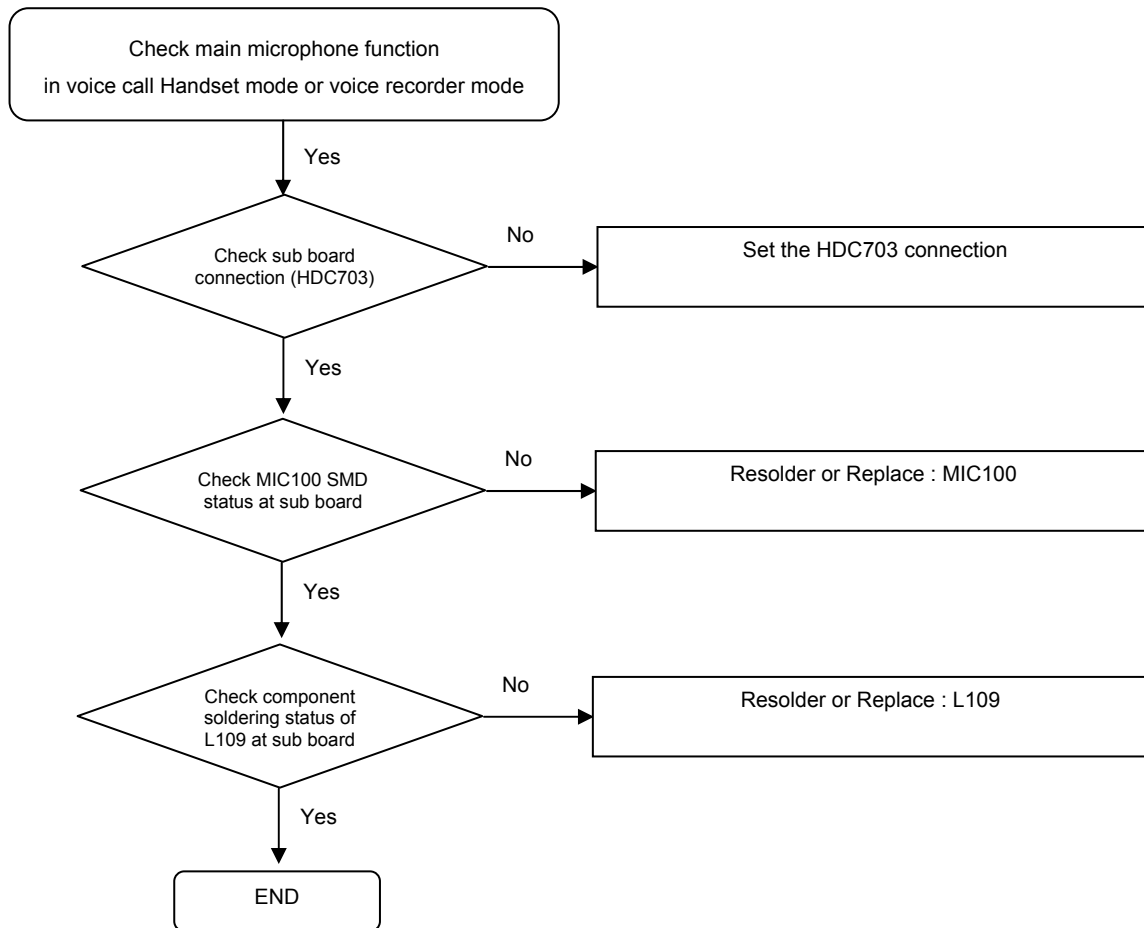


8. Level 3 Repair

8-4-8-2. Microphone Part - Sub(2nd) MIC

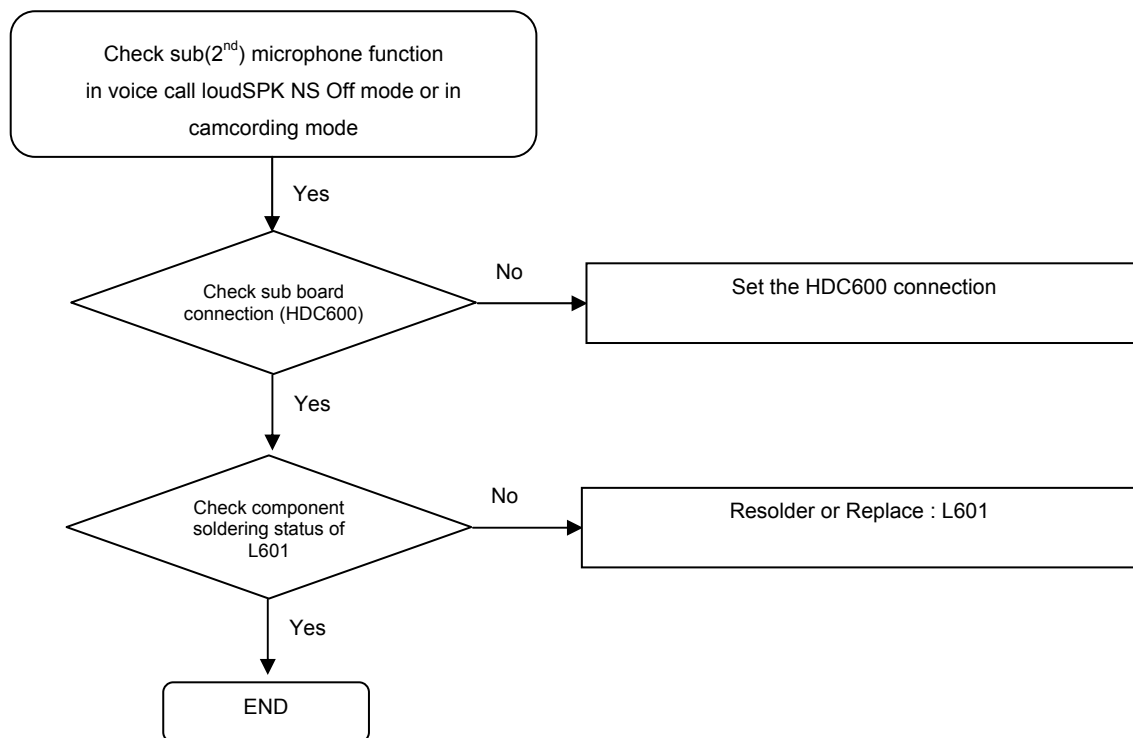


8. Level 3 Repair

8-4-10. Receiver Part

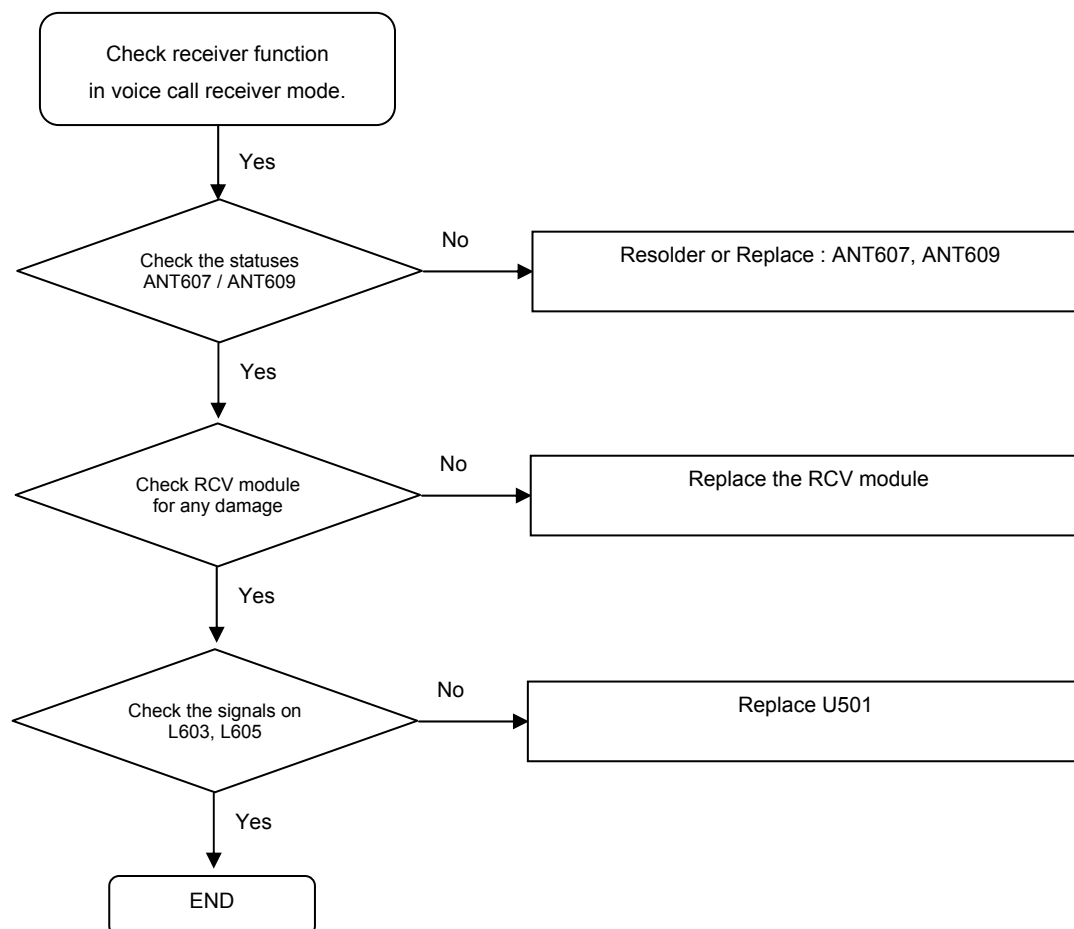


8. Level 3 Repair

8-4-12. BT/WIFI

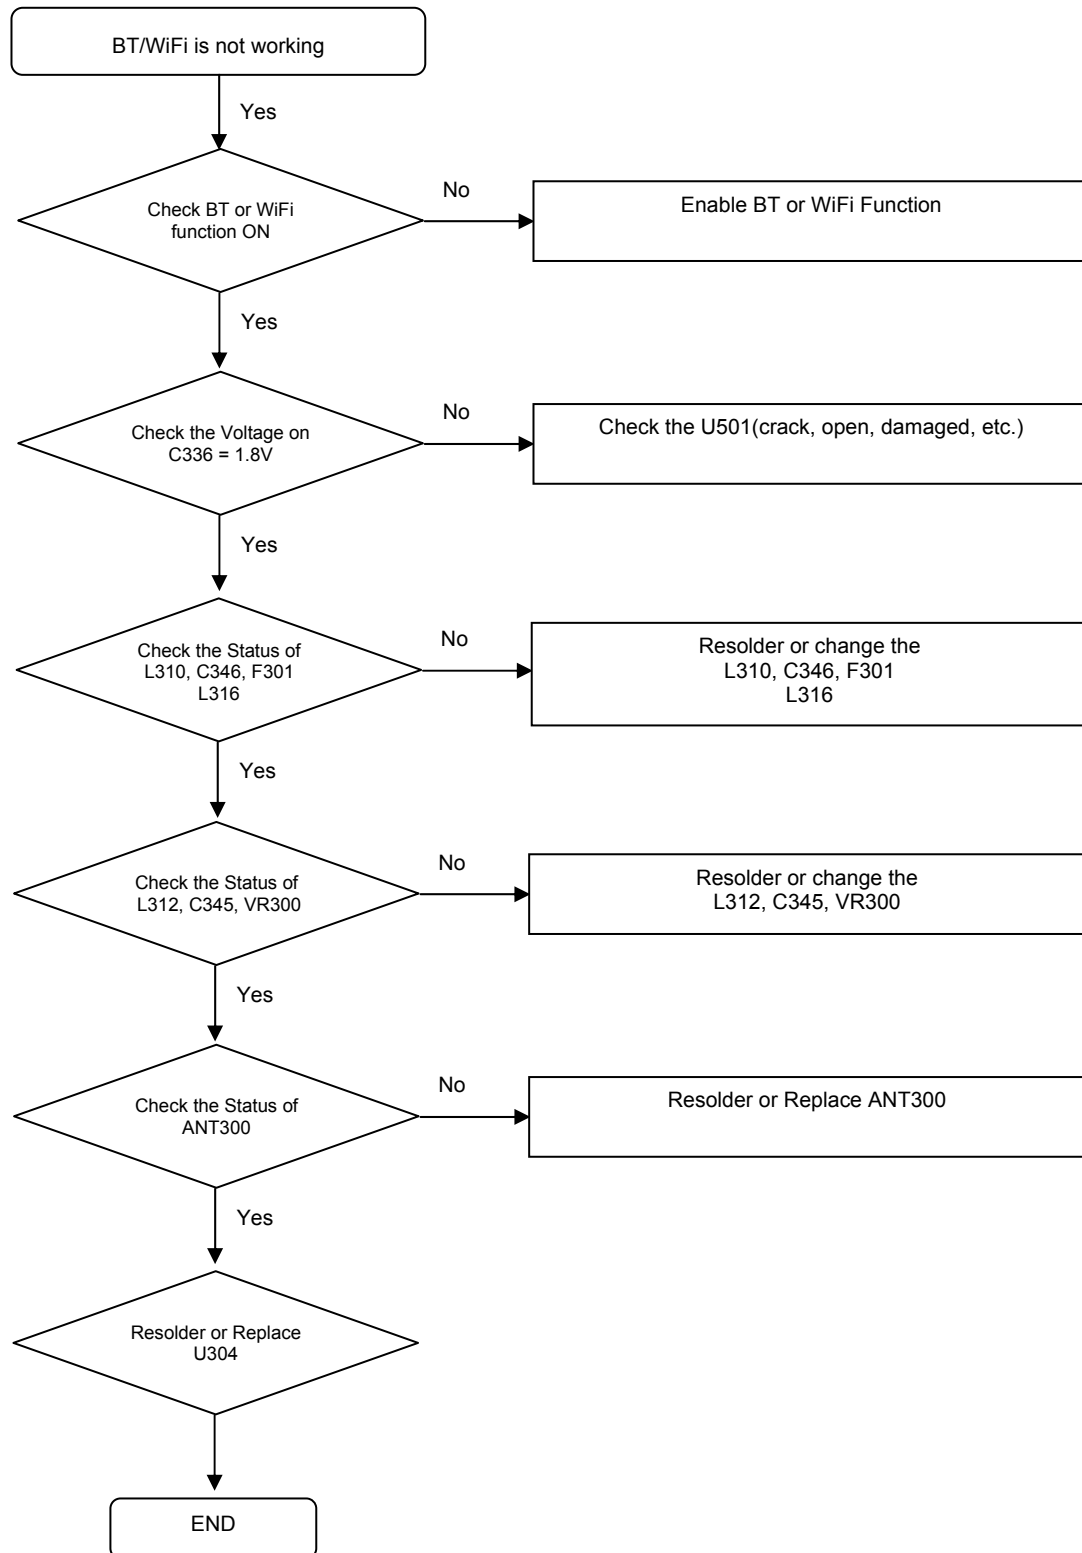


8. Level 3 Repair

8-4-13. GPS

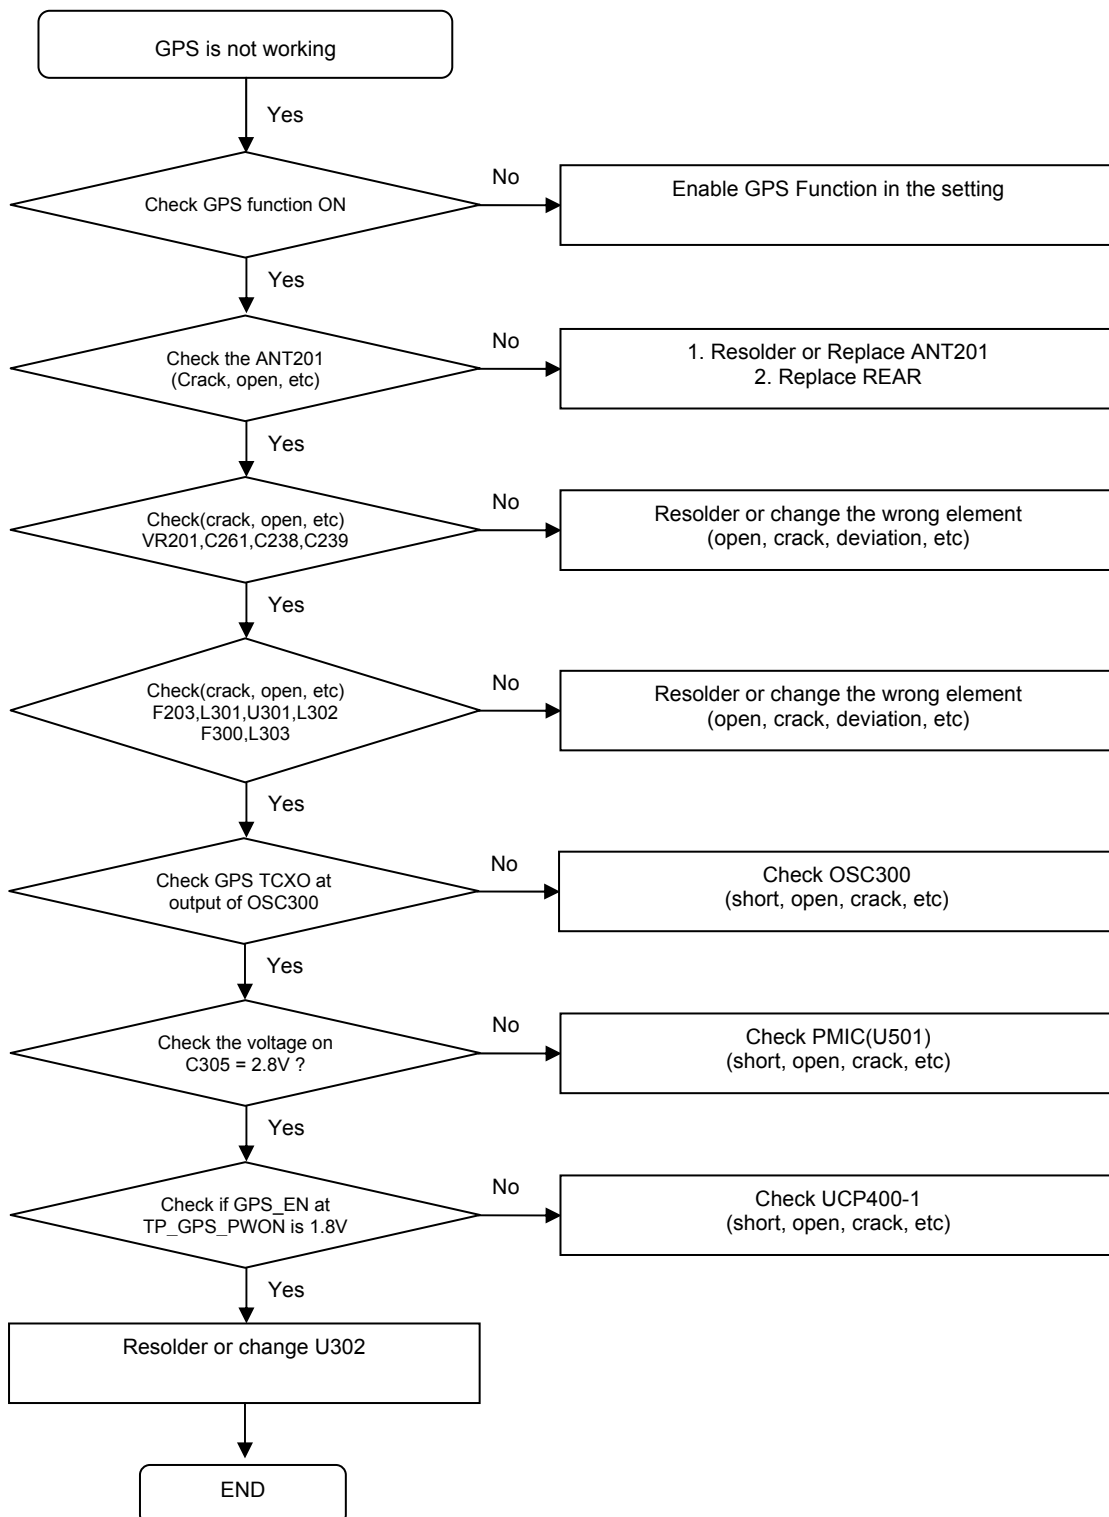


8. Level 3 Repair

8-4-14. NFC

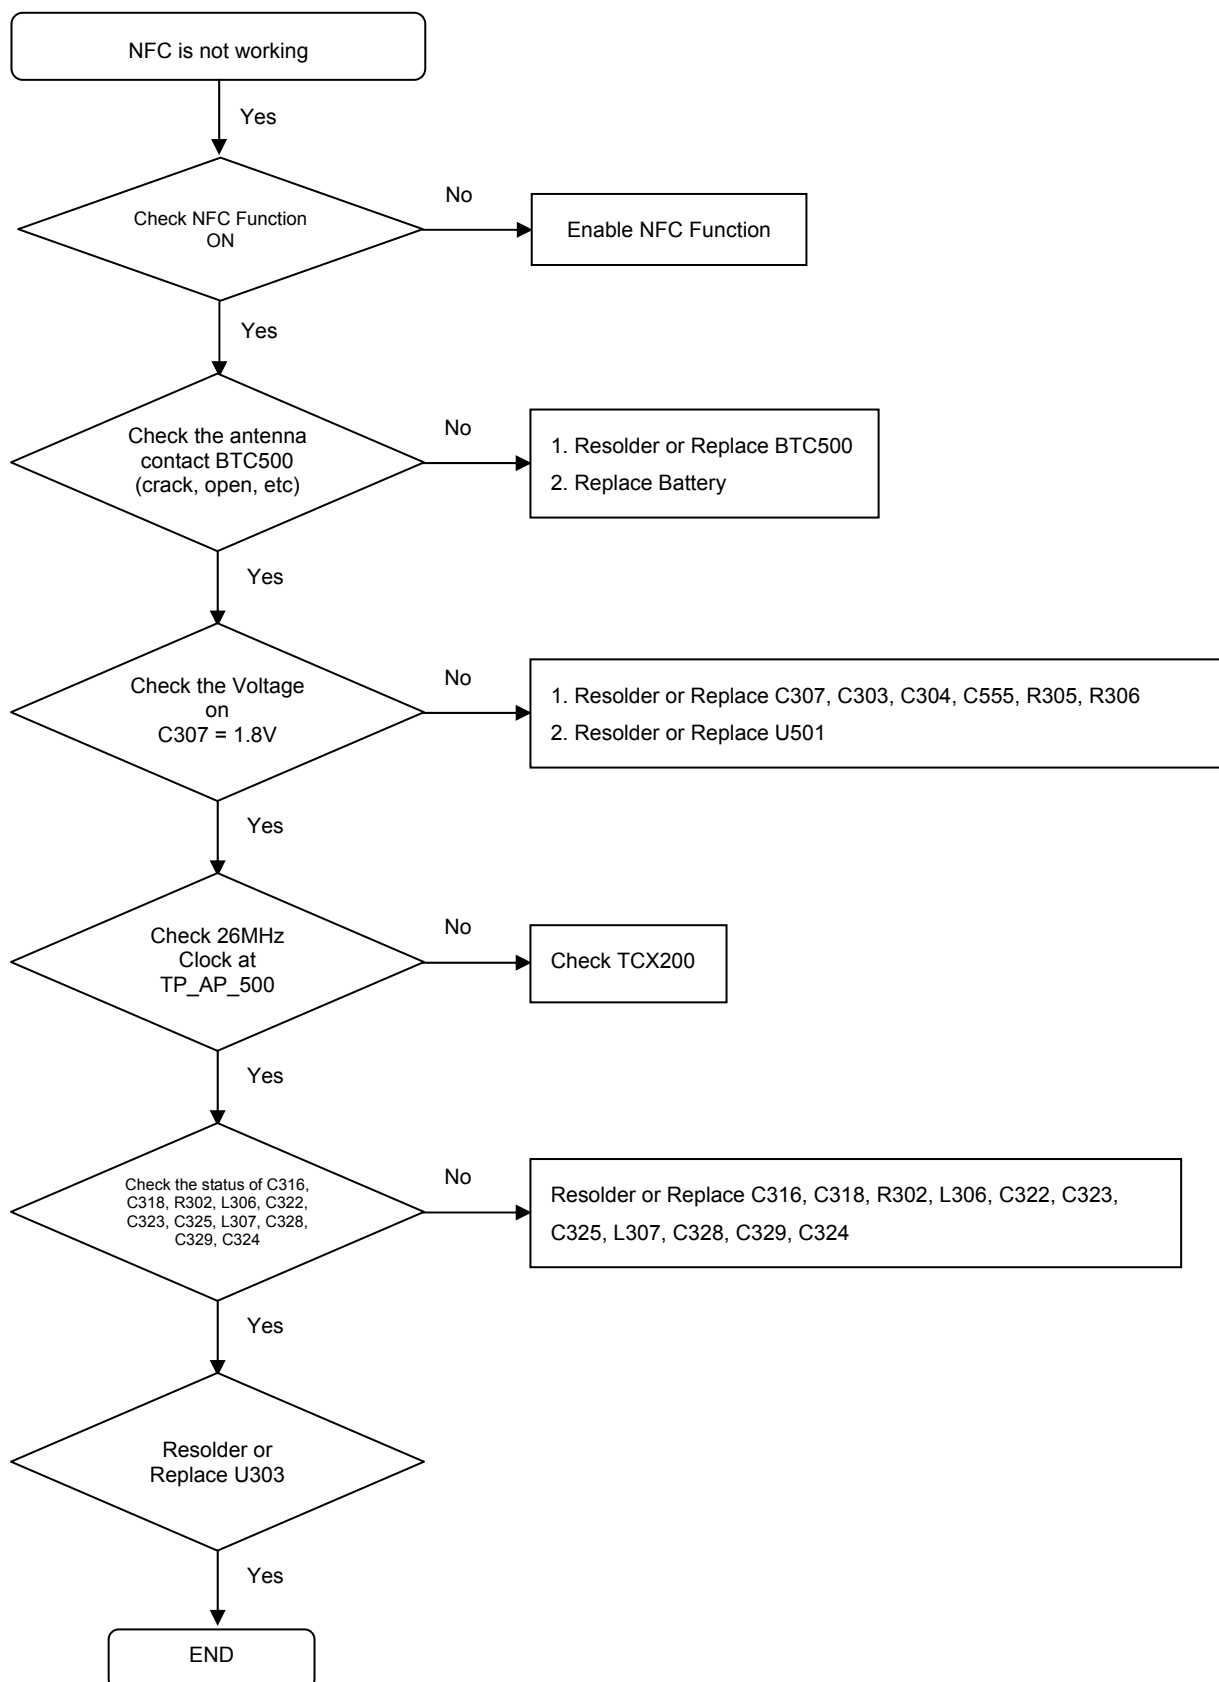


8. Level 3 Repair

8-4-15. Display

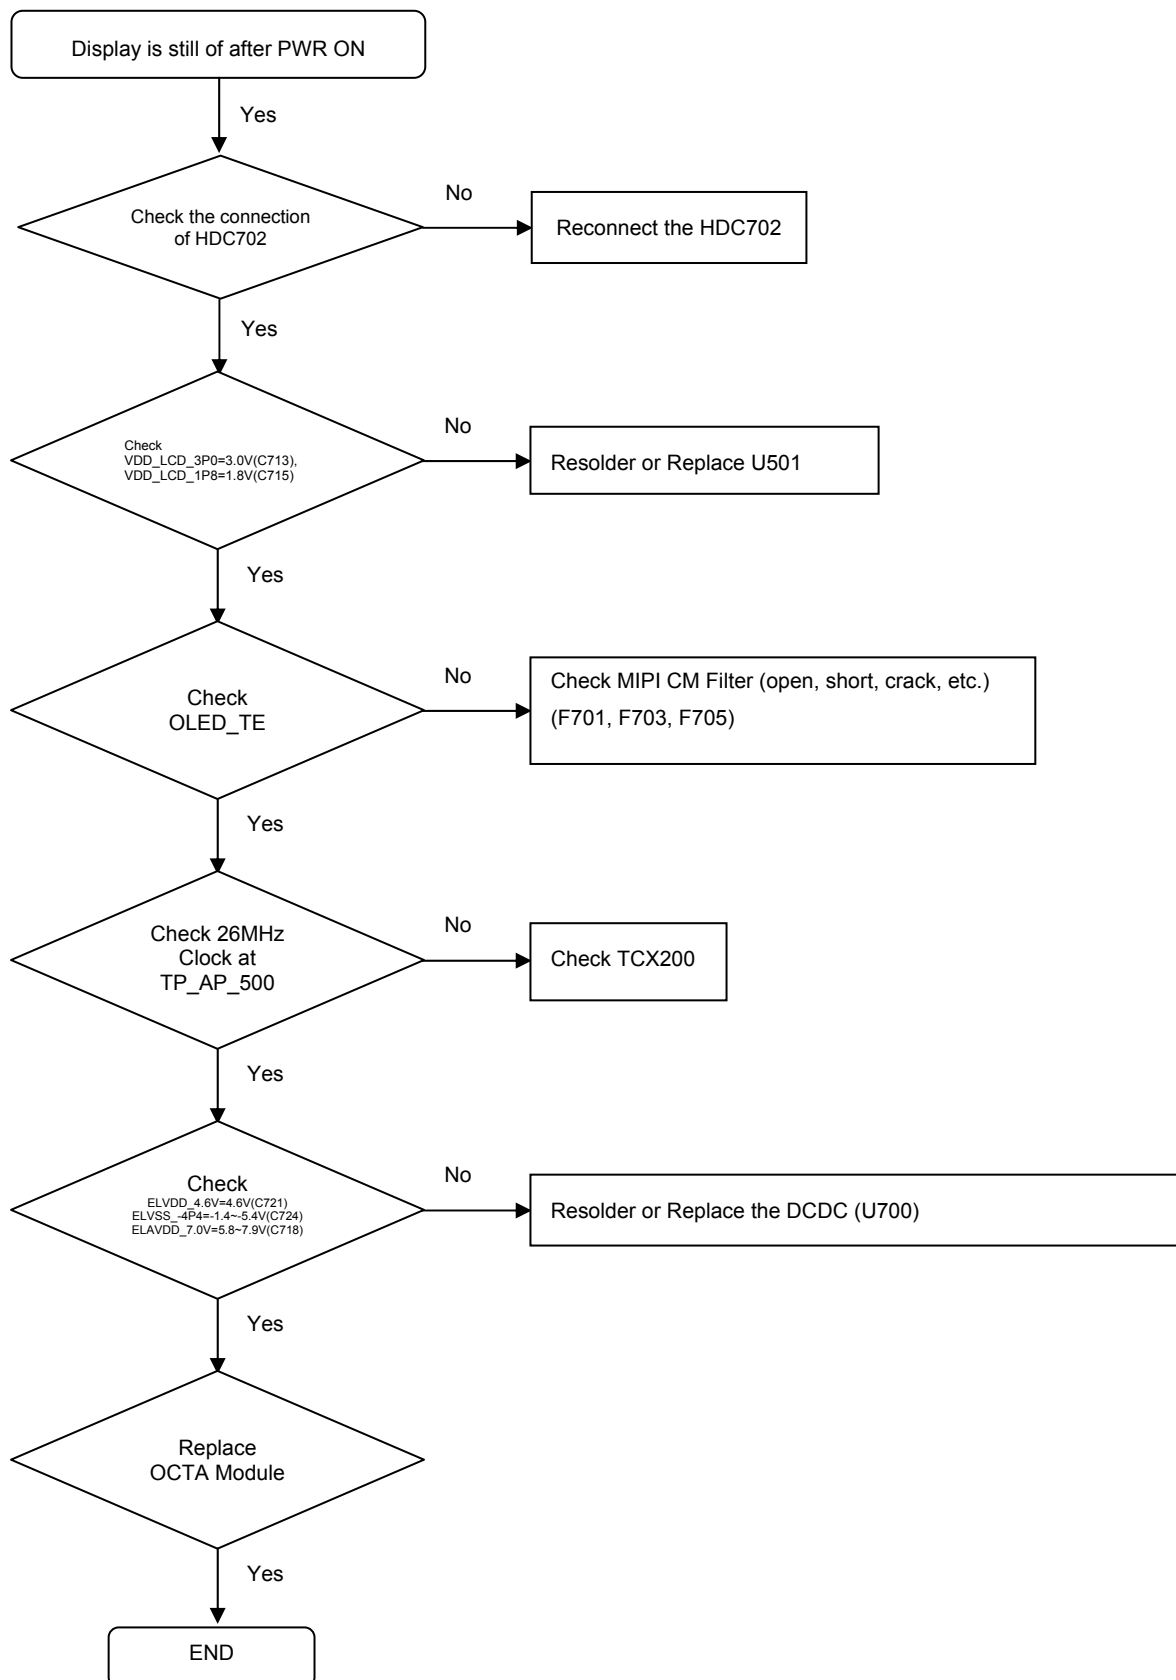


8. Level 3 Repair

8-4-16. 16M CAM

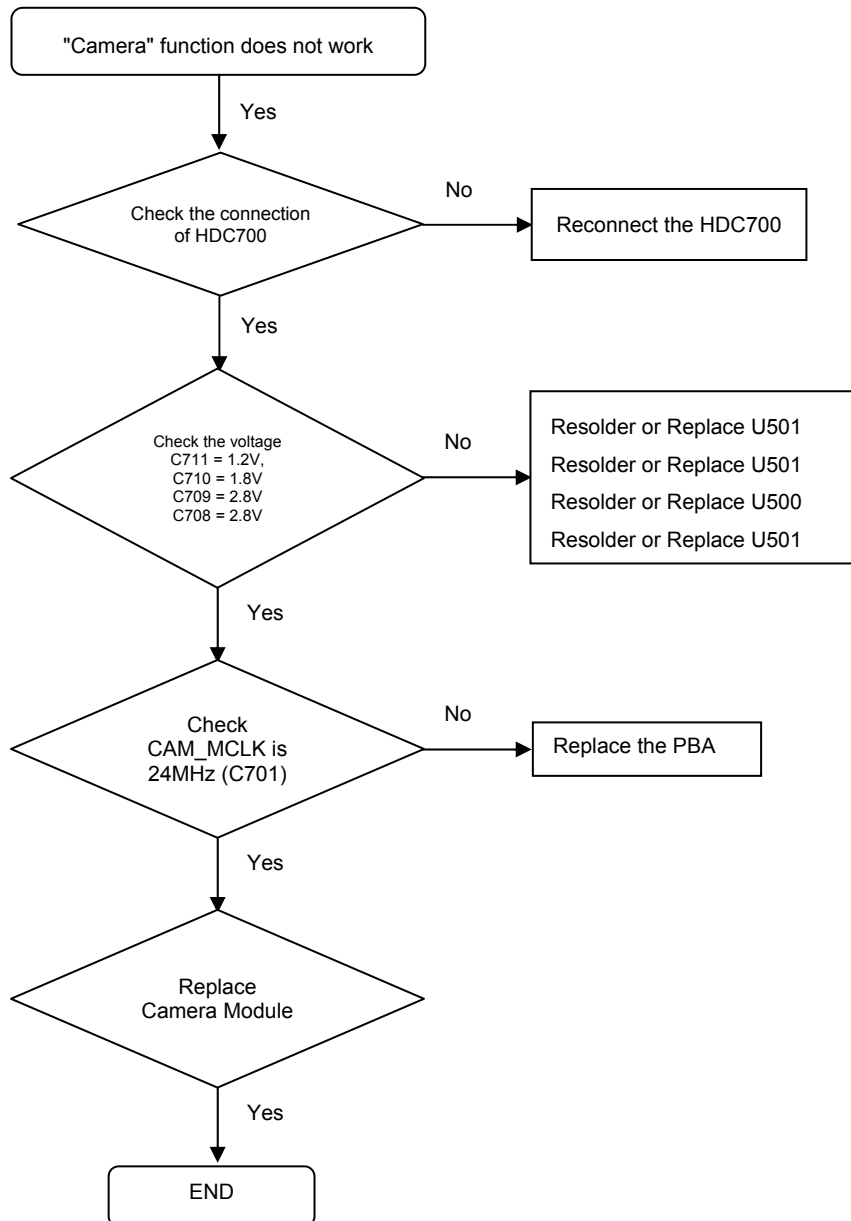


8. Level 3 Repair

8-4-17. 5M CAM

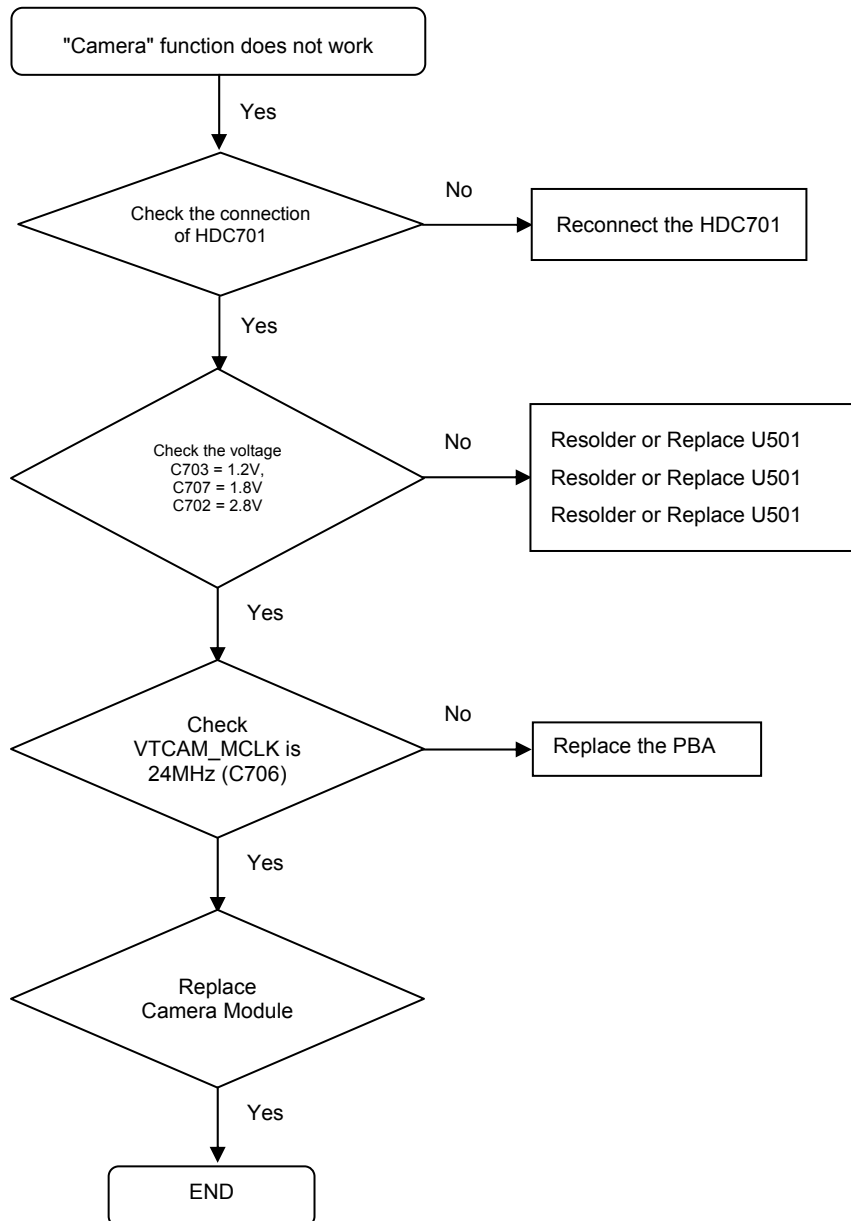


8. Level 3 Repair

8-4-18. TSP

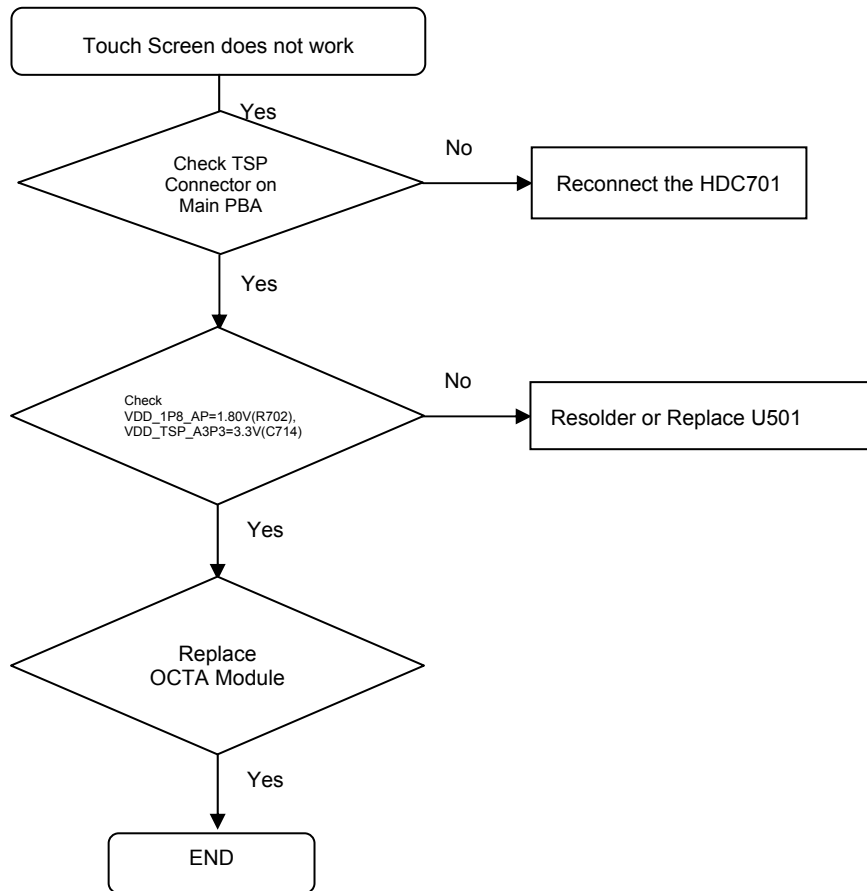


8. Level 3 Repair

8-4-19. Motor

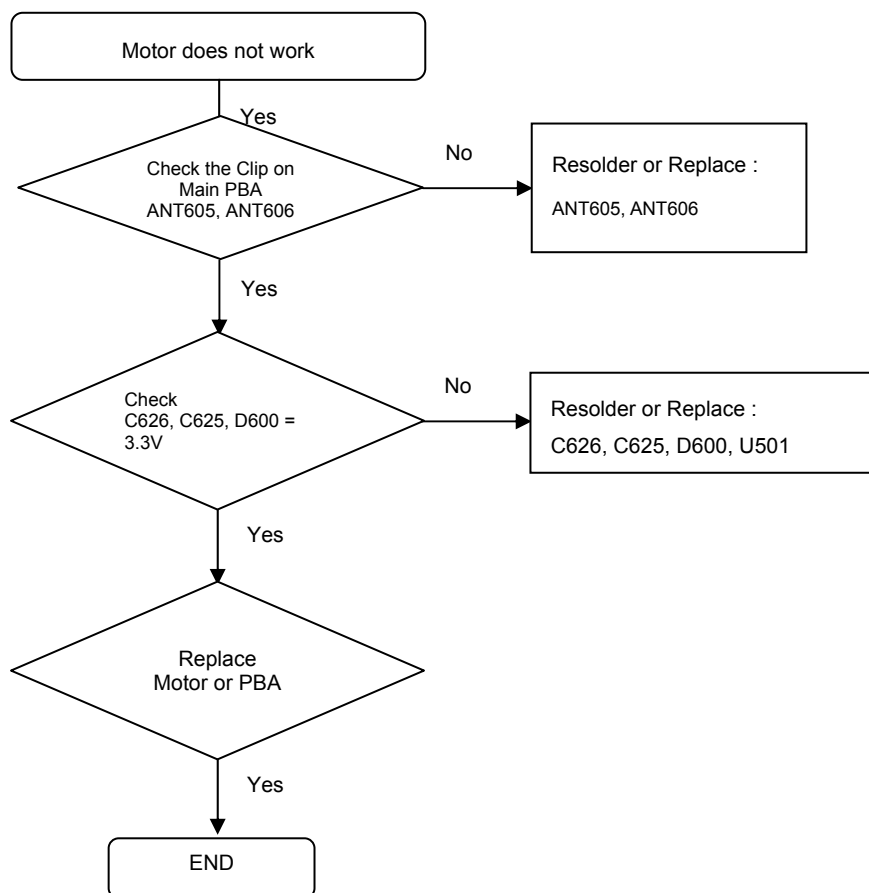


8. Level 3 Repair

8-4-20. GSM850 / WCDMA B5 / LTE B5 RX

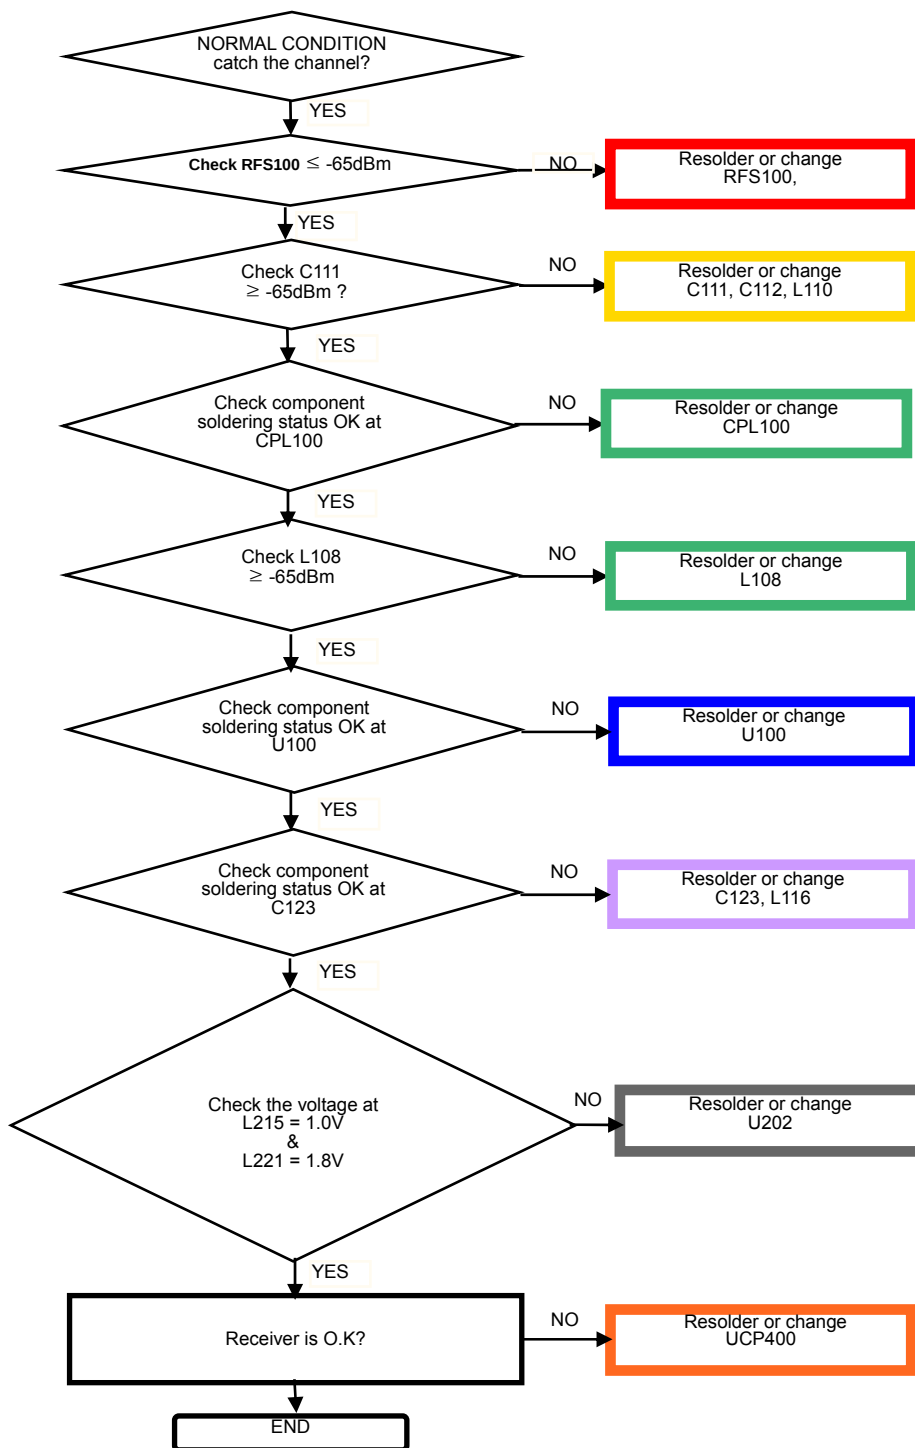


8. Level 3 Repair

8-4-21. GSM900 / WCDMA B8 / LTE B8 RX

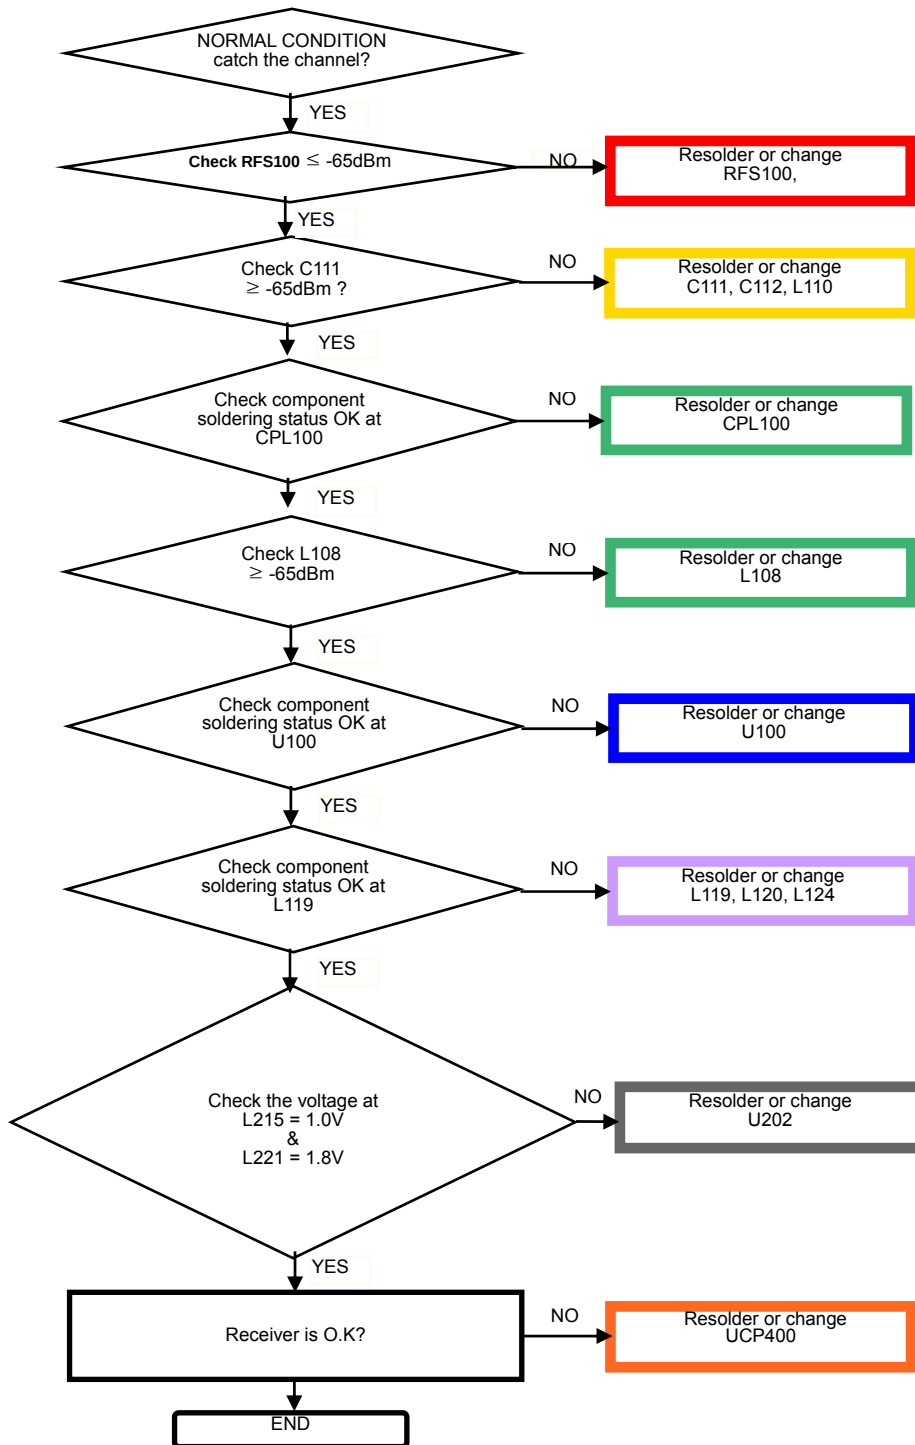


8. Level 3 Repair

8-4-22. DCS1800 / LTE B3 RX

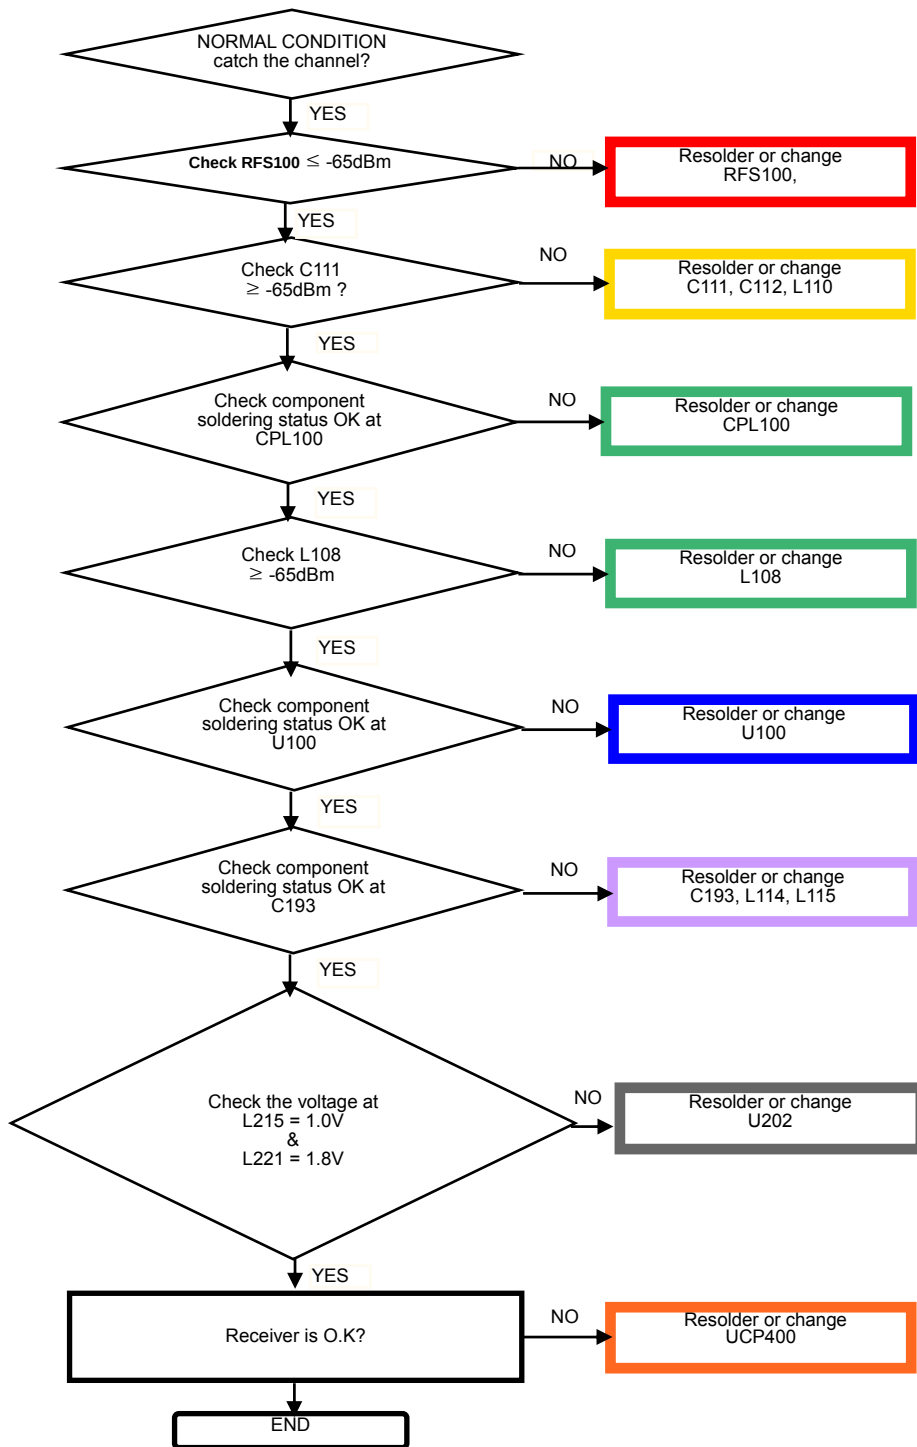


8. Level 3 Repair

8-4-23. PCS1900 / WCDMA B2 / LTE B2 RX

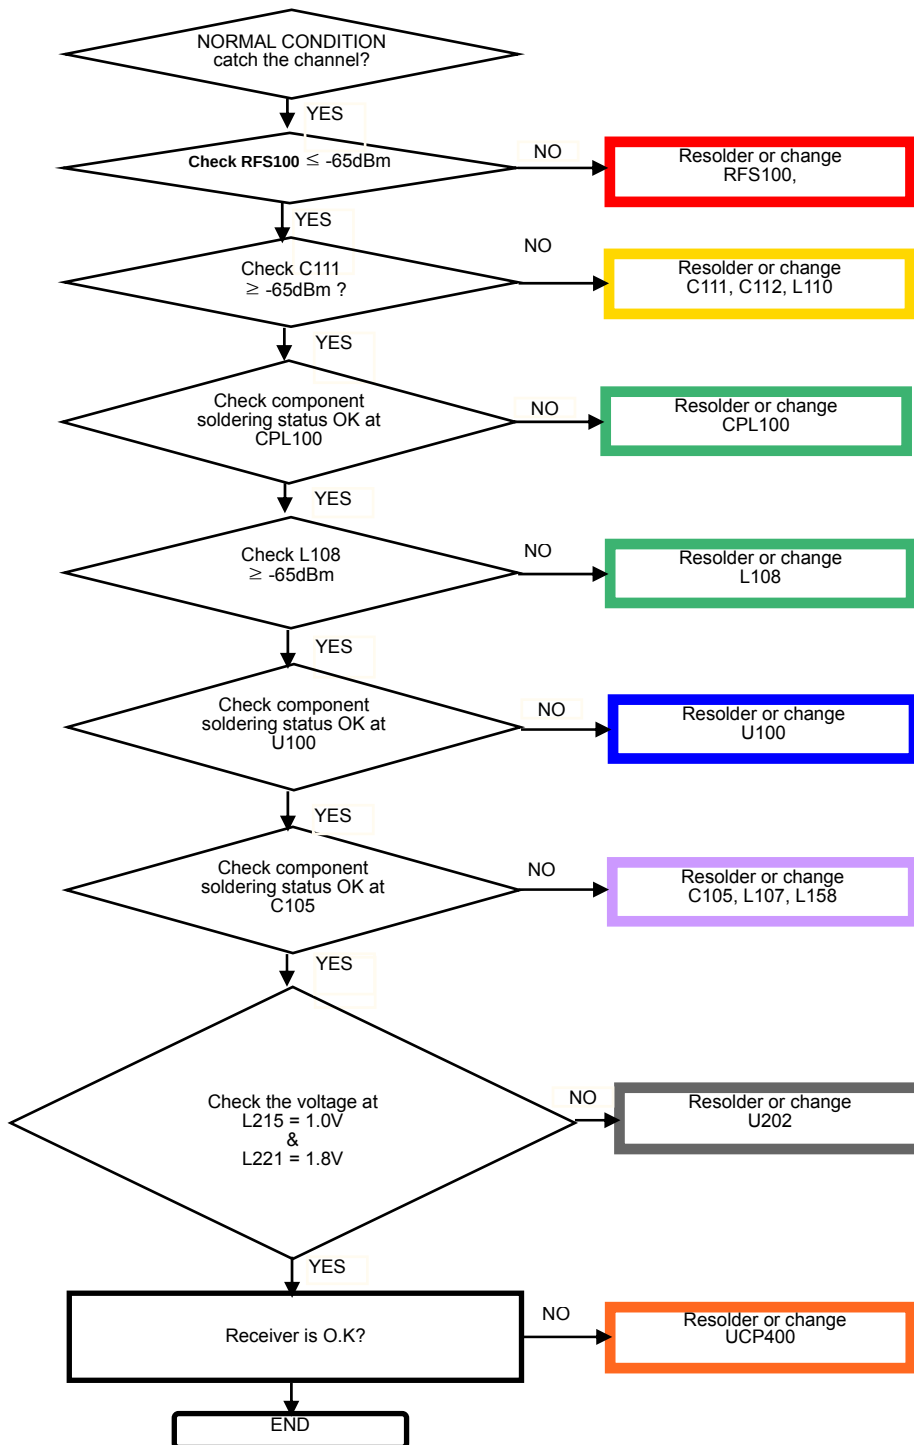


8. Level 3 Repair

8-4-24. WCDMA B1 / LTE B1 RX

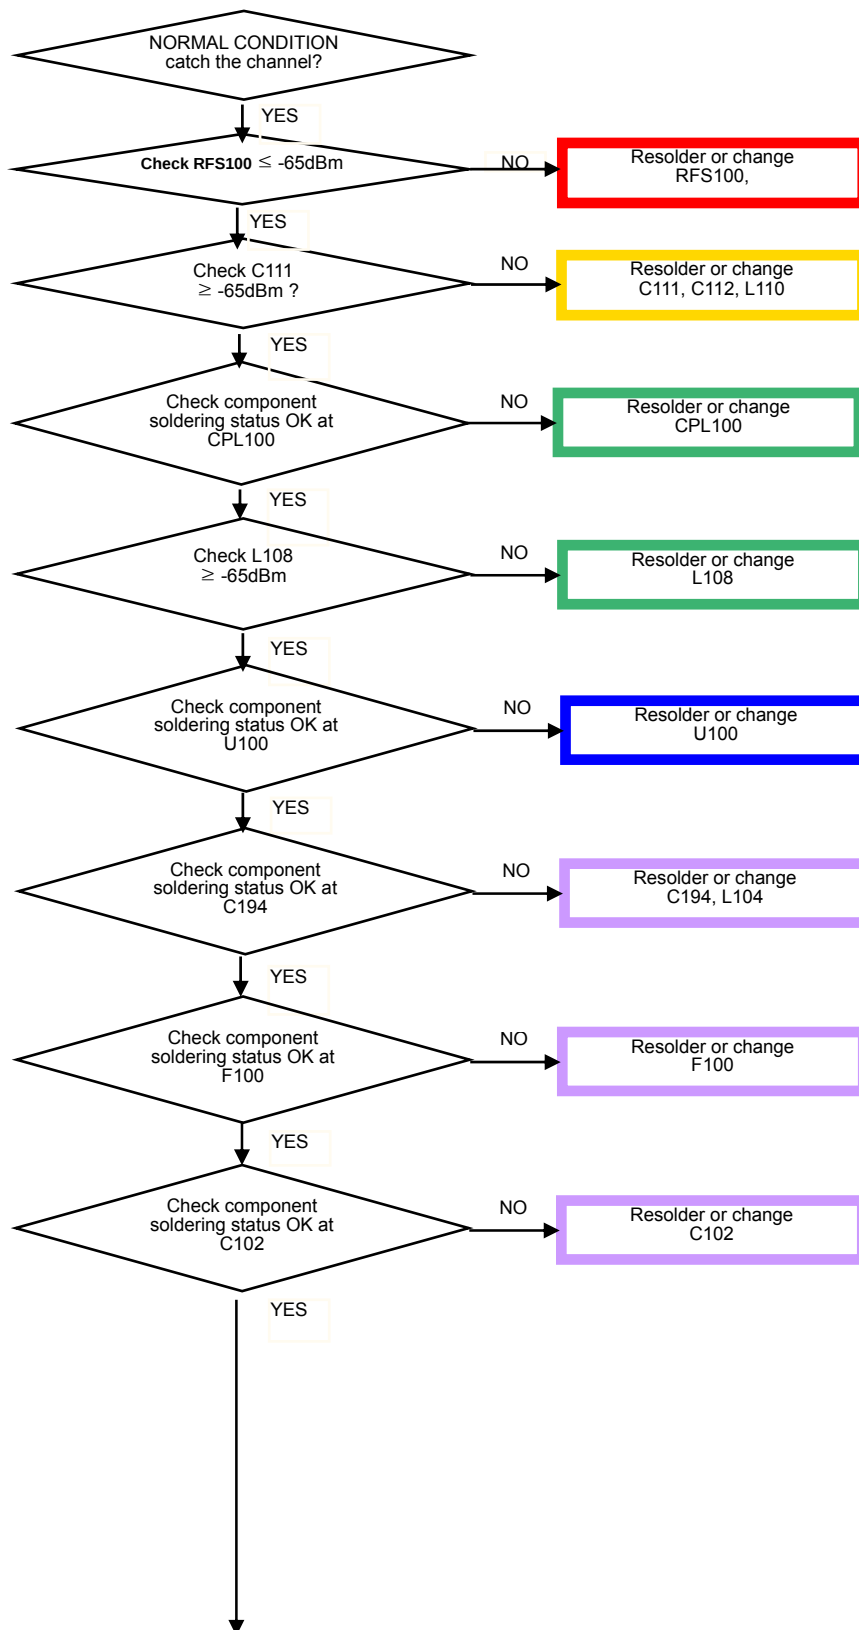


8. Level 3 Repair

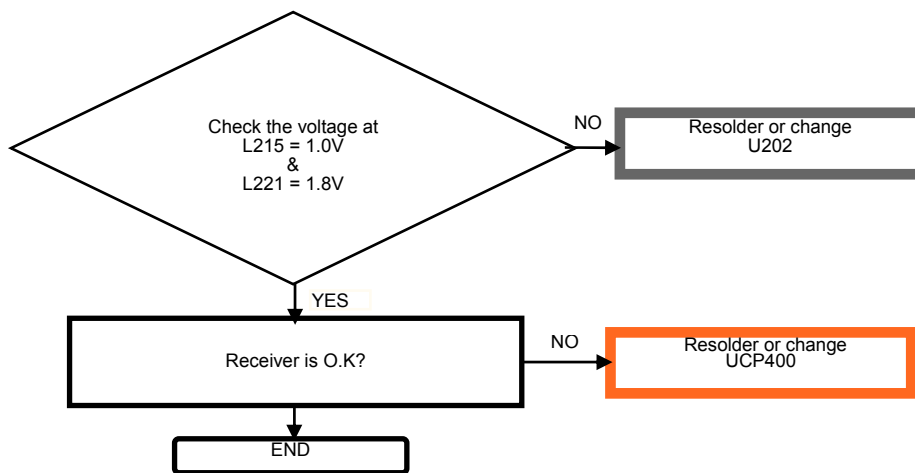


8. Level 3 Repair

8-4-25. LTE B20 RX

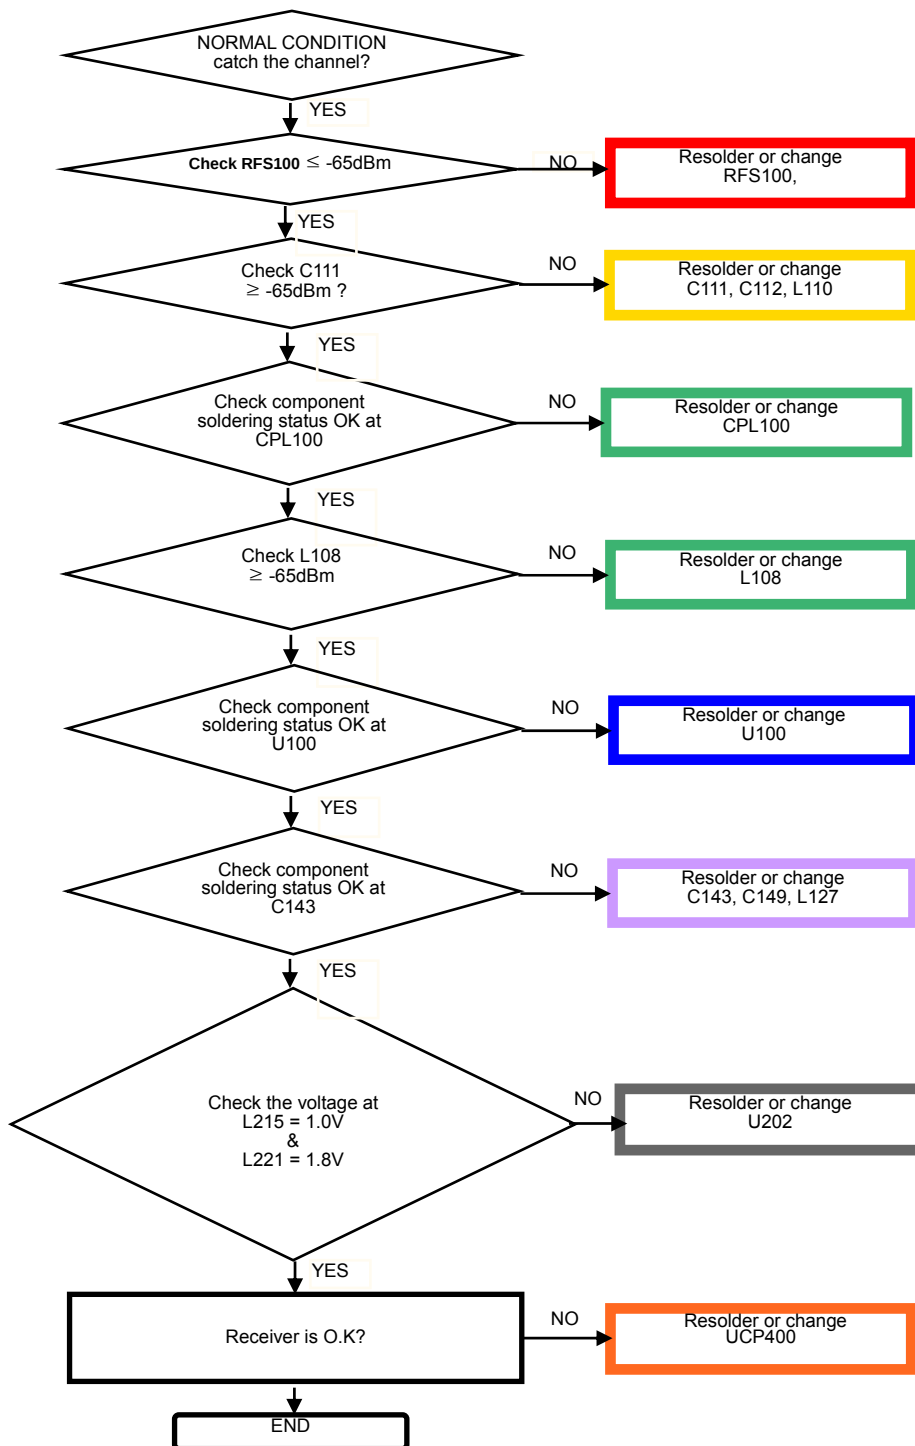


8. Level 3 Repair

8-4-26. LTE B7 RX

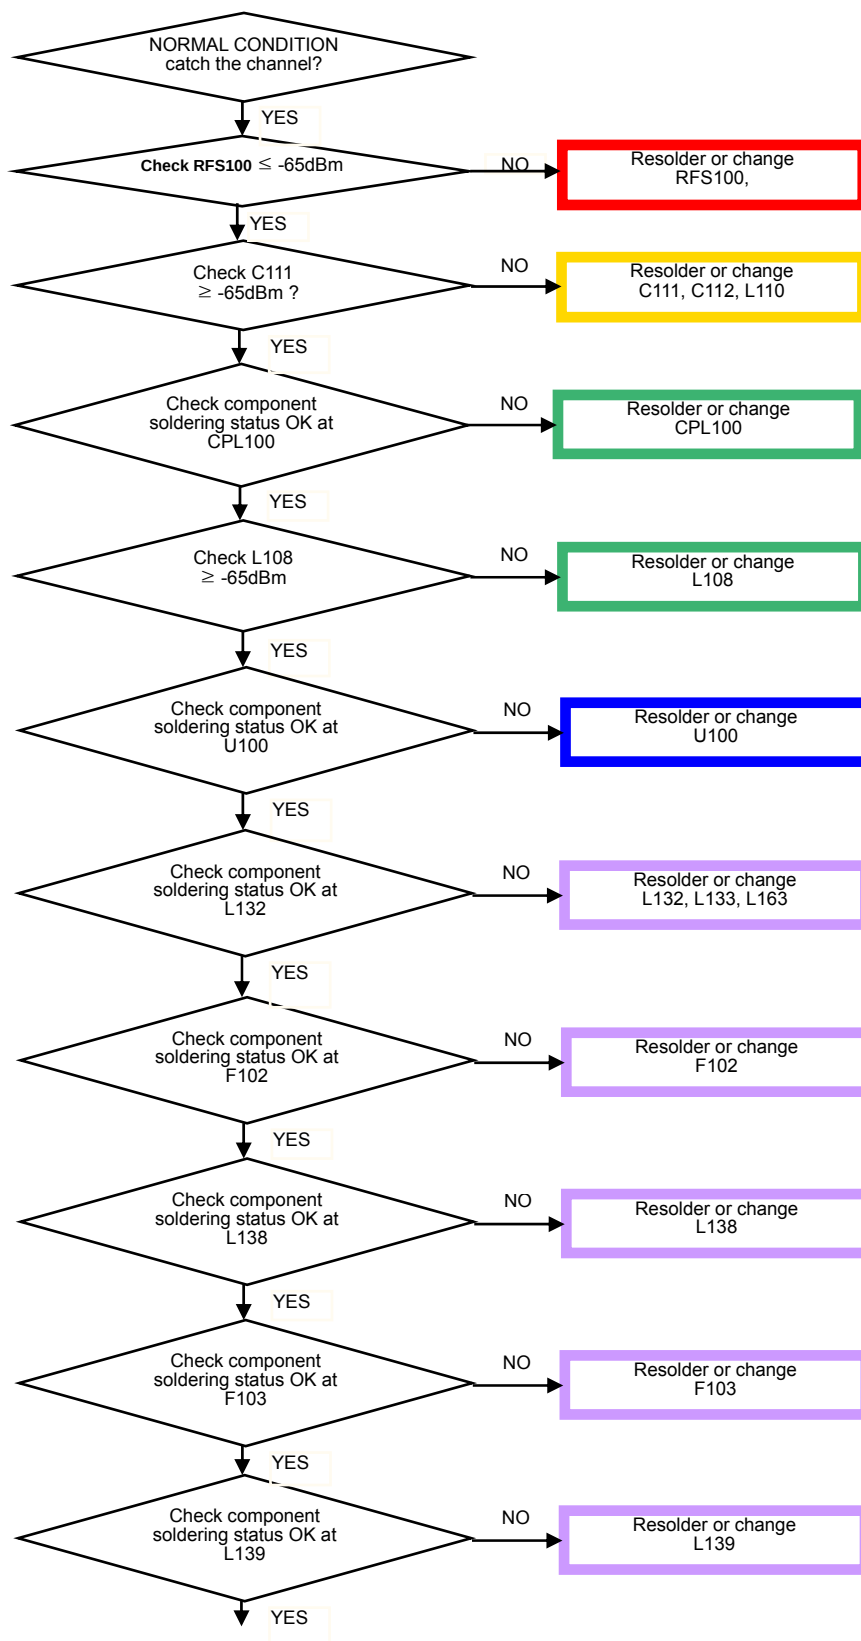


8. Level 3 Repair

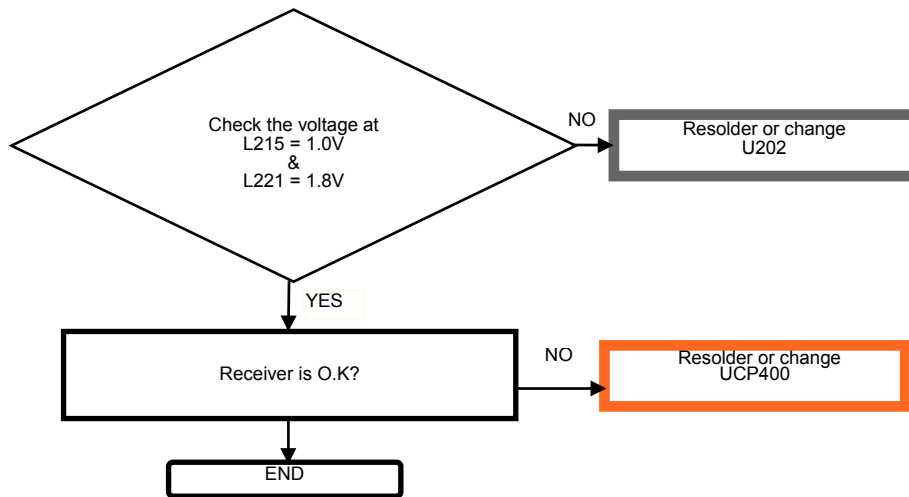


8. Level 3 Repair

8-4-27. LTE B40 RX

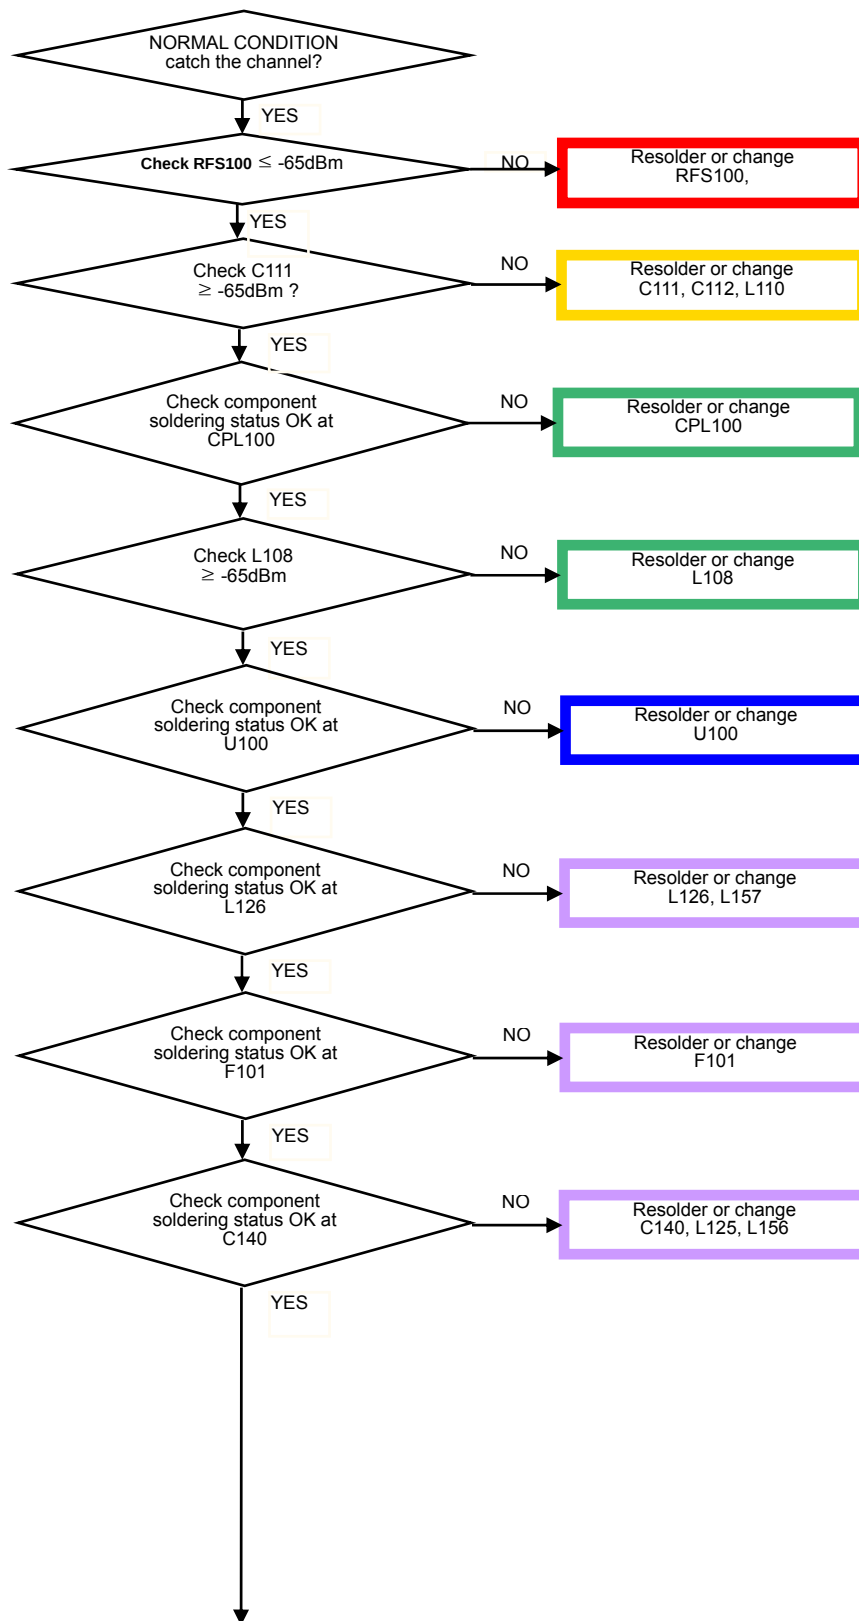


8. Level 3 Repair

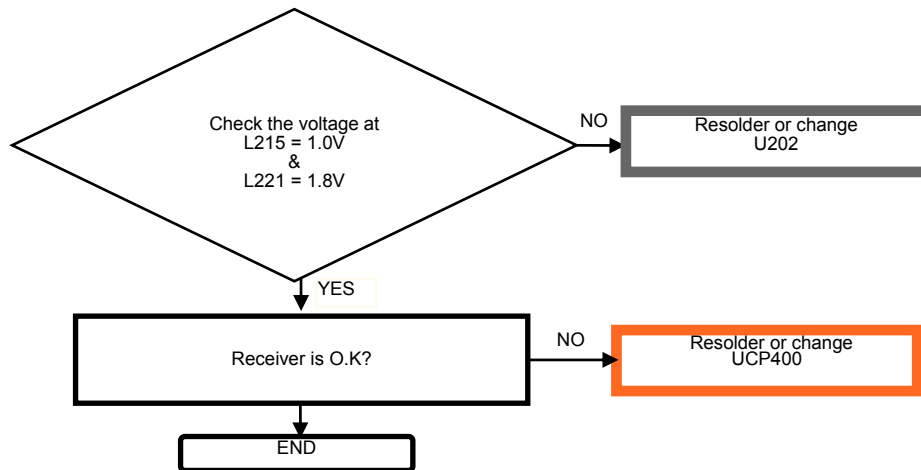


8. Level 3 Repair

8-4-28. GSM850, GSM900 TX

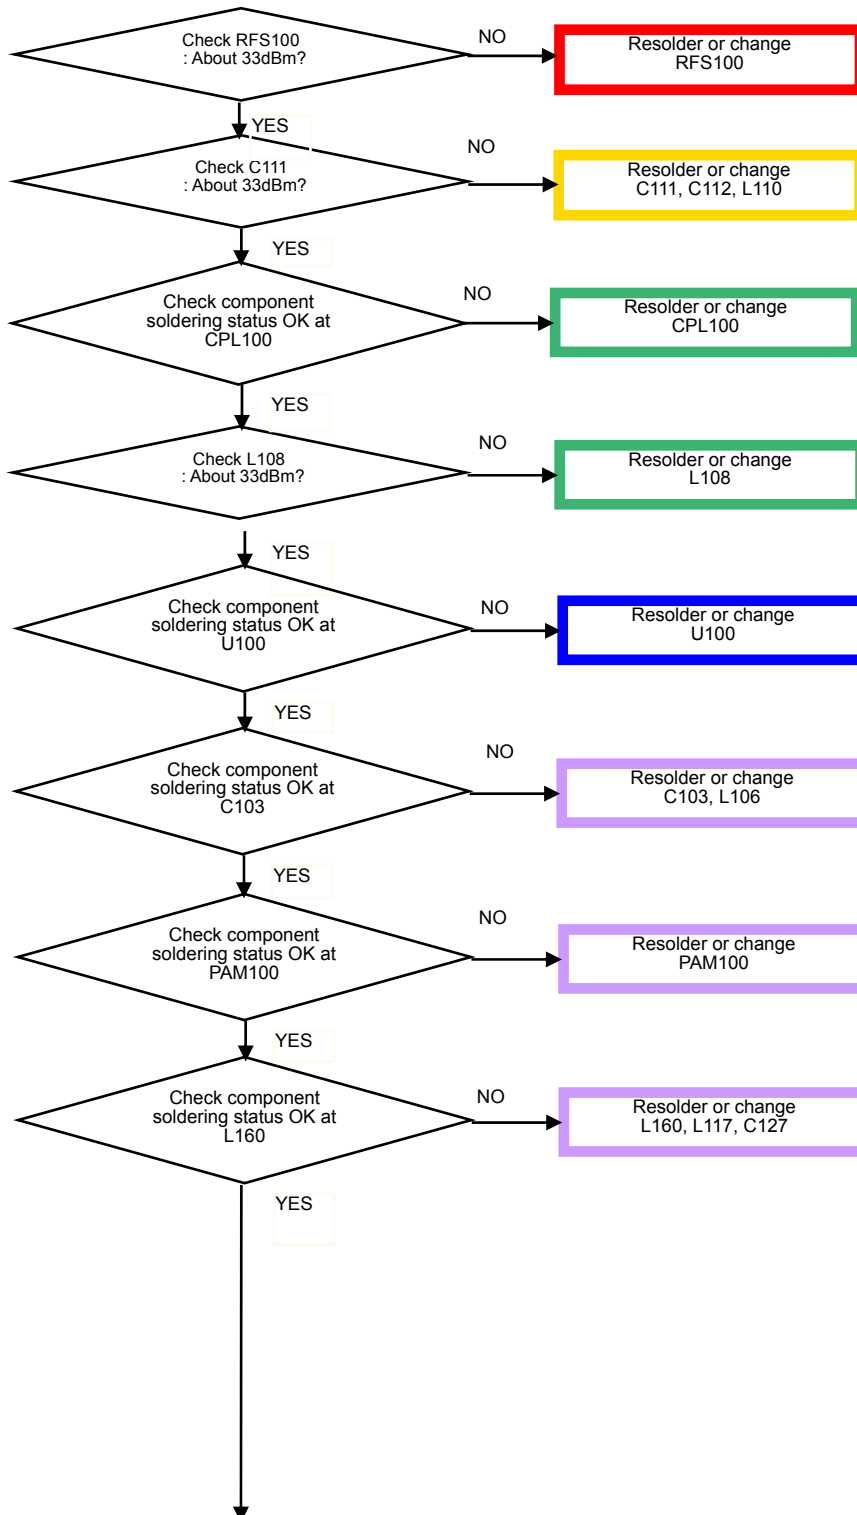


8. Level 3 Repair

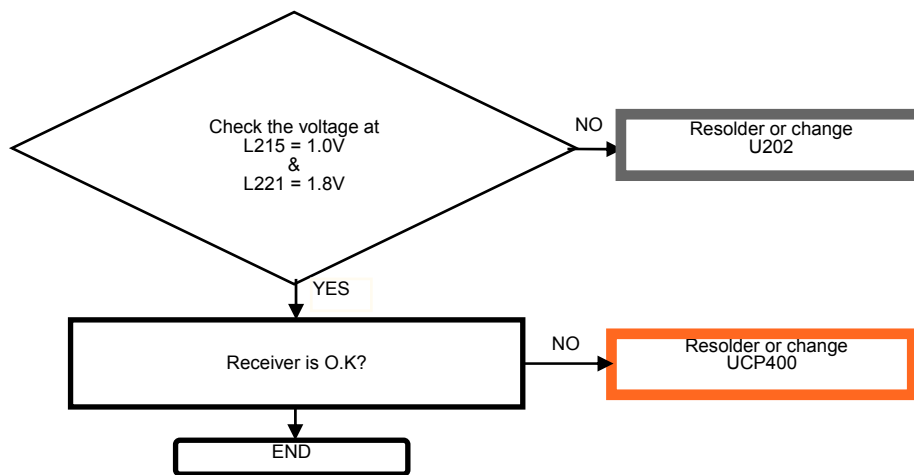


8. Level 3 Repair

8-4-29. DCS1800 / PCS1900 TX

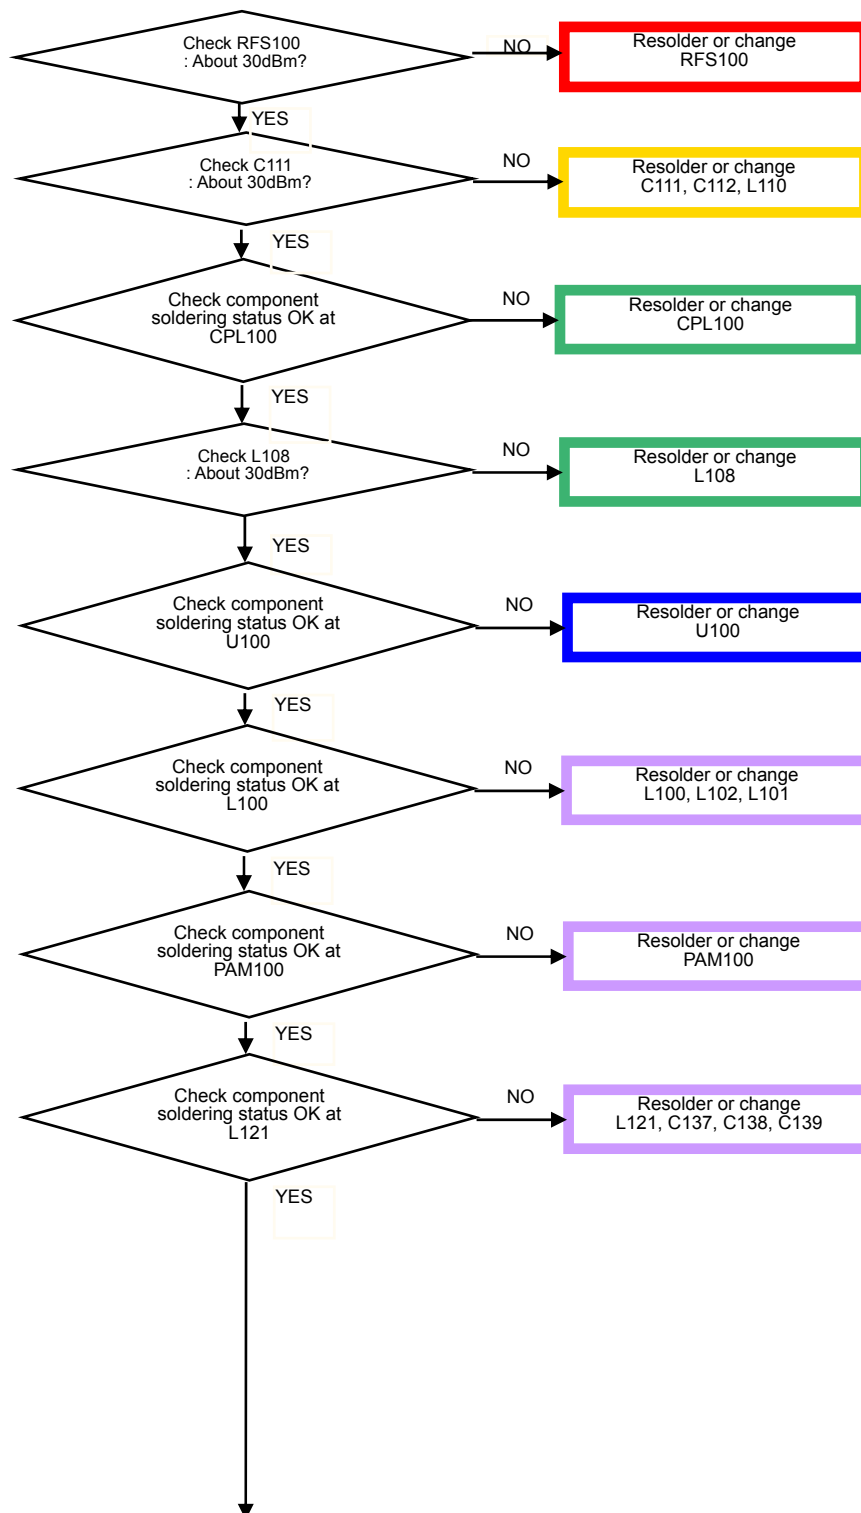


8. Level 3 Repair

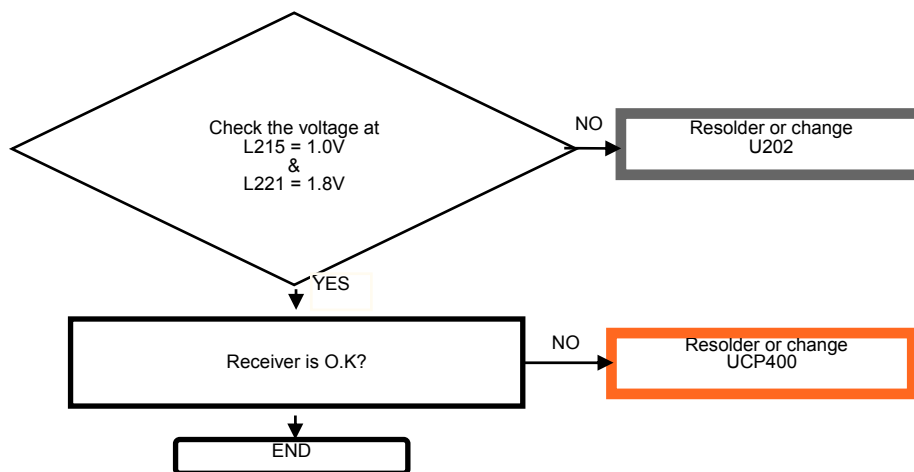


8. Level 3 Repair

8-4-30. WCDMA B1 / LTE B1 TX

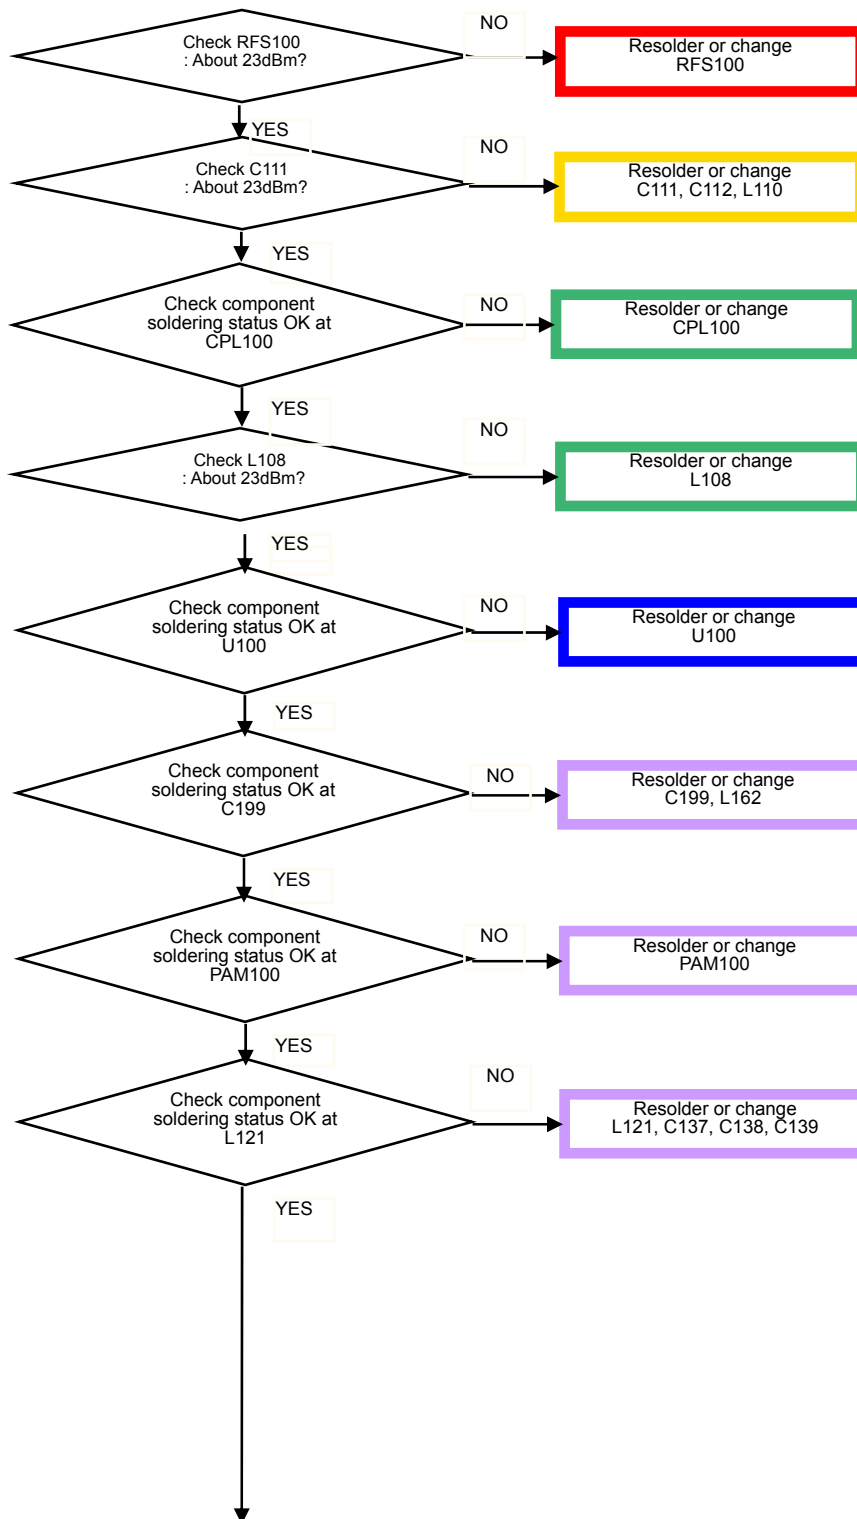


8. Level 3 Repair

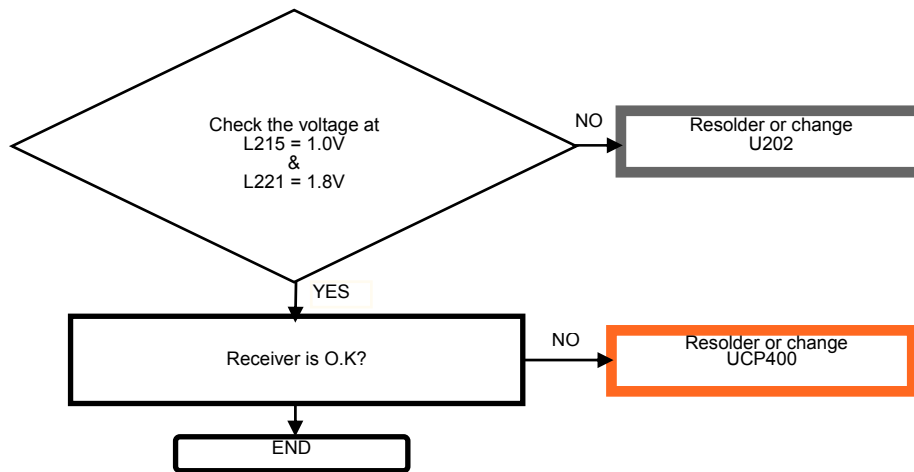


8. Level 3 Repair

8-4-31. WCDMA B2 TX

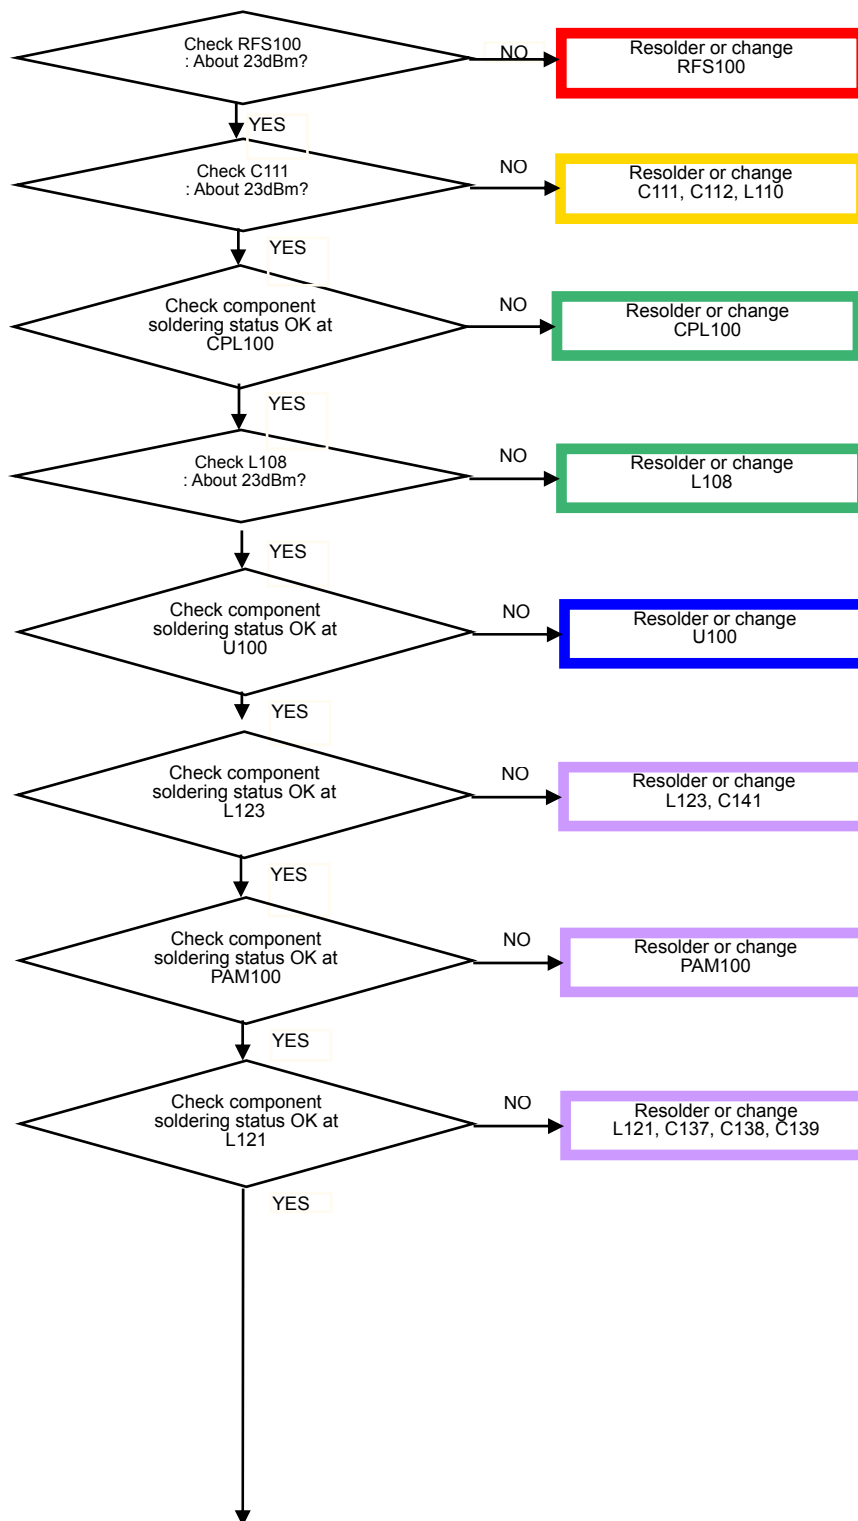


8. Level 3 Repair

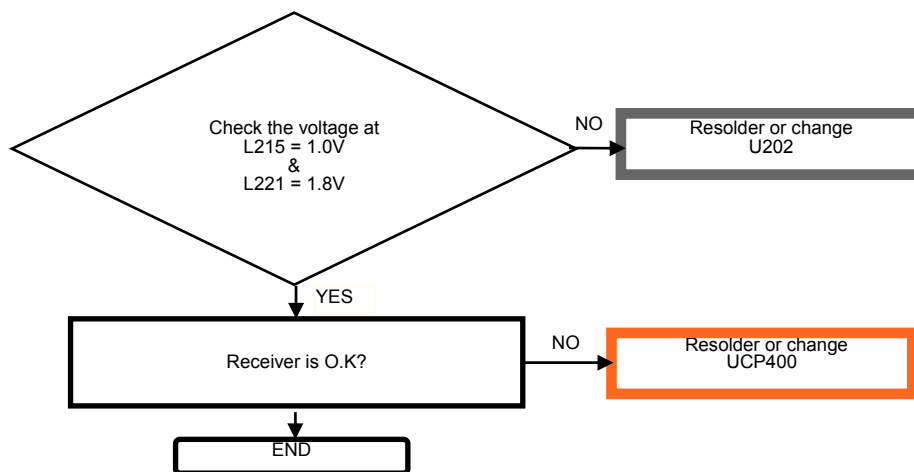


8. Level 3 Repair

8-4-32. LTE B3 TX

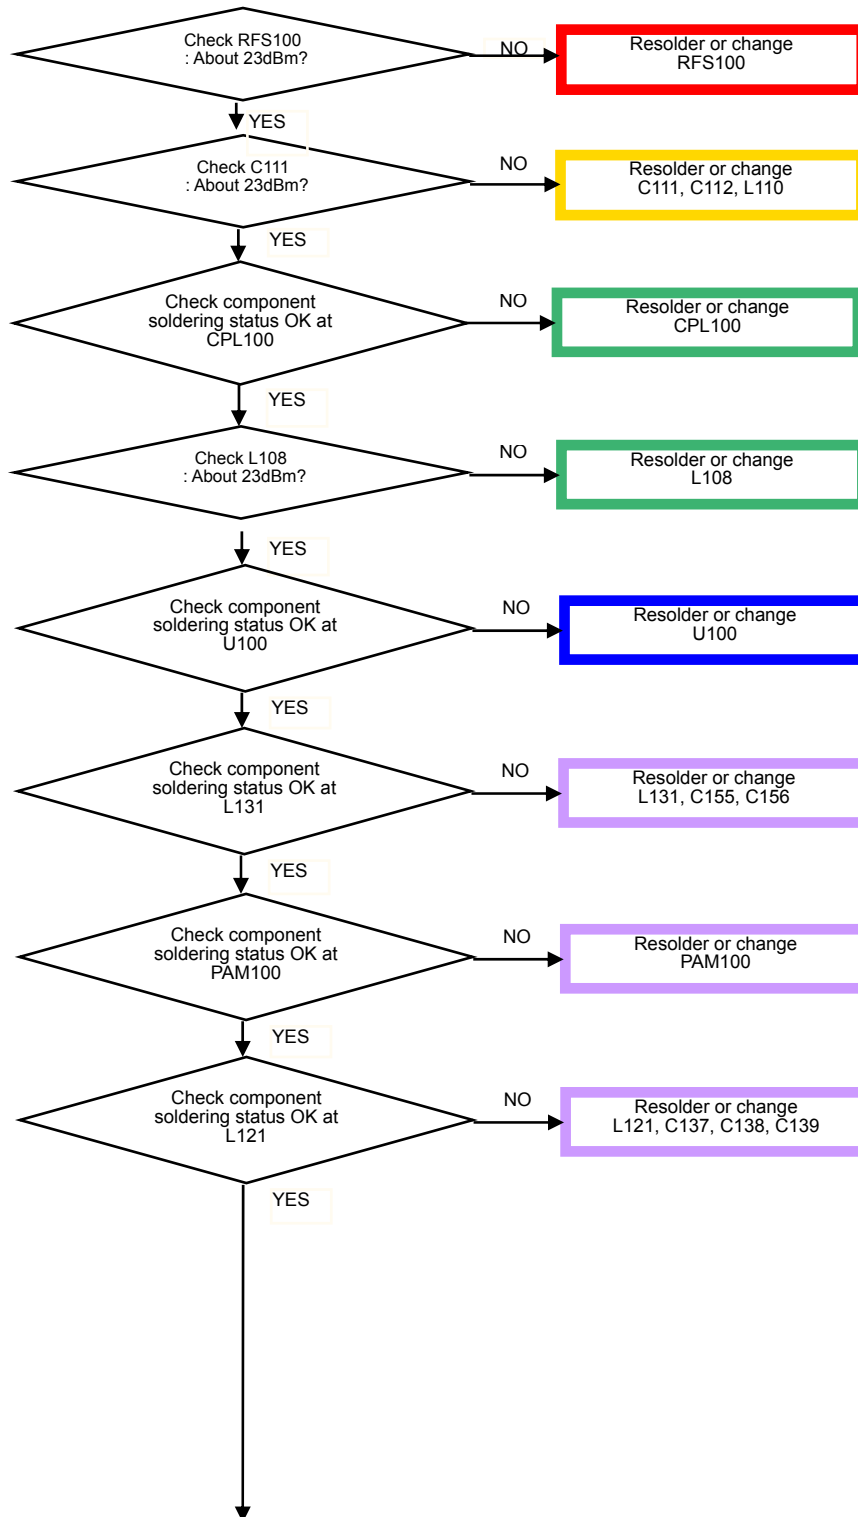


8. Level 3 Repair

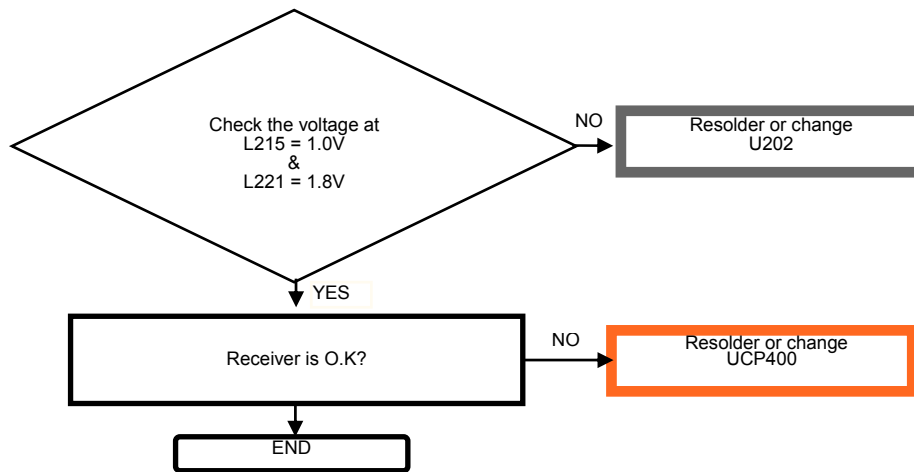


8. Level 3 Repair

8-4-33. WCDMA B5 / LTE B5 TX

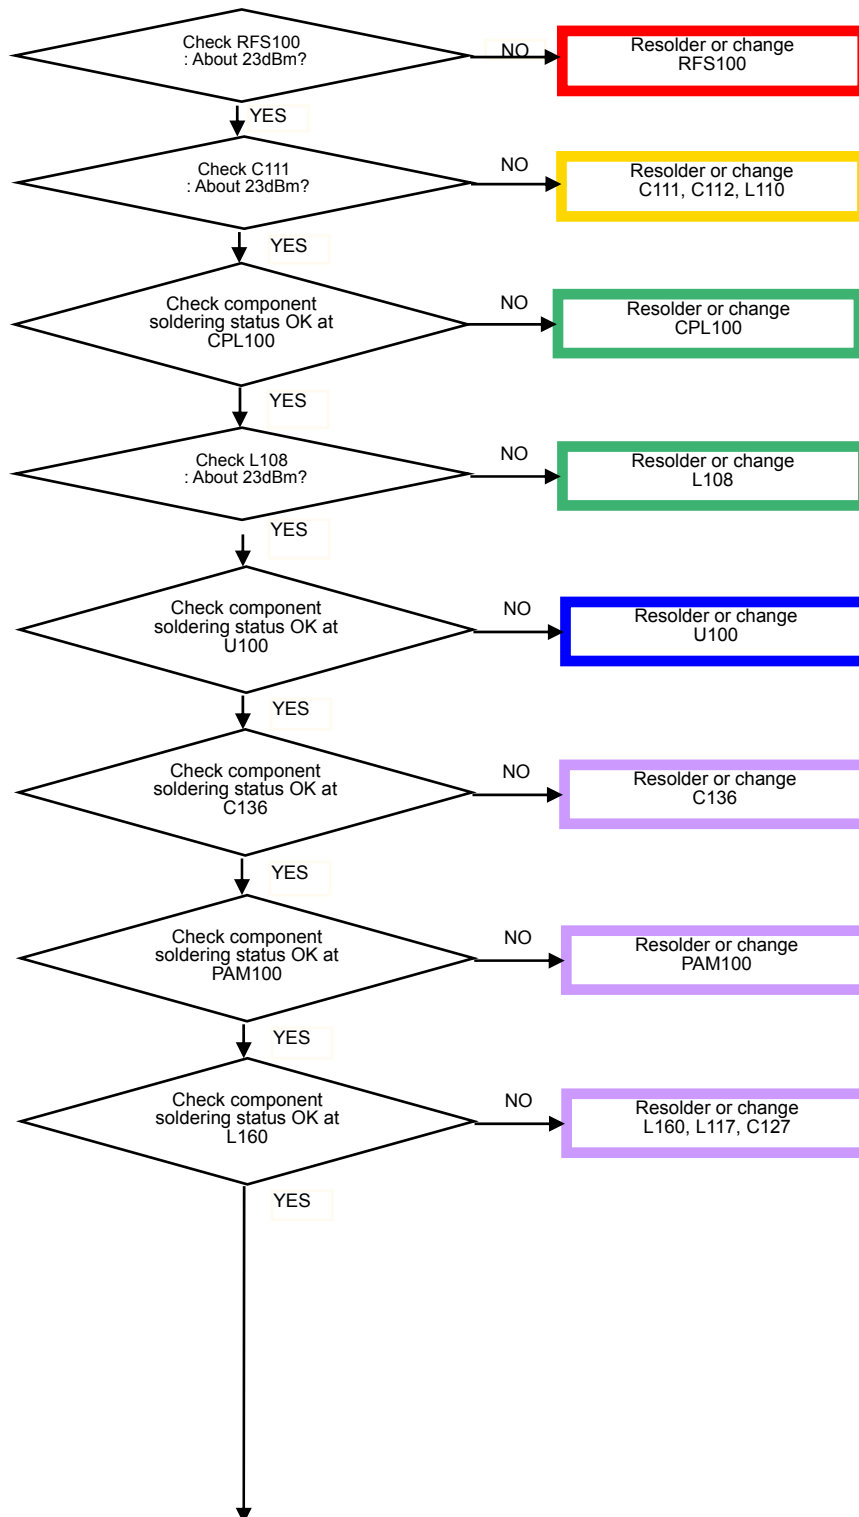


8. Level 3 Repair

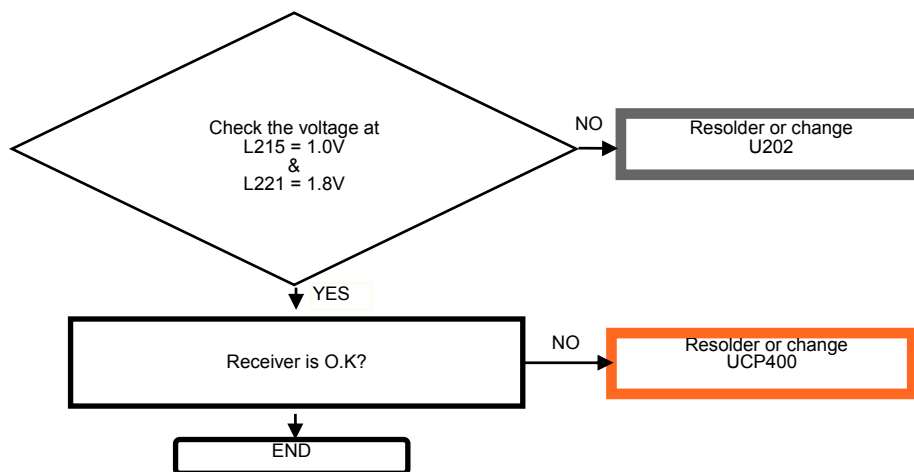


8. Level 3 Repair

8-4-34. WCDMA B8 / LTE B8 TX

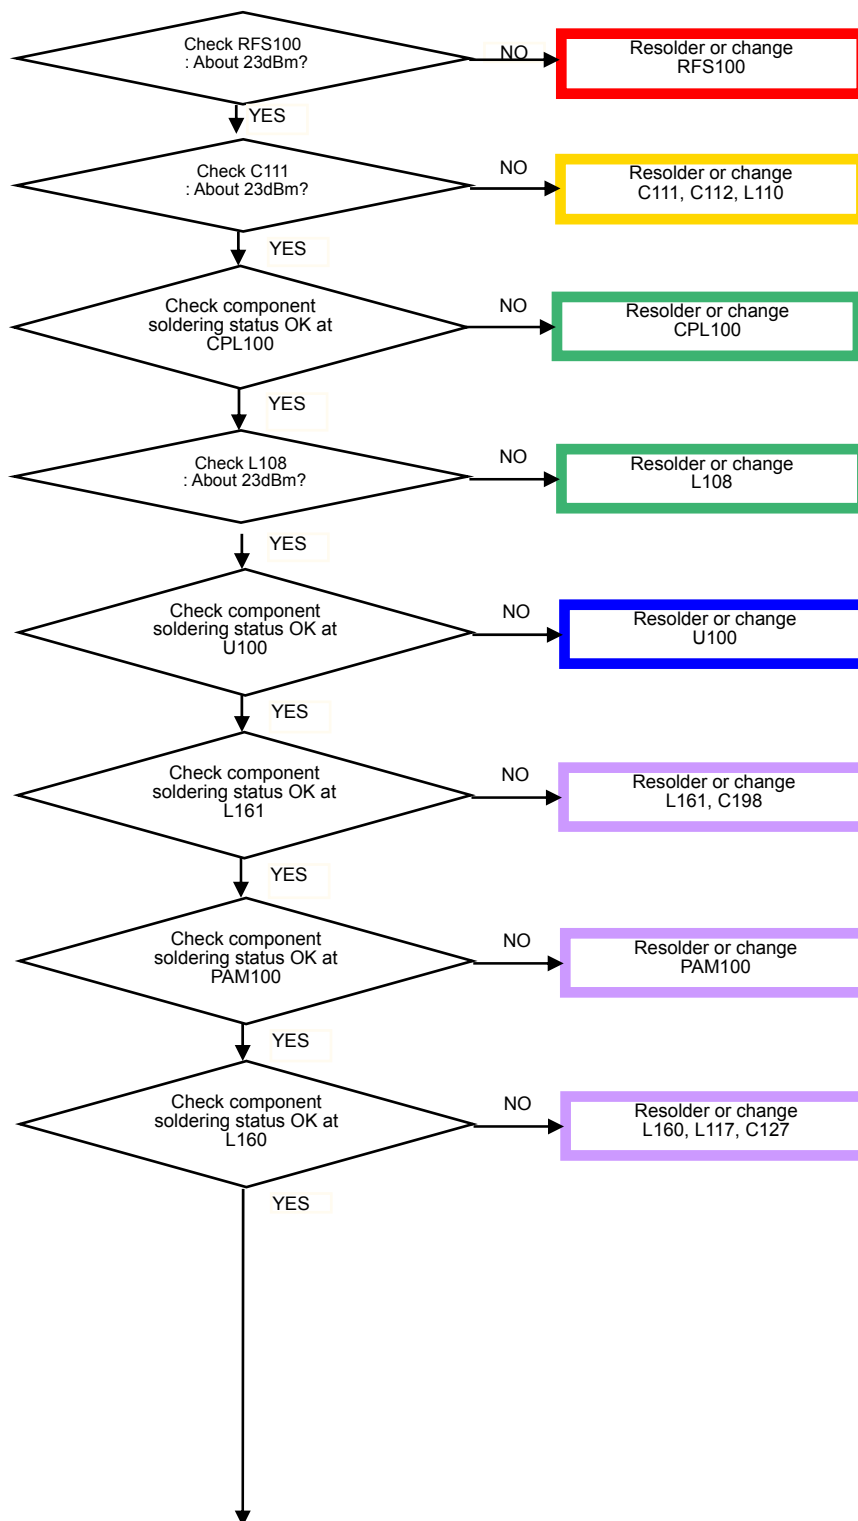


8. Level 3 Repair

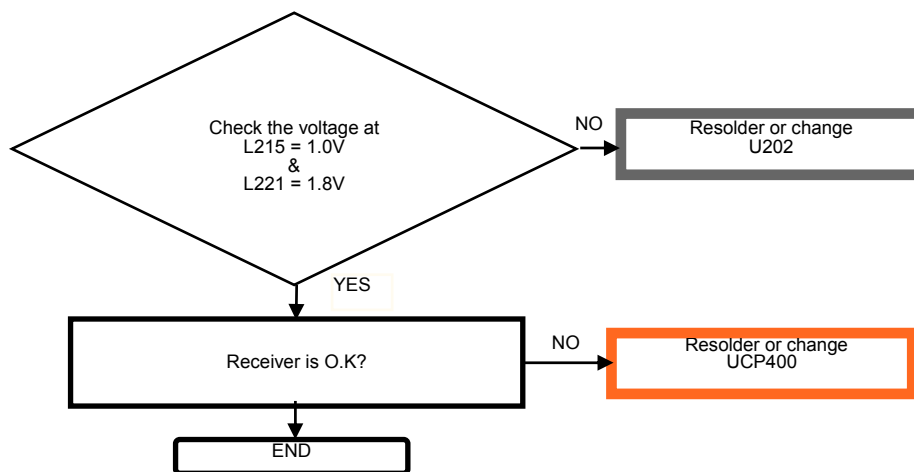


8. Level 3 Repair

8-4-35. LTE B20 TX

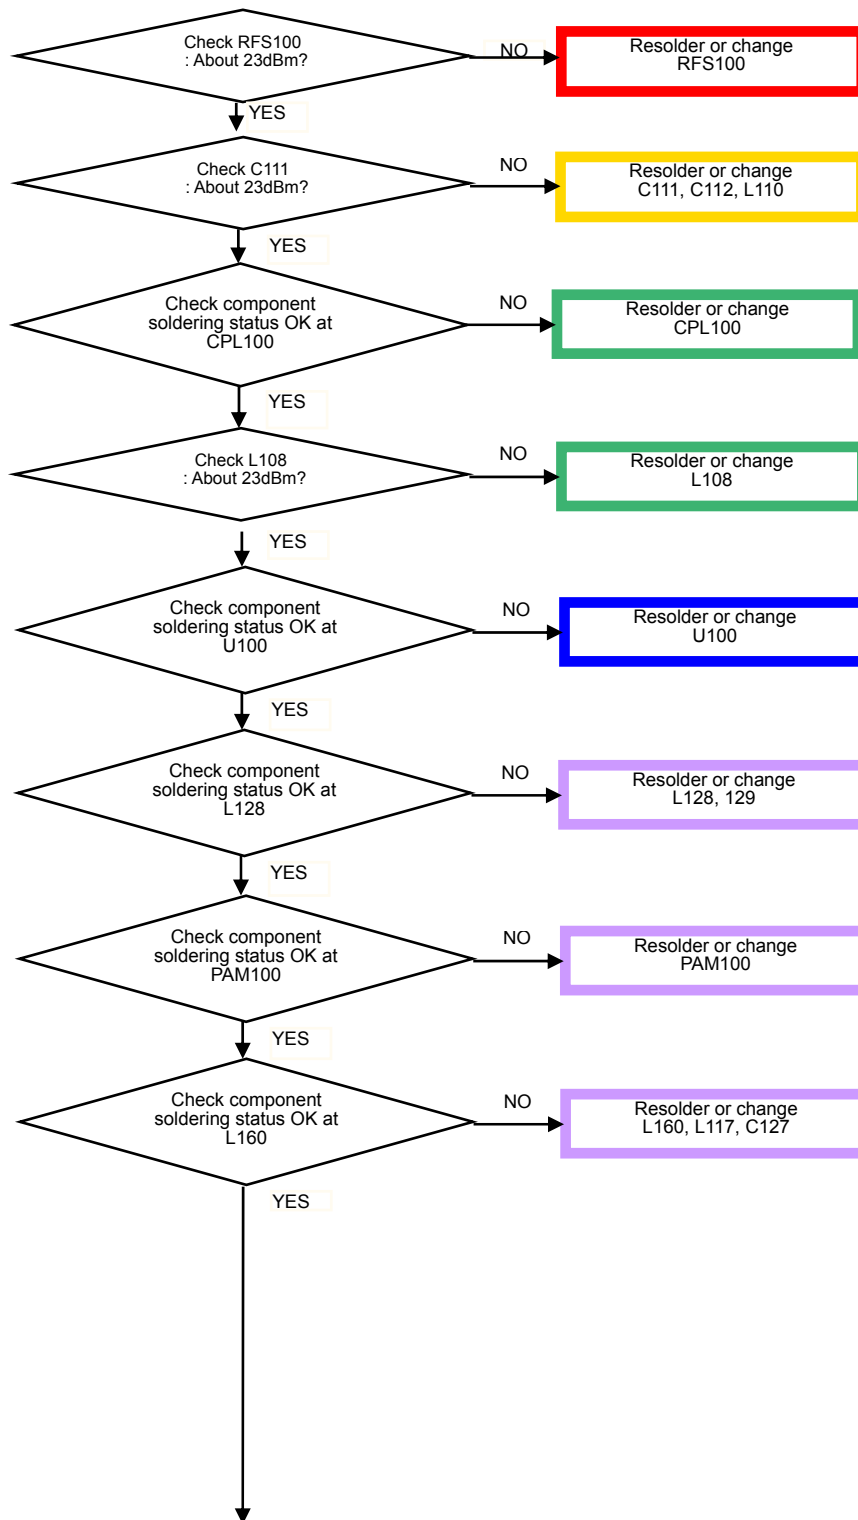


8. Level 3 Repair

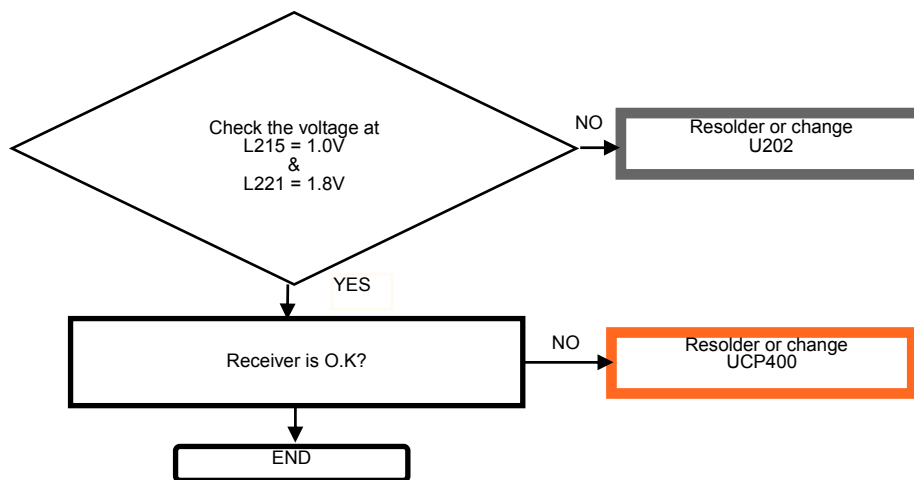


8. Level 3 Repair

8-4-36. LTE B7 TX

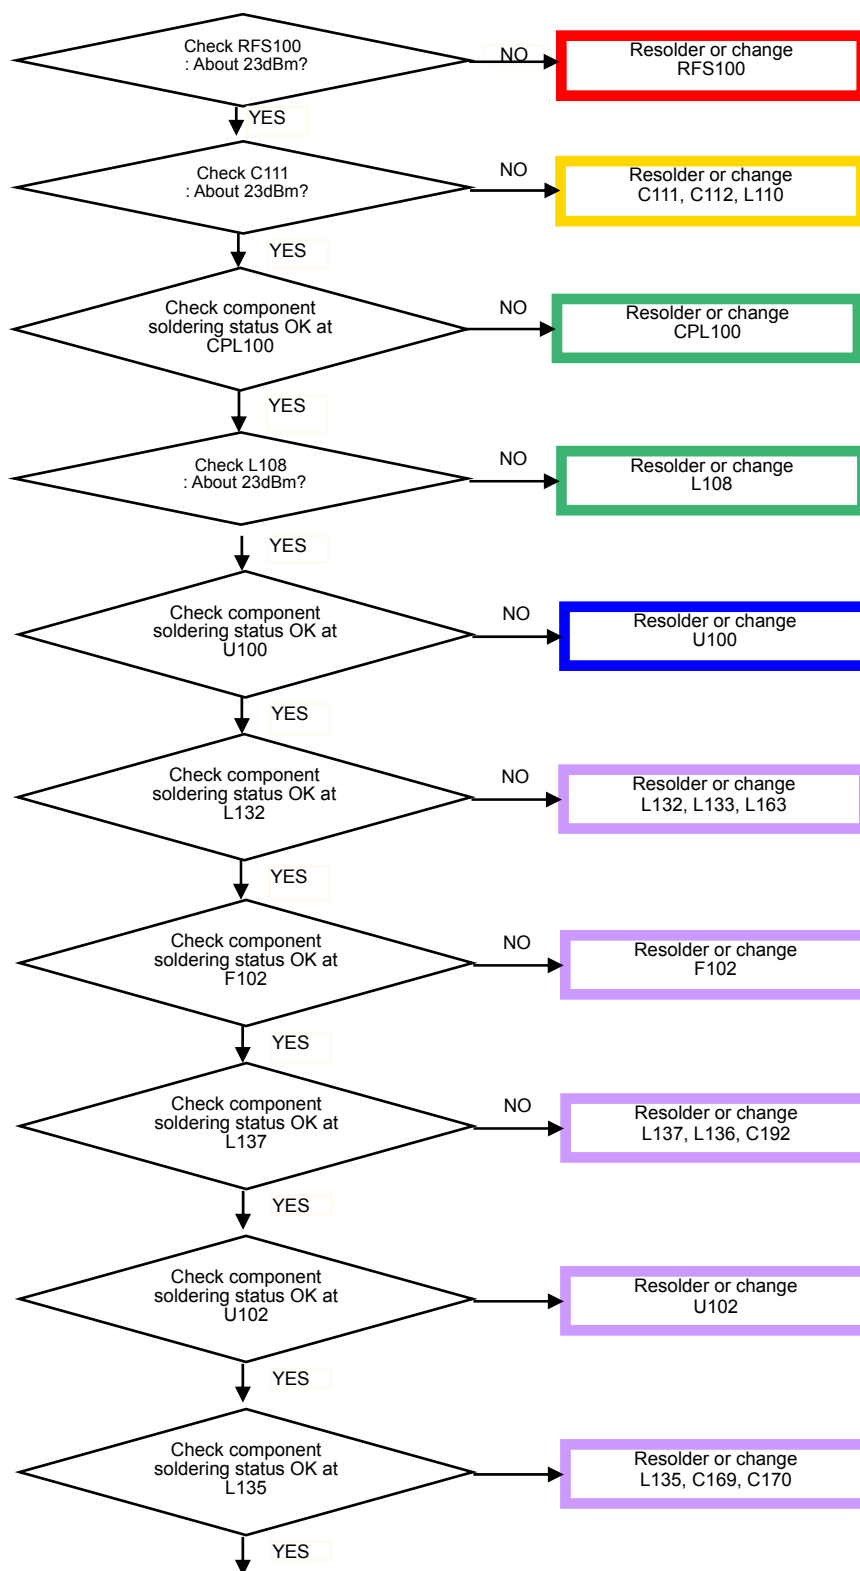


8. Level 3 Repair

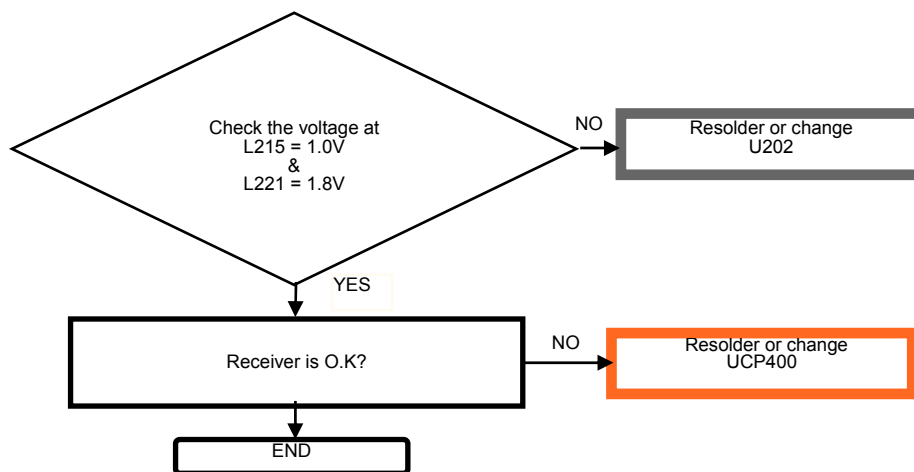

8. Level 3 Repair

8-4-37. LTE B40 TX

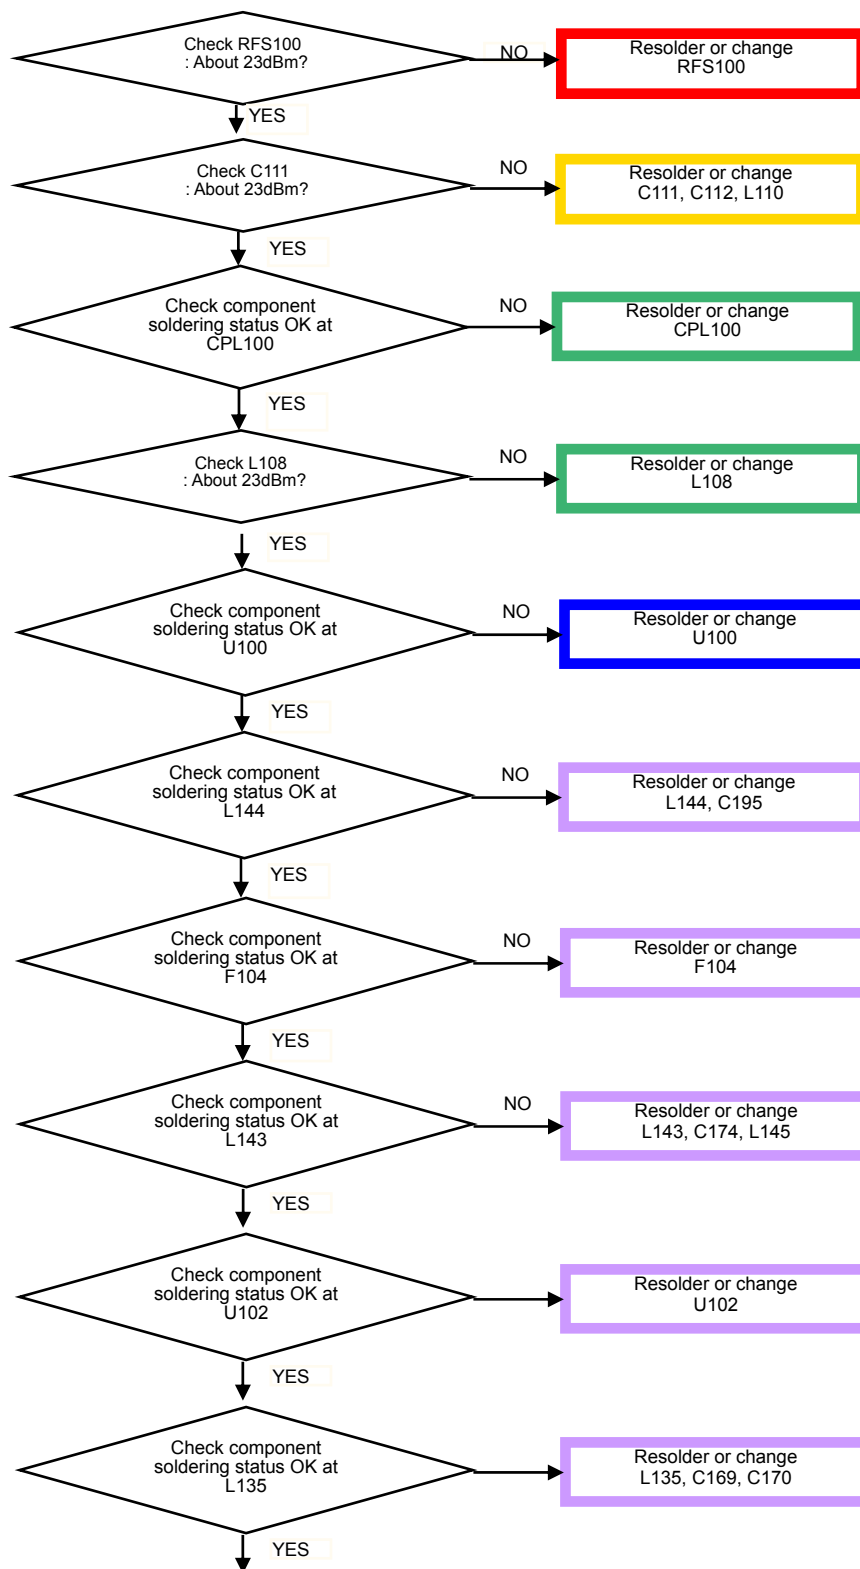

8. Level 3 Repair

